

Philips 3000 series
DVD player



DVP3650

Enjoy it all - from DVD

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- 192kHz/24 bit audio DAC enhances analogue sound input

Play all your movies and music

- ProReader Drive for smooth playback on virtually any disc
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, WMA and JPEG digital camera photos

Fits any space, any lifestyle

- Ultra-slim design that fits anywhere

Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

PHILIPS


Highlights

ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.


12-bit/108MHz video processing

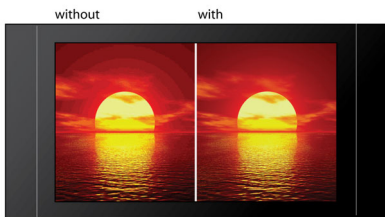

12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of

colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

192kHz/24 bit audio DAC

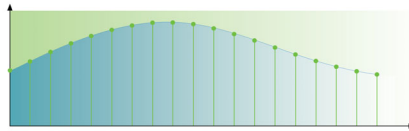


192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Ultra-slim design



Ultra-slim design that fits anywhere

Plays it all

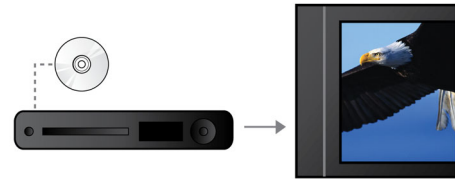


Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.

Plays it all

Play MP3s, WMA and JPEGs, and experience the convenience of sharing media files on your TV or home theater system - in the comfort of your living room.

USB Media Link

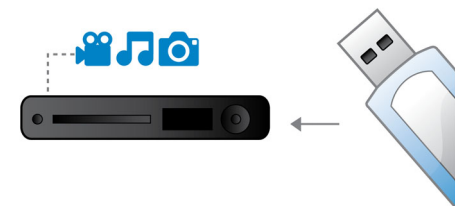

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.



Specifications

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 100
- Distortion and Noise (1kHz): 85 dB
- Crosstalk (1kHz): 100 dB
- Dynamic Range (1kHz): 90 dB
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, PCM, WMA

Still Picture Playback

- Picture Enhancement: Flip photos, Rotate, Slideshow with MP3 playback, Zoom
- Compression format: JPEG

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, divx, mpeg, mpg

Connectivity

- Front Connections: USB 2.0
- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, Component Video out Progressive

Multimedia Applications

- Multimedia connections: USB memory class device

Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English

Power

- Power consumption: < 10 W
- Standby power consumption: < 0.5 W
- Power supply: 110-240V, 50/60 Hz

Accessories

- Included accessories: AAA Battery (x1), Audio/Video cable, Power cord, Remote Control, Quick start guide, User Manual, World Wide Warranty leaflet, Warranty Leaflet

Dimensions

- Product (W x H x D): 310 x 39 x 209 mm
- Product weight: 1.3 kg
- Packaging (W x H x D): 360 x 80 x 282 mm
- Weight incl. Packaging: 1.8 kg



Issue date 2015-03-24

Version: 1.2.3

12 NC: 8670 000 94799
EAN: 87 12581 65890 8

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com