Register your product and get support at

www.philips.com/welcome

HTS3510 HTS3520



PHILIPS


Contents

1	Notice Copyright Compliance Mains fuse (UK only) Trademarks	2 2 2 2 2
2	Important Safety Product care Disposal of your old product and batteries	3 3 4 4
3	Your home theater Main unit Remote control	5 5 5
4	Connect your home theater Connectors Connect to the TV Connect audio from TV or other devices	7 7 7 8
5	Use your home theater Before you start Choose your sound Play a disc Play from a USB storage device More play features for disc or USB Play from radio Play audio from TV or other devices Create MP3 audio files	8 8 9 10 10 10 11 11
6	Change settings Access the setup menu	12 12
	Change general settings Change audio settings Change video settings Change preference settings	12 12 13 13

8	Product specifications	14
9	Troubleshooting	16
10	Index	17

1 Notice

Copyright



This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Copyright in the UK

Recording and playback of material may require consent. See Copyright Act 1956 and The Performers Protection Acts 1958 to 1972.

Compliance



This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC (Low Voltage), 2004/108/EC (EMC).

Mains fuse (UK only)

This product is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

- 1 Remove fuse cover and fuse.
- The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.
- **3** Refit the fuse cover.



Note

• To conform with the EMC directive (2004/108/EC), the mains plug on this product must not be detached from the mains cord.

Trademarks



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.





DivX®, DivX Certified® and associated logos are registered trademarks of DivX, Inc. and are used under license.

DivX Ultra® Certified to play DivX® video with advanced features and premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified ® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/ or other countries.



HDMI, and HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.



2 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the home theater!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.

- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.

Risk of overheating!

 Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

Product care

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.




Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

3 Your home theater


Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.

Main unit



- 1 Disc compartment
- (2) ≜ (Open/Close) Opens or closes the disc compartment.
- (3) ►II (Play/Pause)
 Starts, pauses or resumes play.
- (4) (Stop)
 - Stops play.
 - In radio mode, erases the current preset radio station.
- (5) O (Standby-On)
 Switches the home theater on or to standby.
- (6) SOURCE
 Selects an audio/video source for the home theater.
- (7) **|⊲**/**▶**|
 - Skips to the previous or next track, chapter or file.
 - In radio mode, selects a preset radio station.
- 8 Display panel
- 9 Volume control wheel

Remote control

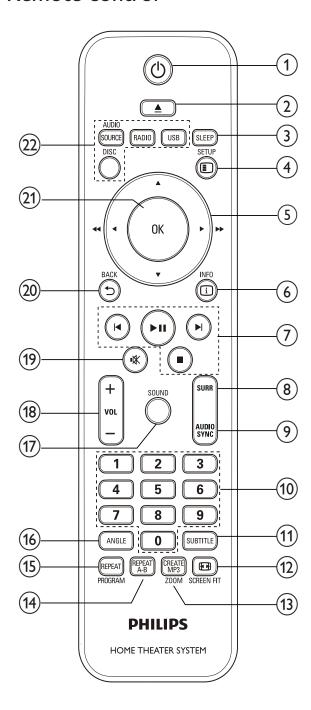

- ① (Standby-On)
 Switches the home theater on or to standby.
- ② ≜ OPEN/CLOSE Opens or closes the disc compartment.
- 3 SLEEP
 Switches the home theater to standby after the preset time selected.
- 4 E SETUP

 Accesses or exits the setup menu.

(5) **▲▼♦►** (Navigation buttons)

- Navigate menus.
- In video mode, press left or right to fast backward or fast forward.
- In radio mode, press left or right to search a radio station; press up or down to fine tune a radio frequency.

(6) **(1)** INFO

Displays information about what is playing.

7 Playback buttons Control playback.

(8) SURR (Surround Sound)

Switches to surround sound or stereo sound.

(9) AUDIO SYNC

- Selects an audio language or channel.
- Press and hold to synchronize audio with video. Use with +/-.

(10) Numeric buttons

Selects an item to play.

(11) SUBTITLE

Selects subtitle language for video.

(12) ED SCREEN FIT

Fits the picture format to the TV screen.

(13) CREATE MP3/ZOOM

- Accesses the menu to create MP3.
- Zooms into a video scene or picture.

(14) REPEAT A-B

Marks two points within a chapter or track for repeat play, or turns off repeat mode.

(15) REPEAT / PROGRAM

- Selects a repeat or shuffle mode.
- In radio mode, programs radio stations.

(16) ANGLE

Displays options for different camera angles.

(17) SOUND

Selects a sound mode.

(18) VOL +/-

Increases or decreases volume.

(19) **□** (Mute)

Mutes or restores volume.

(20) **→** BACK

Returns to a previous menu screen.

(21) OK

Confirms an entry or selection.

(22) Source buttons

- AUDIO SOURCE: Selects an audio input source.
- **RADIO**: Switches to FM radio.
- **USB**: Switches to USB storage device.
- **DISC**: Switches to disc source.

4 Connect your home theater

This section helps you connect your home theater to a TV and other devices. The basic connections of the home theater with its accessories are provided in the Quick Start. For a comprehensive interactive guide, see www.connectivityguide. philips.com.




Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all devices are disconnected from the power outlet.

Connectors


Side connectors



1 •← (USB)

Audio, video or picture input from a USB storage device.

Back connectors



- 1 AC MAINS~ Connects to the power supply.
- 2 SPEAKERS

 Connects to the supplied speakers and subwoofer.
- 3 SCART TO TV
 Connects to the scart input on the TV.

- 4 HDMI OUT
 Connects to the HDMI input on the TV.
- (5) VIDEO OUT

 Connects to the composite video input on the TV.
- 6 AUDIO IN-AUX Connects to the analog audio output on the TV or an analog device.
- (7) FM ANTENNA

 Connects the FM antenna for radio reception.

Connect to the TV

Connect your home theater directly to a TV through one of the following connectors (from highest to basic quality video):

- (1) HDMI
- 2 SCART
- 3 Composite video


Option 1: Connect to the TV through HDMI



Note


• If the HDTV has a DVI connector, connect using an HDMI/DVI adapter.

(Cable not supplied)

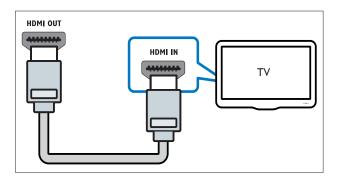

Option 2: Connect to the TV through Scart

(Cable not supplied)

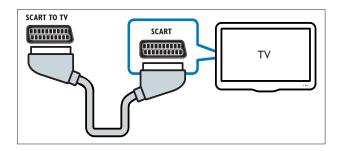


Option 3: Connect to the TV through composite video (CVBS)



Note

 The composite video cable or connector might be labeled AV IN, VIDEO IN, COMPOSITE or BASEBAND.

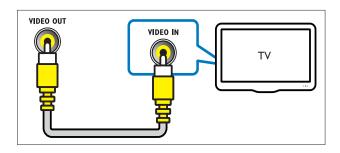


Connect audio from TV or other devices

Use your home theater to play audio from the TV or other device such as a cable box.



Tip

• Press **AUDIO SOURCE** to select the audio output of your connection.

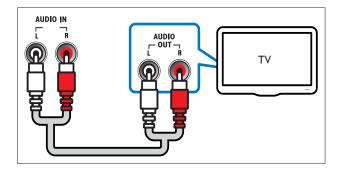

5 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

Before you start

Check that you:


- Make the necessary connections and complete the setup as described in the Quick Start.
- Switch the TV to the correct source for the home theater.

Choose your sound

This section helps you choose the ideal sound for your video or music.

Change sound mode

Select predefined sound modes to suit your video or music.




Press **SOUND** repeatedly to cycle through the available sound modes.

Sound mode	Description
ACTION / ROCK	Enhanced low and high-range. Ideal for action movies and rock or pop music.
DRAMA / JAZZ	Clear mid and high-range. Ideal for drama movies and jazz music.
CONCERT/ CLASSIC	Neutral sound. Ideal for live concerts and classical music.
SPORTS	Moderate mid-range and surround effects for clear vocals and the atmosphere of a live sport venue.
NIGHT	Dynamically controlled sound mode suitable for watching movies at night or for nonintrusive background music.

Change surround sound mode

Experience an immersive audio experience with surround sound modes.



Press **SURR** repeatedly to cycle through the available surround modes.

Option	Description	
MULTI- CHANNEL	Immersive multi-channel sound for an enhanced movie experience.	
STEREO Two-channel stereo sound. for listening to music.		

Play a disc

The home theater can play a wide variety of discs, including video, audio and mixed media (for example, a CD-R that contains JPEG pictures and MP3 music).

1 Insert a disc into the home theater.

2 Press DISC.

→ The disc plays or the disc main menu appears.

3 Press the following buttons to control play:

Button	Action
Dutton	Action
Navigation	Navigate menus.
buttons	
OK	Confirms an entry or selection.
►II	Starts, pauses or resumes play.
	Stops play.
	Skips to the previous or next
	track, chapter or file.
44 / >>	Fast backwards or fast forwards.
	Press repeatedly to change the
	search speed.
ZOOM	Zooms into a video scene or picture.
REPEAT A-B	Marks two points within a
	chapter or track for repeat play,
	or turns off repeat mode.
© SCREEN	Fits the picture format to the TV
FIT	screen.

Use video options

Access several useful features while viewing video.



Note

• Available video options depend on the video source.

Button	Action
A / V	Searches slow-backward or slow-forward. Press repeatedly to change the search speed. For VCD/SVCD, slow-backward search is not available.
AUDIO SYNC	Selects an audio language or channel.
SUBTITLE	Selects subtitle language for video.
1 INFO	Displays information about what is playing.
REPEAT	Repeats a chapter or title.
ANGLE	Displays options for different camera angles.

Use picture options

Access several useful features while viewing pictures.

Button	Action
▲/▼	Rotates the picture counter- clockwise or clockwise.
◄ /▶	Skips to the previous or next picture.
REPEAT	Repeats a single file in the folder or repeats the entire folder. Shuffles files in a folder.
① INFO	Displays photo albums in a thumbnail overview.

Use audio options

Access several useful features while audio is played.

Button	Action	
REPEAT	Repeats a track, the entire disc	
	or shuffle tracks.	

Play from a USB storage device

The home theater is fitted with a USB connector that allows you to view pictures, listen to music or watch movies stored on a USB storage device.

- 1 Connect the USB storage device to the home theater.
- 2 Press USB.
 - → A content browser appears.
- Select a file, then press **OK**.

 Press the playback buttons to control play (see 'Play a disc' on page 9).



Note

- If the USB storage device does not fit into the connector, use a USB extension cable.
- The home theater does not support digital cameras that need a computer program to display photos.
- The USB storage device must be FAT or DOSformatted, and Mass Storage Class compliant.

More play features for disc or USB

Several advanced features are available for video or picture playback from a disc or USB storage device.

Play a musical slideshow

Play music and pictures simultaneously to create a musical slideshow. The files must be stored on the same disc or USB storage device.

- 1 Select a music track, then press **OK**.
- 2 Press SACK and go to the picture folder.
- 3 Select a picture, then press **OK** to start slideshow.
- **4** Press to stop slideshow.
- 5 Press again to stop music.

Synchronize audio with video

If the audio and video are not synchronized, you can delay the audio to match the video.

- 1 Press and hold AUDIO SYNC until the audio sync message appears on the display panel.
- 2 Press +/- within five seconds to sync the audio with your video.

Quick skip play to a specific time

Quick skip to a specific part of a video by entering the time of a scene.

- 1 During video play, press 🛈 INFO.
- Press the Navigation buttons and OK to select:
 - **[TT Time]** : Title time.
 - [Ch Time] : Chapter time.
 - [Disc Time] : Disc time.
 - **[Track Time]**: Track time.
- 3 Enter the time of the scene, then press **OK**.

Play from radio

The home theater can store up to 40 radio stations.

- 1 Check that the FM antenna is connected.
- 2 Press RADIO.
 - "AUTO INSTALL...PRESS PLAY" appears on the display panel if you have not installed any radio stations. Press ▶■■.
- 3 Press the following buttons to control play:

Button	Action
I ◀ / ▶ I	Selects a preset radio station.
44 / >>	Searches for a radio station.
	Fine tunes a radio frequency.
•	Press and hold to erase the preset radio station. Press to stop the installation of radio stations.
PROGRAM	Manual: Press once to access program mode, and press again to store the radio station. Automatic: Press and hold for five seconds to reinstall radio stations.



Note

- AM and digital radio are not supported.
- If no stereo signal is detected, or if fewer than five stations are found, you are prompted to install the radio stations again.
- For the best reception, place the antenna away from the TV or other sources of radiation.

Play audio from TV or other devices

Press **AUDIO SOURCE** repeatedly to select the audio output of the connected device.

Create MP3 audio files

Use the home theater to convert audio CDs into MP3 audio files.

- 1 Insert an audio CD (CDDA/HDCD) into the home theater.
- 2 Connect a USB storage device to the home theater.
- When audio is played, press CREATE MP3.
- 4 Select [Yes] and press OK to confirm.

Г	CREATE MP3			
	OPTI	ONS	TRA	CK
	Speed	Normal	O Track01	04:14
	Bitrate	128kbps	O Track02	04:17
	CRT ID3	Yes	O Track03	03:58
			O Track04	04:51
	Device	USB1	O Track05	03:53
L	SUMMARY		O Track06	04:09
	Select Track 0		O Track07	04:38
	Time 00:00			•
	Start	Exit	Select All	Deselect All

- Select the settings in the [OPTIONS] panel, then press OK.
 - **[Speed]**: Selects the write-to-file speed.
 - [Bitrate] : Selects the conversion quality.
 - [CRT ID3]: Copies information on the tracks in the MP3 files.
 - **[Device]** : Selects the USB device which you use to store the MP3 files.
- 6 Press ▶ to access the [TRACK] panel.
 - Select an audio track, then press **OK**.
 - [Select All] : Selects all tracks.
 - [Deselect all]: De-selects all tracks.

- 8 Select [Start] in the menu to convert, then press OK.
 - A new folder is created in the USB storage device to store all the new MP3 audio files.
 - To exit the menu, select **[Exit]** and press **OK**.



Note

- During the conversion process, do not press any buttons.
- DTS CDs and copy-protected CDs cannot be converted.
- Write-protected or password-protected USB storage device cannot be used to store MP3 files

6 Change settings

This section helps you to change the settings of your home theater.



Caution

• Most of the settings are already configured with the best value for the home theater.
Unless you have a specific reason to change a setting, it is best to leave it at the default value.

Access the setup menu

- 1 Press SETUP.
 - → The following menu appears.

Symbol	Description
*	[General Setup]
•4	[Audio Setup]
0	[Video Setup]
<u> </u>	[Preference Setup]

- 2 Select a setup menu, then press **OK**. See the following sections for information about how to change the settings of your home theater.
- Press → BACK to return to the previous menu, or press © SETUP to exit.



Note

You cannot change a setting that is grayed out.

Change general settings

Press 🗈 SETUP.

Select [General Setup], then press OK.

Select and adjust the following settings:

- [Disc Lock]: Restricts play to disc. Password (PIN code) is required to unlock the disc before play.
- [Display Dim] : Changes the brightness of the display panel.
- **[OSD Language]**: Selects the onscreen display menu language.
- [Screen Saver]: Enables or disables screen saver mode. If enabled, the screen enters idle mode after 10 minutes of inactivity (for example, in pause or stop mode).
- [Sleep Timer]: Sets a sleep timer to switch the home theater to standby after a specific time.
- [Auto Standby]: Enables or disables auto standby. If enabled, the home theater switches to standby after 30 minutes of inactivity (for example, in pause or stop mode).
- [DivX® VOD Code] : Displays the DivX VOD registration code for the home theater.
- 4 Press **OK** to confirm your choice.



Note

 Before you purchase DivX videos and play them on the home theater, register the home theater on www.divx.com using the DivX VOD code.

Change audio settings

1 Press © SETUP.

Select [Audio Setup], then press OK.

Select and adjust the following settings:

- [Speakers Volume]: Sets the volume of each speaker to obtain the ideal audio balance.
- [Speakers Delay]: Sets the delay time for center and rear speakers to obtain an equal audio transmission from all the speakers.

- **[HDMI Audio]**: Enables or disables HDMI audio output for the TV.
- [Audio Sync]: Sets a delay for audio output when you play a video disc.
- 4 Press **OK** to confirm your choice.



Note

• For settings related to HDMI, the TV must be connected through HDMI.

Change video settings

1 Press © SETUP.

Select [Video Setup], then press OK.

Select and adjust the following settings:

- **[TV System]**: Selects a TV system that is compatible with the TV.
- **[TV Display]**: Selects a picture display format to fit the TV screen.
- [Picture Settings] : Selects a predefined color setting.
- [HDMI Setup]: Selects HDMI video resolution and the wide screen display format for the TV. The Wide Screen Display option is only available for 16:9 wide screen TV display setting.
- **[HD JPEG]**: Enables or disables display of high definition JPEG images.
- 4 Press **OK** to confirm your choice.



Note

- The best setting is automatically selected for the TV. If you need to change the setting, ensure that the TV supports the new setting.
- Some video settings depend on the video source, ensure that the disc and the TV support the setting or feature.
- For settings related to HDMI, the TV must be connected through HDMI.

Change preference settings

1 Press SETUP.

Select [Preference Setup], then press OK.

3 Select and adjust the following settings:

- [Audio] : Selects audio language for video.
- **[Subtitle]** : Selects subtitle language for video.
- [Disc Menu] : Selects menu language for video disc.
- [Parental]: Restricts access to discs that are recorded with ratings. To play all discs irrespective of the rating, select level '8'.
- **[PBC]**: Displays or skips the content menu for VCD and SVCD discs.
- **[MP3/JPEG Display]** : Displays the MP3/JPEG folders or all the files.
- [Password]: Sets or changes a PIN code to play a restricted disc. Enter '0000' if you do not have a PIN or if you have forgotten your PIN.
- [DivX Subtitle]: Selects a character set that supports the DivX subtitle.
- **[Version Info.]** : Displays the software version for the home theater.
- **[Default]**: Resets the home theater to the default settings programmed at the factory.
- 4 Press **OK** to confirm your choice.



Note

- If your preferred disc language is not available, you can select **[Other]** from the list and enter the 4-digit language code which can be found at the back of this manual.
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.
- You cannot reset disc lock, password (PIN code) and parental control settings to their default values.

7 Update software

To check for new updates, compare the current software version of your home theater with the latest software version (if available) on the Philips web site.

Check software version

- 1 Press SETUP.
- Select [Preference Setup] > [Version Info.], then press OK.
 - → The software version is displayed.

Update software from a CD-R or USB

- 1 Check for the latest software version on www.philips.com/support.
 - Search for your model and click on 'software&drivers'.
- 2 Download the software onto a CD-R or USB storage device.
- Insert the CD-R or connect the USB storage device to the home theater.
- **4** Follow the instructions on the TV to confirm the update.
 - When complete, the home theater automatically switches off and on again.
 - If not, disconnect the power cord for a few seconds and then reconnect it.

Caution

• Do not turn off the power or remove the CD-R or USB storage device when the software update is in progress because you might damage the home theater.

8 Product specifications



Note

• Specification and design are subject to change without notice.

Region code

The type plate on the back or bottom of the home theater shows which regions it supports

Country	DVD
Europe, United Kingdom	
Asia Pacific, Taiwan, Korea	
Latin America	
Australia, New Zealand	
Russia, India	
China	

Playback media

DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture CD, MP3-CD, WMA-CD, DivX-CD, USB storage device

File Format

- Audio: .mp3, .wma
- Video: .divx, .divx ultra, .mpeg, .mpg, .wmv (simple profile)
- Picture: .jpeg, .jpg

Amplifier

- Total output power:
 - HTS3510: 300 W RMS (30% THD)
 - HTS3520: 600 W RMS (30% THD)
- Frequency response: 20 Hz-20 kHz / ±3dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
 - AUX: 2 V

Video

- Signal system: PAL / NTSC
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p

Audio

- Sampling frequency:
 - MP3: 32 kHz, 44.1 kHz, 48 kHz
 - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
 - MP3: 112 kbps 320 kbps
 - WMA: 48 kbps 192 kbps

Radio

- Tuning range: FM 87.5-108 MHz (50 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response: FM 180 Hz-10 kHz / ±6dB

USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: UMS (USB Mass Storage Class)
- File system: FAT12, FAT16, FAT32
- Maximum memory support: < 160GB

Main Unit

- Power supply: 220-240V; ~50 Hz
- Power consumption: 100 W
- Standby power consumption: ≤ 0.9 W
- Dimensions (WxHxD): 360 x 58 x 320 (mm)
- Weight: 2.84 kg

Subwoofer

- Impedance: 8 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Frequency response: 20 Hz-150 kHz
- Dimensions (WxHxD): 120 x 307 x 369 (mm)
- Weight: 3.84 kg
- Cable length: 4.3 m

Speakers

- System: full range satellite
- Speaker impedance: 8 ohm (center), 4 ohm (Front/Rear)
- Speaker drivers: 3" full range
- Frequency response: 150 Hz-20 kHz
- Dimensions (WxHxD):

HTS3510: $96 \times 162 \times 96$ (mm)

HTS3520:

- Center: $160.9 \times 95 \times 92 \text{ (mm)}$
- Front/Rear: 95 x 160.9 x 87 (mm)

• Weight:

HTS3510: 0.68 kg

HTS3520:

- Center: 0.77 kg
- Front/Rear: 0.56 kg/each
- Cable length:
 - Center: 3 m
 - Front: 4 m
 - Rear: 10 m

Laser specification

- Type: Semiconductor laser GaAlAs (CD)
- Wave length: 645 665 nm (DVD), 770 -800 nm (CD)
- Output power: 6 mW (DVD), 7 mW (VCD/CD)
- Beam divergence: 60 degrees.

15

9 Troubleshooting



Warning

• Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, register your product and get support at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of your product. The model number and serial number are on the back or bottom of your product. Write the numbers here:

Model No. ₋	
Serial No	

Main unit

The buttons on this home theater do not work.

 Disconnect the home theater from the power outlet for a few minutes, then reconnect.

Picture

No picture.

- Ensure that the TV is switched to the correct source for this home theater.
- If this happens when you change the TV system, switch to its default mode: 1) Press ▲. 2) Press ◀. 3) Press SUBTITLE.

No picture on HDMI connection.

- Check if the HDMI cable is faulty. Replace with a new HDMI cable.
- If this happens when you change the HDMI video resolution, switch to its default mode: 1) Press ▲. 2) Press ◄. 3) Press **ZOOM**.

Sound

No sound.

 Ensure that the audio cables are connected and select the correct input source (for example, AUDIO SOURCE) for the device you want to play.

No sound on HDMI connection.

- You might not hear any sound if the connected device is not HDCP (Highbandwidth Digital Content Protection) compliant or only DVI compatible. Use an analog or digital audio connection.
- Ensure that the [HDMI Audio] is enabled.

No sound from TV program.

 Connect an audio cable from the audio input on the home theater to the audio output on the TV, then press AUDIO SOURCE repeatedly to select the correct audio source.

Distorted sound or echo.

• Ensure that the TV volume is muted or set to minimum if you are playing audio through the home theater.

Audio and video are not synchronized.

• 1) Press and hold **AUDIO SYNC**. 2) Press +/- within five seconds.

Play

Disc cannot be played.

- Clean the disc.
- Ensure that the home theater supports the disc (see 'Product specifications' on page 14).
- Ensure that the home theater supports the region code of the DVD.
- For DVD±RW or DVD±R, ensure that the disc is finalized.

DivX video files cannot be played.

- Ensure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Ensure that the DivX video file is complete.

DivX subtitles do not display correctly.

- Ensure that the subtitle file name is the same as the movie file name.
- Select the correct character set: 1) Press
 SETUP. 2) Select [Preference Setup].
 3) Select [DivX Subtitle]. 4) Select a supported character set. 5) Press OK.

The contents of a USB storage device cannot be read.

- Ensure that the format of the USB storage device is compatible with the home theater (see 'Product specifications' on page 14).
- Ensure that the USB storage device is formatted with a file system that is supported by the home theater (note that NTFS is not supported).

'No entry' or 'x' sign appears on the TV.

The operation is not possible.

10 Index

Δ	
amplifier	14
audio	1 1
connection	8
language	13, 9
settings	12
synchronize with video	10
Syntam on Ze With Video	10
C	
care	4
change settings	12
connect	. –
audio from TV	8, 11
guide	7
other devices	8
TV	8 7
connectors	7
contact us	16
D	
disc	
play	9
supported discs	14
disposal of your product	4
DivX	
subtitle	13
F file formats	14
 I	
language	
audio	13
disc menu	13
on-screen display	12
subtitle	13
M	
MP3	
create MP3 files	11
0	
overview	
connectors	7
main unit	5
remote control	5

P	
password	13
picture	
options	9
slide show	10, 9
thumbnail overview	9 16
troubleshooting play	10
disc	9
options	9
radio	10
troubleshooting	16
USB storage device	10
product care	4
product specifications	14
R	
radio	
play	10
program	10
tune	10
recycle	4
region code .	14
remote control	5
repeat	9
rotate pictures	,
S	
safety	3
settings	
audio	12
general	12
parental control	13 13
preferences restore factory settings	13
video	13
slideshow	13
play musical slideshow	10
software	
update	14
version	14
sound	0
mode	8
surround troubleshooting	16
subtitle	10
language	9
	,

T time search video troubleshooting TV audio from TV connect	10 16 8, 11 7
USB play software update	10 14
video options settings synchronize with audio	9 13 10