




Philips  
docking speaker with  
Bluetooth®

for iPod/iPhone

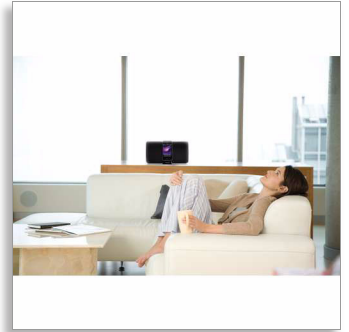

AD530

## Enjoy music from your iPod/iPhone

Built-in with Bass Reflex speakers, this Philips docking station delivers rich, deep bass and powerful sound. Its smart dock lets you charge your iPod/iPhone without the need to remove its protective casing.

### **Crystal clear sound**

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Shielding technology to block mobile phone interference
- 8 W RMS total output power

### **Enjoy your favourite music**

- Play and charge your iPod/iPhone simultaneously
- MP3 Link for portable music playback

### **Advanced versatility**

- Bluetooth wireless music streaming from iPod/iPhone
- Dock any iPod/iPhone, even in its case
- Compact design for any space, any lifestyle

# PHILIPS

docking speaker with Bluetooth®  
for iPod/iPhone

# Specifications

## iPod compatibility

- Compatible with: iPod classic, iPod mini, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod nano 6th generation, iPod touch, iPod touch 2nd generation, iPod touch 3rd generation, iPod touch 4th generation

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S

## Sound

- Sound system: stereo
- Volume control: up/down
- Output power: 8 W RMS

## Connectivity

- MP3 Link: 3.5 mm stereo line in

- Bluetooth profiles: A2DP
- Bluetooth range: line of sight, 10 m or 30 ft
- Bluetooth version: 2.1

## Power

- Power supply: 100 - 240 V AC, 50/60 Hz

## Accessories

- AC/DC Adapter

## Convenience

- Charging device: iPod, iPhone

## Dimensions

- Product dimensions (WxDxH): 260 x 103 x 131 mm
- Packaging dimensions (WxDxH): 354 x 136 x 167 mm
- Product weight: 1.8 kg
- Weight incl. Packaging: 1.3 kg



AD530/05

# Highlights

## Bluetooth music streaming

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to other Bluetooth devices, so you can play your favourite music from your iPod or iPhone on your Philips audio system - conveniently, anytime you want.

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

## MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

## Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adapters. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.



Issue date 2017-04-05

Version: 3.0.4

12 NC: 8670 000 89499  
EAN: 87 12581 64258 7

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)