



Philips Fidelio
Wireless speaker

Philips Wireless Home System

120 W max
Works with Ambilight TVs
Sustainable Muirhead leather



TAFS1

Crafted for all-round sound

Bring every song and film to life in rich, room-filling sound. You can connect this sleek wireless Fidelio FS1 speaker to others for a seamless multi-room experience. Or connect to a Philips TV or soundbar for immersive home cinema.

Give your entertainment the sound it deserves

- Philips Fidelio FS1. Natural sound for music and movies
- 3.5" woofer. 1" tweeter. 2.5" midrange/Atmos driver
- 120 W max. Two passive radiators for rich bass
- Intelligent pairing. Immerse more. Hear more
- Pair for stereo

A seamless experience

- Philips Wireless Home System powered by DTS Play-Fi
- Philips Sound app—regular updates for the best experience
- Wi-Fi. Bluetooth. Apple AirPlay 2. Google Chromecast
- However you stream your music—perfect Fidelio sound
- Connects to your favourite AI voice assistant-enabled device

Beautiful Fidelio design

- Head-turning looks
- Built-in LEDs. Ambilight on board

PHILIPS


Wireless speaker

Philips Wireless Home System 120 W max, Works with Ambilight TVs, Sustainable Muirhead leather

TAFS1/10

Highlights

Natural Fidelio sound

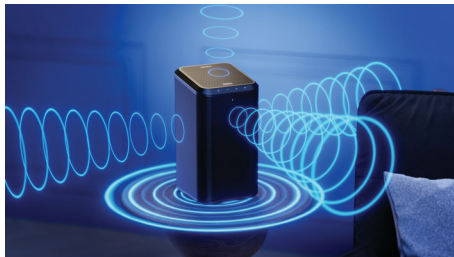


The Fidelio FS1 speaker brings music and movies to life with sparkling highs, warm midrange frequencies and rich bass. A down-firing woofer and twin passive radiators add real depth to every beat—and every score. It's perfect for small- to medium-sized rooms.

Head-turning looks



This sleek wireless FS1 speaker looks great on its own, and even better in a Fidelio home-cinema setup. The FS1 is wrapped in an acoustically transparent metal grille, and its bevel is trimmed in anthracite Muirhead leather. It matches the Fidelio FB1 soundbar and FW1 subwoofer beautifully.

Philips Wireless Home System

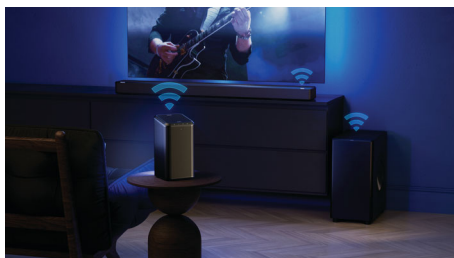

You can sync multiple FS1 speakers to enjoy superb multi-room sound. Pair with a

compatible Philips TV* for more cinematic sound and better vocals, or connect two speakers to a Fidelio FB1 soundbar to create a true 7.1.4 surround-sound set-up. Add a Fidelio FW1 subwoofer to deepen the bass.

Pair for stereo



Just one of these wireless speakers fills a small-to-medium room with rich, detailed sound. Pair a second Fidelio FS1 speaker in the same room, and you'll get incredibly immersive stereo. Jazz, rock, EDM or the latest episodes in your pod feed—enjoy even clearer sound with a real sense of space.

Intelligent pairing



Good things happen when this Fidelio speaker pairs with a Philips soundbar or subwoofer, another FS1 speaker or a Philips TV*. The speaker recognises what it's paired with and automatically adjusts its performance, freeing paired components to add more richness and detail to the mix.

Fidelio sound for streaming



Whether you're streaming directly from Spotify, or accessing hi-res albums on Tidal, this speaker brings it all to life. If you're streaming higher-than-CD-quality files, Critical Listening mode lets you allocate bandwidth to a single FS1 speaker so that no detail is lost.

Ambilight on board

This speaker doesn't just do music—it does Ambilight too. For films, you can set the speaker to sync with the Ambilight on your Philips TV. Lounge Mode turns the FS1 into a colourful static light, perfect for dinner parties or a good book. Follow Music creates a lightshow that pulses to the beat.

Connects with voice assistants

With Wi-Fi, Bluetooth, Chromecast and Apple AirPlay 2 compatibility—all your devices are covered. Stream how you like. Control the speaker using Alexa, the Google Assistant or Siri. Turn the music up. Skip tracks. All completely hands-free.



Specifications

Sound

- Output power (MAX): 120 W
- Output power (RMS): 60 W
- Total harmonic distortion: 1%
- Frequency response: 50-20K Hz

Loudspeakers

- Number of sound channels: 1.0.1
- Driver configuration: 3-way
- Number of middle range drivers: 1
- Middle range driver diameter: 2.5" (up-firing)
- Number of tweeters: 1
- Tweeter diameter: 1"
- Number of woofers: 1
- Woofer diameter: 3.5" (down-firing)
- Passive radiators: 2

Connectivity

- Wi-Fi: 2.4 GHz/5 GHz, IEEE 802.11 a/b/g/n/ac
- Network setup: Philips Sound app, powered by DTS Play-Fi
- Bluetooth
- Bluetooth version: 5.0
- Bluetooth profiles: A2DP, AVRCP, Streaming format: SBC, AAC
- Bluetooth range: Line of sight, 20 m or 66 ft
- Multiple speaker connection
- Multiple speaker scenario: Stereo, Surround, Grouping
- Multiple speaker technology: DTS Play-Fi Multi-room
- Smart Home: Built-in Chromecast, Spotify Connect, Works with Apple AirPlay 2, Works with OK Google, Works with Alexa

- Audio in: 1 x 3.5 mm
- DLNA Standard: No

Compatibility

- Smartphone/tablet APP control

Convenience

- Built-in microphone: 0
- Hands-free calling: No
- Light Effect: Yes, works with Ambilight TV

Power

- Power supply: 100 - 240 V AC, 50/60 Hz
- Power bank: No

Accessories

- Included accessories: AC power adapter, Quick start guide, World Wide Warranty leaflet

Product dimensions

- Product dimensions (W x H x D): 14.2 x 25.3 x 14.2 cm
- Weight: 2.328 kg

Packaging dimensions

- EAN: 48 95229 12669 5
- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Standing
- Packaging dimensions (W x H x D): 18.6 x 35.5 x 18.4 cm
- Gross weight: 3.397 kg
- Net weight: 2.896 kg
- Tare weight: 0.501 kg



Issue date 2023-07-15

Version: 5.1.2

12 NC: 8670 001 82799
EAN: 48 95229 12669 5

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* This feature works with DTS Play-Fi-compatible Philips TVs from 2021 or later.