



Philips  
Blu-ray Disc/DVD player

Netflix and YouTube

USB2.0 Media Link  
DVD video upscaling

**BDP2300**

## Connect to premium online entertainment

### with Netflix and YouTube

With BDP2300, movies never looked better. Incredibly sharp images in full HD 1080p are delivered from Blu-ray discs, and DVD upscaling offers near-HD video quality. Enjoy the best of the Internet on your TV with Netflix and YouTube

#### Engage more

- USB 2.0 plays video/music from USB flash/hard disk drive
- EasyLink to control all HDMI CEC devices via a single remote
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content

#### Hear more

- Dolby TrueHD for high fidelity sound
- DTS2.0 Digital Out

#### See more

- Blu-ray Disc playback for sharp images in full HD 1080p
- DivX Plus HD Certified for high-definition DivX playback
- Netflix-Streaming TV Episodes and Movies over the Internet
- DVD video upscaling to 1080p via HDMI for near-HD images


#### Connect and enjoy all your entertainment

- Watch YouTube videos directly on your big screen TV\*

# PHILIPS

# Highlights

## Blu-ray Disc playback

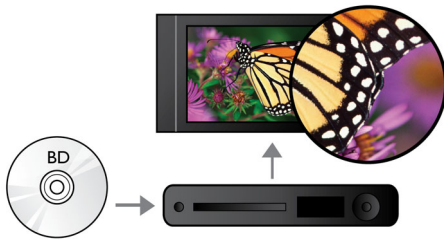

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound — so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allows a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features such as pop-up menus bring a whole new dimension to home entertainment.


## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet directly on your Philips HDTV or PC. DivX Plus HD supports

the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Dolby TrueHD

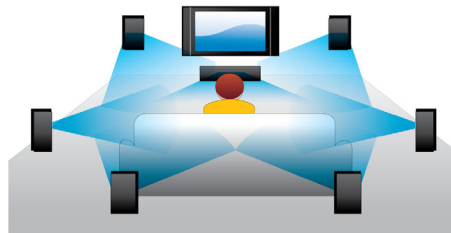

Dolby TrueHD delivers the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD completes your high definition entertainment experience.

## DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the

line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

## EasyLink

EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, home cinema systems and TVs with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Netflix video streaming

# NETFLIX

Instantly watch TV episodes and movies as often as you want on your TV. All you need is an Internet connection (either Wi-Fi or Ethernet) and a Netflix membership package that includes streaming\*, and you are ready to go.

# Specifications

## Picture/Display

- Aspect ratio: 16:9, 21:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

## Video Playback

- BD Region Code: B
- Compression formats: DivX Plus™ HD, H.264, MPEG2, MPEG4 (AVC), XviD, MPEG1
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 2
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Colour

## Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, DivX, m2ts, mkv, mp4, mpeg, mpg

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Connectivity

- Front Connections: USB 2.0
- Rear Connections: Digital coaxial out, Ethernet, HDMI output

## Convenience

- BD-Live (1 GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

- Online services: Netflix, YouTube
- On-Screen Display languages: English

## Power

- Power consumption: 11 W
- Power supply: 220-230 V, 50 Hz
- Standby power consumption: < 1 W

## Dimensions

- Packaging (W x H x D): 315 x 81 x 259 mm
- Product (W x H x D): 270 x 41 x 199 mm
- Product weight: 1.02 kg
- Weight incl. Packaging: 1.3 kg

## Accessories

- Included accessories: 2 x AAA Batteries, CD-R (User Manual), Product Registration Card, Quick start guide, Remote Control

## Product dimensions

- Product dimensions (W x H x D):  
27 x 4.1 x 19.93 cm
- Product dimensions (W x H x D):  
10.6 x 1.6 x 7.8 inch
- Weight: 0.91 kg
- Weight: 2.006 lb

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D):  
31.5 x 25.9 x 8.1 cm
- Packaging dimensions (W x H x D):  
12.4 x 10.2 x 3.2 inch
- Gross weight: 1.3 kg
- Net weight: 1.02 kg
- Tare weight: 0.28 kg
- Gross weight: 2.866 lb
- Net weight: 2.249 lb
- Tare weight: 0.617 lb
- EAN: 48 95185 60546 3

## Outer Carton

- Number of consumer packages: 1
- Outer carton (L x W x H): 31.5 x 25.9 x 8.1 cm
- Outer carton (L x W x H): 12.4 x 10.2 x 3.2 inch
- Gross weight: 1.3 kg
- Net weight: 1.02 kg
- Tare weight: 0.28 kg
- Gross weight: 2.866 lb
- Net weight: 2.249 lb
- Tare weight: 0.617 lb
- EAN: 48 95185 60546 3



Issue date 2015-09-03

Version: 2.1.5

12 NC: 8670 001 21949  
EAN: 04 89518 56054 63

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)