

Philips 3000 series  
DVD player

DivX Ultra  
USB 2.0  
ProReader Drive



DVP3650

## Enjoy it all - from DVD

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

### Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- 192kHz/24 bit audio DAC enhances analogue sound input
- Progressive Scan component video for optimized image quality
- Screen Fit for optimal viewing every time

### Play all your movies and music

- ProReader Drive for smooth playback on virtually any disc
- DivX Ultra Certified for enhanced DivX video playback
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, WMA and JPEG digital camera photos

### Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

### Fits any space, any lifestyle

- Ultra-slim design that fits anywhere

# PHILIPS


# Highlights

## ProReader Drive




ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

## 12-bit/108MHz video processing

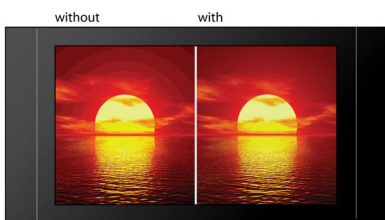


12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

## 192kHz/24 bit audio DAC

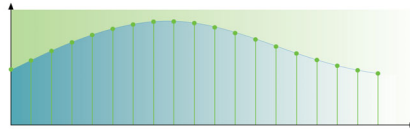

192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

## USB Media Link

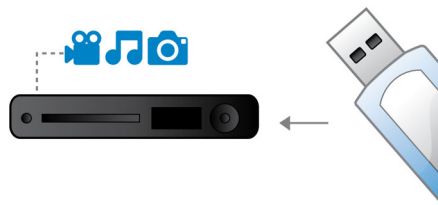

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## DivX Ultra Certified




With DivX support, you are able to enjoy DivX encoded videos and movies from the

Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## Multimedia DivX

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

## Plays it all

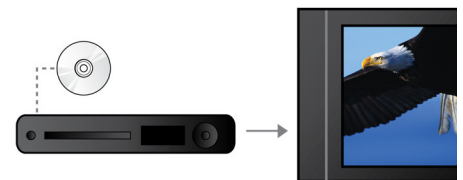

Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.

## Ultra-slim design



Ultra-slim design that fits anywhere



# Specifications

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 100
- Distortion and Noise (1kHz): 85 dB
- Crosstalk (1kHz): 100 dB
- Dynamic Range (1kHz): 90 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD-R/-RW, DVD+R/+RW, DVD-Video, DivX
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra
- Video disc playback system: PAL, NTSC

## Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, Dolby Digital, PCM, WMA

## Still Picture Playback

- Playback Media: DVD-R/-RW, DVD+R/+RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Zoom, Flip photos, Slideshow with MP3 playback, Slideshow

## Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3, DivX
- Multimedia connections: USB memory class device

## Connectivity

- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, Component Video out Progressive
- Front / Side connections: USB

## Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Russian

## Power

- Power consumption: < 10 W
- Standby power consumption: < 1 W
- Power supply: 110-240V, 50/60 Hz

## Accessories

- Included accessories: Remote Control, World Wide Warranty leaflet, User Manual, Audio/Video cable, 1 x AAA Battery

## Dimensions

- Weight incl. Packaging: 1.8 kg

## Outer Carton

- EAN: 87 12581 63987 7
- Gross weight: 1.55 kg
- Outer carton (L x W x H): 36 x 28.2 x 8 cm
- Nett weight: 1.2 kg
- Number of consumer packagings: 1
- Tare weight: 0.35 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 36 x 28.2 x 8 cm
- EAN: 87 12581 63987 7
- Gross weight: 1.55 kg
- Nett weight: 1.2 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.35 kg
- Type of shelf placement: Laying

## Product dimensions

- Product dimensions (W x H x D): 31 x 4.05 x 22.6 cm
- Weight: 1.05 kg

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD



Issue date 2014-05-22

Version: 3.2.10

12 NC: 8670 000 88608  
EAN: 87 12581 63987 7

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)