




Philips
docking speaker with
Bluetooth®

Bluetooth®
with Lightning connector
for iPod/iPhone/iPad
30 W

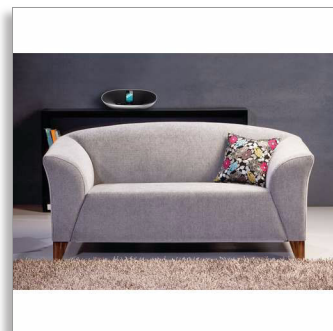

DS8300

Fill your home with incredible sound, wirelessly

The DS8300 docking speaker delivers stunning sound from iPod/iPhone/iPad via Lightning connector. Get more out of your music, gaming and video experience now. With Bluetooth streaming, you can enjoy great sound from anywhere in the room.

Exceptional sound performance

- SoundCurve for superb crystal-clear sound
- Pure digital processing technology for best sound clarity
- Optimal acoustic volume to match speakers' requirements
- Precisely tuned bass pipes for deep, tight bass reproduction

Enjoy your favourite music

- Fast charging and play music via Lightning connector
- Audio-in for portable music playback

Advanced flexibility and control

- Wireless music streaming via Bluetooth
- Remote control complements speaker design and finishing
- SoundStudio app for complete control of audio settings

PHILIPS


Highlights

Play and charge via Lightning




Enjoy your favourite music while charging your iPod/iPhone/iPad via the new Lightning connector! Just dock it directly on the speaker to play your hand-picked tunes in superb sound. It also charges your device quickly while it's playing, so you don't have to worry about the battery running out.

Wireless music streaming

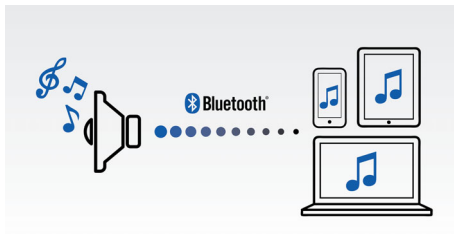

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

SoundCurve

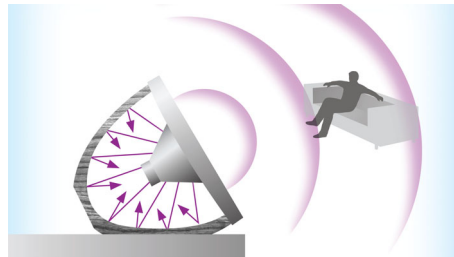

The carefully designed curved back cover of this Philips docking speaker creates a highly effective acoustic structure for sound reproduction. Its clean curve enforces the rigidity of the speaker cabinet, dramatically reducing internal resonance and eliminating the vibration and distortion of sound. You get to enjoy superb crystal-clear sound in stunning-looking speakers.

Pure digital sound



Advanced pure digital sound processing technology offers vastly superior sound performance compared to the conventional analogue audio processing technology that is found in docking players that use the analogue audio output from an iPod/iPhone. By collecting the iPod's/iPhone's digital audio output and employing digital processing at each stage of the circuit, a much higher Signal-to-Noise ratio is produced. The result is unsurpassed sound clarity that is in perfect balance.

SoundStudio App



Have music the way you like it now. SoundStudio truly puts the power over your music into the palm of your hands. It lets you change every aspect of sound, using only your iPhone, with controls that are intuitive and simple. Now you can tweak, tailor and create your desired sound experience and have your favourite songs come to new life. SoundStudio also lets you listen to thousands of Internet radio stations worldwide, broadening your music experience even further.

Audio-in



The Audio-in connectivity allows direct playback of Audio-in content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

Specifications

iPad compatibility

- via Lightning connector: iPad mini, iPad with Retina display
- via Bluetooth: iPad, iPad 2, iPad mini, iPad 4

iPhone compatibility

- via Lightning connector: iPhone 5
- via Bluetooth: iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5

iPod compatibility

- via Lightning connector: iPod nano 7th generation, iPod touch 5th generation
- via Bluetooth: iPod nano 7th generation, iPod touch 3rd generation, iPod touch 4th generation, iPod touch 5th generation

iPod/iPhone/iPad App

- App name: SoundStudio, Free download from App store
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later

Sound

- Output power: 30 W RMS
- Sound system: stereo
- Volume control: up/down

Loudspeakers

- Speaker drivers: 2 x 3" full range woofers
- Loudspeaker enhancement: bass reflex speaker system

Connectivity

- Bluetooth profiles: A2DP
- Bluetooth range: line of sight, 10 m or 30 ft
- Bluetooth version: 2.1
- Audio in (3.5 mm)

Accessories

- Included accessories: AC Power Cord, Remote Control

Dimensions

- Product dimensions (WxDxH): 444 x 180 x 167 mm
- Packaging dimensions (WxDxH): 513 x 225 x 233 mm
- Product weight: 2.19 kg
- Weight incl. Packaging: 3.13 kg

Power

- Power supply: 100 - 240 V AC, 50/60 Hz



Issue date 2014-07-18

Version: 3.0.5

12 NC: 8670 001 02929
EAN: 08 71258 16875 88

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com