



Philips  
Portable DVD Player

17.8 cm (7") LCD

3hr playtime analog TV

PD7007



Watch your favorite TV shows and DVDs anywhere

with easy setup

Enjoy free-to-air TV programs with the built-in TV receiver on the PD7007 portable DVD player. With the 7" TFT LCD, you can indulge in movies, music and photos enjoyment on the go.

**Play your movies, music and photos on the go**

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

**Enjoy portable TV entertainment in real-time**

- 17.8 cm/7" TFT color LCD display in 16:9 wide screen format
- Watch free-to-air TV broadcast in real-time
- PAL/NTSC compatible
- Easy installation and automatic channel search

**Extra touches for your convenience**

- Enjoy up to 3 hours playback with a built-in battery\*
- AC adaptor, car adaptor and AV cable included



**PHILIPS**  
sense and simplicity

Portable DVD Player  
17.8 cm (7") LCD 3hr playtime analog TV

PD7007/98


# Highlights

## 18 cm/7" TFT color LCD (16:9)



The color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints. The 16:9 widescreen aspect ratio is standard for universal to high-definition digital television. A native 16:9 aspect ratio means video display without bars at top and bottom of the picture and without the quality loss that comes from scaling, altering an image to fit on a different screen size.

## DVD, DVD+/-RW, (S)VCD, CD

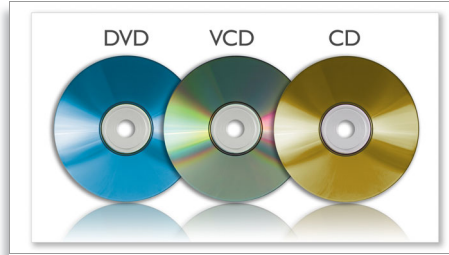

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

## MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can

be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

## View JPEG from picture disc



Play JPEG photos that are saved on your disc. Relive your favorite moments with family and friends anytime you want!

## DivX Certified

With DivX® support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified® Philips device.

**DIVX**



**DOLBY**  
DIGITAL



# Specifications

## Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size (inch): 7 inch
- Resolution: 480(w)x234(H)x3(RGB)

## Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 10mW RMS(earphone)
- Signal to noise ratio: >80dB(earphone), >62dB(built-in speakers)

## Video Playback

- Playback Media: DVD, DVD+RW, DVD+R, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Shuffle Play, Slow Backward, Slow Forward, Zoom, Resume Playback from Stop
- Video disc playback system: NTSC, PAL
- Compression formats: Divx

## Audio Playback

- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- File systems supported: ISO-9660, Joliet
- MP3 bit rates: 32 - 320 kbps

## Connectivity

- AV output: Composite (CVBS) x1
- DC in: 9V, 0.8A
- Headphone jack: 3.5mm Stereo Headphone x 1
- TV connection: Antenna jack

## Convenience

- Battery charging indication
- Shock proof

## Tuner/Reception/Transmission

- Tuner bands: UHF, VHF
- Video Playback: NTSC, PAL (all versions), SECAM

## Accessories

- AC/DC Adaptor: DC-in 9V 0.8A; 100-240v, 50/60Hz
- Cables: 1 x AV Cables
- Car kit: cigarette outlet adaptor, 12vDC
- Included accessories: Aerial antenna
- Remote control: AY5529
- User Manual: English

## Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 3hrs\*

## Dimensions

- Master carton dimensions: 262 x 272 x 284 mm
- Master carton quantity: 3
- Master carton weight: 5.1 kg
- Packaging dimensions (W x H x D): 274 x 254 x 84 mm
- Product dimensions (W x H x D): 210 x 39 x 178 mm
- Product weight: 1 kg
- Packaging type: D-box



Issue date 2013-02-12

Version: 2.1.2

12 NC: 8670 000 61971  
EAN: 87 12581 53674 9

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

\* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

\* Battery life varies by use and settings.

\* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.