

Philips  
WeCall BT conference  
speaker

**Bluetooth® and USB**

Superior sound  
Built-in battery  
For smartphone

**AECS7000ES**

## Make clear conference calls anywhere

that sound like talking in person

Make conference calls anywhere with the portable Philips WeCall. It comes with four microphones and advanced echo cancellation for smooth conversations, while the LED indicators and Bluetooth® connectivity offer you the utmost convenience.

### **Best in class sound and voice performance**

- Four microphones for perfect voice pick up in 360 degree
- Advanced noise cancelation for clear sound
- Advanced echo suppression for smooth conversations
- Powerful speaker to easily hear voices and play music
- Advanced HD audio technology for natural voice

### **Ease of use**

- Easily connect to Bluetooth-enabled smartphones and laptops
- Free WeCall app for quick and intuitive conference calls
- LED status indicators for call, charging and mute functions
- USB connectivity for making calls via laptops

### **Portable and convenient**

- Slim and compact design for high portability everywhere
- Up to 8 hours of battery life and USB cable recharging
- Slim and light travel case to take it anywhere




# PHILIPS

WeCall BT conference speaker  
Bluetooth® and USB Superior sound, Built-in battery, For smartphone

AECS7000ES/00

# Highlights

## Perfect voice pick up

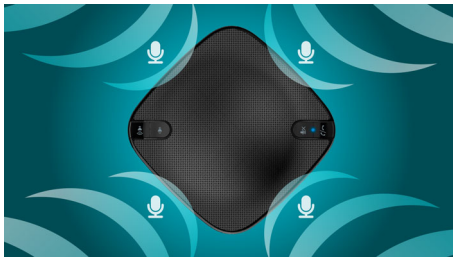

Four omni-directional microphones enable 360 degree voice pick up from up to 5 metres away, for clear and natural communication without raising your voice or leaning over a speaker - even in the most difficult environment.

## Advanced noise cancelation

Advanced noise cancelation with four omni-directional microphones around the speaker enables multiple people to join the conversation and ensures voices can be heard in the clearest way. Stationary and non-stationary noises are suppressed for a noise-free conversation.

## Advanced echo suppression

Very fast and advanced echo suppression for a revolutionary hands-free, full-duplex conversation a few metres from the speaker. An adaptive algorithm is designed to eliminate echoes and prevent howling due to feedback from loudspeaker to microphone, which is especially ideal in difficult acoustical conditions and reverberant rooms such as offices with little furniture.

## Powerful built-in speaker

2-inch high sensitivity, low distortion neodymium magnet speaker with specially designed low-profile cone resulting in a wide-range response and wide-dispersion directivity. Talk while walking around the room and from anywhere in the room with no drop in quality. Or perfect for music playback.

## Advanced audio technologies


Advanced HD audio technology for natural voice

## Seamless Bluetooth connections



Seamless connectivity via auto pairing with iPhones and any Bluetooth enabled smartphones, computers and laptops, with up to 10 metres wireless range.

## Intuitive conference calls

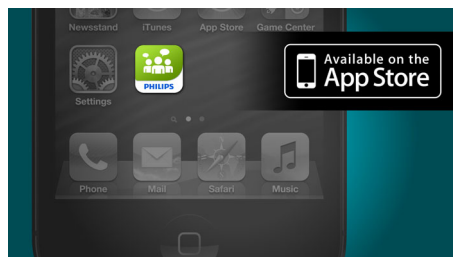

The handy Philips WeCall app manages conference call numbers and even enters access codes directly from your calendar, making it a breeze to dial and access calls from your calendar at the push of a button.

## Built-in LED indicators

LED status indicators for call, charging and mute functions

## USB connectivity

USB connectivity enables you to use the speaker for making calls from laptops with Plug and Play functionalities and automatic device detection.

## Slim and compact design

The slim and portable design allows you to take the conference speaker wherever you want. It easily fits in your laptop bag for use while on the go, working from home, hotel room, or visiting a business partner.

## Long built-in battery life



Up to 8 hours battery life while being used on a call, and up to 200 hours on standby. The USB cable included allows for very easy and convenient charging.

## Travel case for easy transport

Durable and ultra light travel case helps to protect the speaker while travelling, with an elegant and functional design for a professional appearance.

## CES 2014 Innovation Awards

2014 CES Innovations Design and Engineering Award

Sleek, compact, filled with

innovative and intuitive technology, the Philips WeCall Bluetooth® conference speaker AECS7000 is ideal for conference calls on your smartphone. Four omni-directional microphones and echo cancellation ensure clear conversations even when 16 feet away.



# Specifications

## Bluetooth® wireless technology

- Version: V2.1 + EDR
- Range: 10M (free space)
- Profiles: HSP, HFP, A2DP, AVRCP, (HFP supports wideband speech)

## Philips WeCall App

- Free Download: Yes, search for "Philips WeCall"
- From Apple Store: Requires iOS 4.3 or later
- From Google Play

## iPad compatibility

- Compatible with: iPad, iPad 2, iPad 4, iPad mini

## iPhone compatibility

- Compatible with: iPhone 4S, iPhone 3GS, iPhone 4, iPhone 5

## iPod compatibility

- Compatible with: iPod touch 3rd generation, iPod touch 4th generation, iPod touch 5th generation

## Android device compatibility

- Android version 2.1 or above
- Bluetooth version 2.1 or above

## Sound

- Built-in speakers: 4 x 1"

- Output Power: 2W
- Frequency response: 80 -160k Hz
- Signal to noise ratio: >75dB

## Microphone

- Omni-directional microphones: 4
- 360 degree voice pick up from: up to 5m away
- Noise & echo cancelation

## Convenience

- Speakerphone - talk handsfree
- Volume control: Up/ Down

## Power

- Power input: 5V, 1A
- Battery capacity: 3.7V, 1000mAh
- Battery Type: Lithium Ion Polymer
- Talk time: Up to 8 hours

## Accessories

- Travel case
- USB cable
- Quick start guide

## Dimensions

- Product dimensions (W x H x D):  
110 x 30 x 110 mm
- Product weight (g): 0.17 kg



Issue date 2014-05-30

Version: 1.0.5

12 NC: 8670 001 11042  
EAN: 69 23410 72655 8

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Philips is not responsible for stolen valuables of any kind that may be caused by the use of InRange.