



Philips  
CD Soundmachine

**Bluetooth**  
50W  
Dynamic light



PX840T

## Enjoy powerful music wirelessly wherever you go with Bluetooth

The Philips PX840T portable sound system plays music effortlessly from your favorite sources - Bluetooth, USB, CD and FM/MW radio. The built in, dynamic lighting system and 50W power output let you have the ultimate listening experience.

### Enjoy your music from different sources

- Stream music wirelessly via Bluetooth™ from your smartphone
- USB Direct for MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- FM/MW (AM) stereo tuner
- Audio-in for easy portable music playback

### Easy to use

- Pump up the party with dynamic light
- CD Shuffle/Repeat for personalized music enjoyment
- 20-track CD programmable
- 20 preset tuning stations

### Powerful sound you can hear and feel

- 50W RMS maximum output power
- Passive radiator for better low frequency performance
- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS

# Highlights

## Stream music via Bluetooth™




Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## USB Direct for MP3 music

USB Direct for MP3 music playback

## Play MP3-CD, CD and CD-R/RW

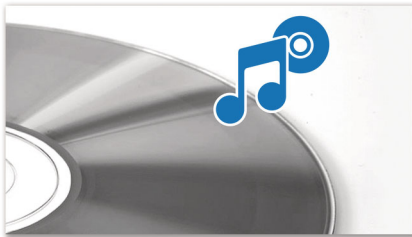


MP3 stands for "MPEG 1 Audio layer-7.6 cm (3)". MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression

format used on the world wide web, allowing quick and easy audio file transfer.

## FM/MW (AM) stereo tuner

FM/MW (AM) stereo tuner

## Light up the party

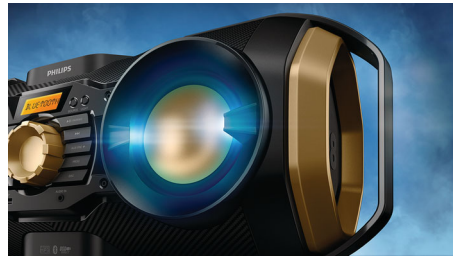

Get the party pumping with dynamic lighting to illuminate your music. Set the night light with two cool dynamic lighting effects that shine directly from the speakers. Turn the lights on or off with the flip of a switch, without missing a beat. Light up the party however you like, from ambient chill-out lighting to exciting dance club effects, set the tone and mood at the same time!

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of

the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.



# Specifications

## Audio playback

- Bluetooth
- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: fast forward/backward, next/previous album search, next/previous track search, repeat/shuffle/program
- USB playback mode: fast forward/backward, next/previous album search, next/previous track search, repeat/shuffle/program

## Tuner/Reception/Transmission

- Tuner bands: FM, MW (AM)
- Antenna: FM antenna

## Sound

- Sound system: stereo
- Volume control: rotary (digital)
- Output Power: Total 50W max.

## Loudspeakers

- No. of built-in speakers: 2 full range + 2 passive radiators

## Connectivity

- Bluetooth profiles: A2DP, AVRCP
- USB: USB host
- Audio in (3.5mm)

## Convenience

- Display type: LCD display
- Loader type: top
- Backlight
- Backlight color: Amber

## Power

- Power supply: AC or battery input
- Mains power: AC 100V- 240V
- Battery type: D size (LR20)
- Battery voltage: 1.5 V
- Number of batteries: 8

## Accessories

- Cables/Connection: AC-DC adapter
- Warranty: Warranty leaflet
- Others: User Manual

## Dimensions

- Product dimensions (WxDxH): 523 x 223 x 210 mm
- Packaging dimensions (WxDxH): 560 x 265 x 265 mm
- Product weight: 3.8 kg
- Weight incl. Packaging: 4.8 kg



Issue date 2022-05-09

Version: 2.0.5

12 NC: 8670 001 45154  
UPC: 8 40063 20027 2

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)