



Philips Streamium  
Wireless Micro Hi-Fi  
System

**Streamium**



**MCI298**



## Obsessed with sound

Stream music from PC/MAC and Internet - wirelessly

Explore your music universe with this sleek, wall-mountable wireless micro system. Stream music from your PC/MAC, play CD, MP3 or FM and Internet radio and enjoy easy navigation on its intuitive touch screen with color display.

### **Unlimited listening pleasure - wirelessly**

- Wireless stream music and photos from your PC/MAC
- Thousands of free Internet Radio Stations
- Play MP3/WMA-CD, CD and CD-RW
- USB Direct for MP3/WMA music playback
- Playback iTunes music
- FM radio

### **Easy navigation and control**

- Remote control for handy navigation
- Touch screen for easy navigation

### **Quality sound performance**

- 20W RMS total output power
- Complete integrated sound system

### **Ready to connect**

- Works with home broadband connection and Wi-Fi router

**PHILIPS**

# Highlights

## Free internet radio stations



Streamium comes with thousands of free Internet radio stations. Now you can stay abreast of all kind of music worldwide.

Connect your Streamium to the Internet and listen to your favorite online programs on your audio system without having to turn on your PC.

## Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by

ripping your audio CDs and transferring them onto your player.

## Wireless stream music & photos



Your PC/ MAC is filled with music that you can now conveniently stream onto your Philips audio device – without messy cables. Share your favorite songs with others at a party, or simply enjoy them at the comfort of your home. Do the same for your photo collections, and view them at leisure while you listen to music. Unlock your PC/ MAC treasures with the convenience of wireless streaming.


## Remote control



Control all your Philips Hi-Fi system's functions from the comfort of your sofa. Search, navigate and playback your music with ease and speed. With direct keys such as

Home and Favorite, you can have quick access to your main screen, your favorite Internet station or stream music from your PC/MAC and Internet - wirelessly. The Hi-Fi control center is in the palm of your hand.

## Touch screen

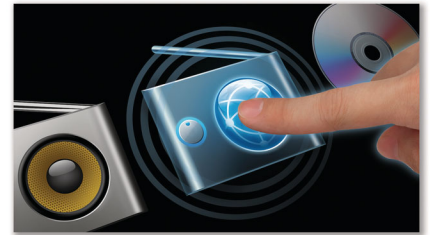

Touch screen control allows you to control your device by simply pressing on-screen buttons rather than physical buttons on the device. Simply power up the device and the touch screen user interface will show up on the LCD display with all the control options for the device. Touch screen control combines LCD display technology with pressure sensors and a powerful digital micro processor. When you press on a specific area of the screen with your finger, the relevant signal is sent to the processor and the command is immediately executed.



# Specifications

## Audio Playback

- Compression format: MP3, WMA, non DRM AAC (m4A)
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD, USB flash drive
- Internet Radio
- Loader Type: Slot
- PC Link playback mode: MP3 streaming via network, Wi-Fi wireless connection
- USB Direct Modes: Play/Pause, Previous/Next, Stop
- Disc Playback Modes: Fast Forward/Backward, Next/Previous Track Search, Repeat Play
- ID3-tag support
- MP3 bit rates: 8-320 kbps and VBR
- WMA bit rates: up to 192kbps, CBR/VBR

## Sound

- Equalizer settings: Neutral, Jazz, Pop, Rock
- Sound Enhancement: Class "D" Digital Amplifier, Dynamic Bass Boost, Equalizer, Treble and Bass Control
- Volume Control: Volume Control up/down
- Output power (RMS): 2x10W

## Loudspeakers

- Main Speaker: Full range

## Tuner/Reception/Transmission

- Auto digital tuning
- Tuner Bands: FM Stereo

## Connectivity

- Other connections: Ethernet
- Headphone: 3.5 mm
- Wireless connection: Wireless LAN(802.11g), Wireless LAN(802.11b)
- Wireless Universal Plug & Play: Enabled
- LAN wired: Ethernet (RJ 45) 1x
- Encryption / security: WEP 128 bit, WEP 64 bit, WPA, WPA2, WPS-PBC, WPS-PIN
- Antenna: FM Dipole

- Audio Connections: 3.5mm stereo line in -MP3 link
- Power: 220-240V

## Convenience

- Display Type: LCD
- Backlight
- Backlight color: White
- On-Screen Display languages: English, Dutch, French, German, Italian, Spanish, Portuguese, Swedish
- Eco Power Standby: 1 watt
- Headphone jack
- Clock: On main display, Internet time
- Alarms: Buzzer Alarm, Sleep timer
- Display Enhancements: Brightness Control, Touch screen control
- Indications: DIM mode
- Remote control: 1-Way

## Accessories

- Included accessories: FM antenna
- Batteries: 2x AAA
- CD-ROM: CD-ROM with Media Browser, Video Tutorial and manuals
- Quick start guide: English, French, Spanish, Italian, Dutch, German, Swedish, Finnish, Norwegian, Danish, Portuguese, Russian, Polish
- Remote control: 1-way Remote
- User Manual: English, French, Spanish, Italian, Dutch, German, Swedish, Finnish, Norwegian, Danish, Portuguese, Russian, Polish
- Warranty Card: Warranty Card
- AC/DC Adaptor: AC/DC Adapter

## Dimensions

- Product dimensions (WxDxH): 542 x 90 x 238 mm
- Set weight: 2.98 kg

## Picture/Display

- Diagonal screen size (inch): 3.5 inch

## Power

- Power supply: 200-240 V, 50Hz



Issue date 2022-06-03

Version: 6.0.8

12 NC: 8670 000 58864  
EAN: 87 12581 51963 6

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)