



Philips  
Portable speaker

Grey



SBA1710



## Mobile speaker

Pumping out larger-than-life sound, Philips SBA1710 speakers come complete with a handy mobile stand that ensures they're incredibly easy to use!

### Impressive sound

- Class "D" Digital Amplifier for superb sound quality
- 4 W RMS total output power

### Designed for grab and go

- Music on the go
- Up to 8 hours' music playback

### Simplicity

- Battery powered for portability
- Compatible with any media

**PHILIPS**  
sense and simplicity

Portable speaker  
Grey

# Specifications

## Product dimensions

- Product dimensions (W x H x D):  
13.2 x 7.7 x 9.9 cm
- Product dimensions (W x H x D):  
5.2 x 3.0 x 3.9 inch
- Weight: 0.283 kg
- Weight: 0.624 lb

## Compatible with

- Smartphones
- iPod
- iPhone
- MP3 player

## Design and finishing

- Colour: Grey

## Sound

- Impedance: 4
- RMS Power rating: 4 W
- Frequency response: 200 Hz–20 kHz (+/- 3 dB)

## Power

- Operating time on battery: 8 hr
- Battery type: 4 x AA (not included)

## Outer Carton

- Gross weight: 1.873 kg
- Gross weight: 4.130 lb
- GTIN: 1 69 23410 71552 8
- Outer carton (L x W x H): 13.0 x 8.3 x 60 inch
- Outer carton (L x W x H): 33 x 21 x 15.2 cm
- Net weight: 2.787 lb
- Net weight: 1.264 kg
- Number of consumer packages: 4
- Tare weight: 1.343 lb
- Tare weight: 0.609 kg


## Packaging dimensions

- Type of shelf placement: Soother
- Packaging dimensions (W x H x D):  
16 x 14 x 10 cm
- Packaging dimensions (W x H x D):  
6.3 x 5.5 x 3.9 inch
- EAN: 69 23410 71552 1
- Gross weight: 0.437 kg
- Gross weight: 0.963 lb
- Net weight: 0.697 lb
- Net weight: 0.316 kg
- Number of products included: 1
- Packaging type: Soother
- Tare weight: 0.266 lb
- Tare weight: 0.121 kg

SBA1710/00

# Highlights

## Class D Digital Amplifier

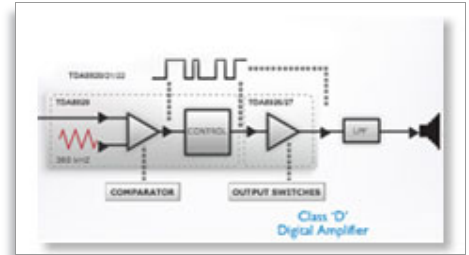

The Class 'D' Digital Amplifier takes an analogue signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, the Class 'D' Digital Amplifier has over 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.

## 4 W RMS total output power



RMS refers to Root Mean Square, which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. Essentially, amplifiers are limited by the electrical energy they can amplify and loudspeakers by the electrical energy they can convert into sound energy, without distorting the audio signal. The higher the wattage, the better the sound power emitted by the speaker.

## Up to 8 hours' music playback



Enjoy music playback for up to 8 hours on a single charge.

## Music on the go

Enjoy the convenience of playing music the way you want - play it out loud through the mobile speaker.



Issue date 2013-03-03

Version: 4.0.13

12 NC: 8670 000 88784  
EAN: 69 23410 71552 1

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)