

PHILIPS

Gaming Headset

5000 Series

DTS Headphone:X 2.0

2.4 G wireless + BT5.2 + 3.5 mm

50 mm drivers/LED lighting

Detachable unidirectional MIC

TAG5106BK



Immerse Yourself In A Better Gaming Experience

Stylish design, 50 mm precise drivers and DTS surround sound, advanced 2.4 G and Bluetooth 5.2 dual wireless connection, and detachable unidirectional microphone provide great comfort and immersion during gameplay

Comfortable fit, rich fun

- Leatherette earpads with memory foam provide great comfort
- Adjustable head beam ensures a better fit
- Fascinating LED lighting creates more fun for gaming

Easy to reach, convenient to use

- 2.4 G + BT5.2 + 3.5 mm ensure multi-platform compatibility
- Bluetooth 5.2 can connect many devices with Bluetooth
- 2.4 G wireless delivers dependable, lossless gaming audio
- Ultra-long battery life (more than 45 hours with LED off)

Sound built for immersive gaming

- Detachable unidirectional noise-cancelling microphone
- 50 mm drivers, closed-back, tuned for gaming
- Philips Precision Centre (P-Centre) software
- DTS Headphone: X 2.0 technology features 7.1 surround sound

Highlights

50 mm drivers, tuned for gaming



50 mm neodymium magnets drivers, with closed-back design, tuned by professional acoustic engineers, delivers a wide frequency range and rich accurate sound for gaming

2.4 G + BT5.2 + 3.5 mm



2.4 G and Bluetooth 5.2 dual wireless system, together with a 3.5 mm wired connection, ensure multi-platform compatibility with PC, Mac, Xbox, PlayStation, Nintendo Switch and mobile devices

Fascinating LED lighting



Fascinating LED lighting creates more cooling atmosphere in your gaming world by providing RED, GREEN and BLUE colours, and Heartbeat LED lighting

DTS Headphone: X 2.0



DTS Headphone: X 2.0 technology features 7.1 surround sound, the optimal spatial imaging for complete 360 degree immersion could help you survive and thrive in games.

Bluetooth 5.2




Bluetooth 5.2 can help you connect your gaming headset with many gaming devices integrated with Bluetooth technology, and you can answer calls or listen to music by streaming

2.4 G wireless connection



Professional-grade 2.4 G wireless technology delivers dependable, lossless audio with ultra-low latency for gaming

Ultra-long battery life

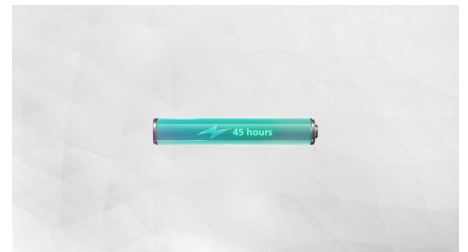

Ultra-long battery life(more than 45 hours with LED lighting off) gives you continuous gaming sessions without any disruption

5000 Series

Gaming Headset

TAG5106BK/00

Specifications

Sound

Acoustic system: Closed
Frequency response: 20 - 20,000 Hz
Speaker diameter: 50 mm
Impedance: 32 Ohm
Magnet type: Neodymium
Maximum power input: 20 mW
Sensitivity: 101 dB
Type: dynamic

Connectivity

Wireless connection: 2.4 G (via USB dongle),
Bluetooth 5.2
Wired connection: 3.5 mm

Packaging dimensions

Height: 24.5 cm
Packaging type: Box
Type of shelf placement: Hanging
Width: 22.5 cm
Depth: 10.8 cm
Number of products included: 1
EAN: 48 95229 12700 5

Product dimensions

Height: 22.2 cm
Width: 19 cm
Depth: 8.2 cm
Weight: 0.375 kg

Accessories

Quick Start Guide
3.5 mm audio cable: 1.5 m
USB charging cable: 0.6 m
USB dongle: 2.4 G wireless

Design

Colour: Black
Wearing style: Headband

