


Philips  
Portable DVD Player with  
Zero Bright Dot™ screen

25.9 cm (10.2") widescreen LCD



PET1030

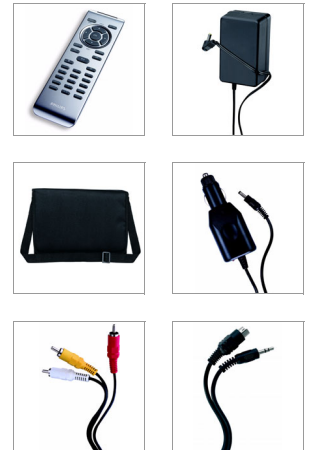

## Swivel Screen, flexible view

with 10.2" high-resolution LCD display

Enjoy movies on the Philips PET1030 Portable DVD Player with 10.2" LCD display and a 180-degree swivel screen. Plus, share your favorite video experiences with pals thanks to memory card slot and USB2.0 connector. Comes with Travel bag.

### Immerse in AV entertainment on the go

- Play DVD, DVD+/-R and DVD+/-RW, (S)VCD, DivX® & MPEG4 movies
- Play MP3/WMA-CD, CD and CD-RW
- Share JPEG image files with Picture CD

### Perfect viewing anywhere

- Zero Bright Dot™ screen for optimal screen quality
- High-resolution 10.2" TFT LCD display for great viewing
- Enjoy movies in 16:9 widescreen format
- Built-in quality stereo speakers

### For ultimate convenience

- 180-degree swivel screen for improved viewing flexibility
- Up to 4-hour playback with rechargeable battery\*
- USB 2.0 connector and SD memory card slot
- Travel bag included

# PHILIPS

sense and simplicity

# Highlights

## Play DVD, DivX and MPEG4

With DivX® support, you are able to enjoy DivX® encoded videos in the comfort of your living room. The DivX® media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, memory cards and DVD-video. DivX® CDs can be played back on selected DVD players, DVD Recorders and Home Theater Systems.

## Zero Bright Dot™ screen

Enjoy highest-quality images that are free from annoying blank spots on the LCD screen. LCD displays commonly have imperfections, termed as 'bright dots' by the LCD industry. A limited number of bright dots were once considered an inevitable side effect of LCD mass production. With Philips' strict quality control procedures used in our Portable DVD Players, our LCD displays are produced with zero tolerance for bright dots. Select Portable DVD

Players come with Philips Zero Bright Dot™ Policy to guarantee optimal screen quality.

## USB 2.0 and SD card slot

Enjoy the high-speed and convenience of accessing more capacity to transfer photos, videos and MP3 music files by using USB 2.0. You can also access more capacity to store photos, videos and MP3 music files on your Philips player by inserting an SD card into the built-in SD card slot.



# Specifications

## Picture/Display

- Display screen type: LCD TFT
- LCD panel type: Anti-glare polarizer
- Diagonal screen size (inch): 10.2 inch
- Resolution: 800(W)×480(H)×3(RGB)
- Brightness: 200 cd/m<sup>2</sup>
- Contrast ratio (typical): 250:1
- Effective viewing area: 222.0X133.2mm
- Pixel pitch: 0.1905(W)×0.1905(H) mm
- Response time (typical): 30 ms

## Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 10mW RMS(earphone)
- Signal to noise ratio: >80dB(line out), >76dB(earphone), >62dB(built-in speakers)

## Video Playback

- Playback Media: DVD, DVD+R/+RW, DVD-R/-RW, SVCD, Video CD, CD, CD-R/CD-RW, MP3-CD, WMA, Picture CD
- Disc Playback Modes: OSD, A-B Repeat, Angle, Disc Menu, Fast Backward, Fast Forward, Repeat, Shuffle Play, Slow Backward, Slow Forward, Zoom
- Video disc playback system: NTSC, PAL
- Compression formats: Divx, MPEG4

## Audio Playback

- Compression format: Dolby Digital, MP3, WMA
- Playback Media: CD, MP3-CD, CD-R, CD-RW, WMA-CD
- File systems supported: ISO-9660, Joliet
- MP3 bit rates: 32 - 320 kbps
- WMA bit rates: 32 - 192 kbps

## Connectivity

- Audio Output - Digital: Coaxial (cinch)
- DC in: 9~12V
- AV output: Composite (CVBS) x1
- AV input: Composite (CVBS) x1
- Headphone jack: 3.5mm Stereo Headphone
- Other connections: S-Video out

## Convenience

- Shock proof
- Battery charging indication

## Accessories

- AC/DC Adaptor: DC-in 9~12V; 110-240v, 50/60Hz
- Car kit: cigarette outlet adaptor, 12vDC
- Remote control: AY5507 slim remote
- Cables: A/V cable x1, S-video cable x1
- User Manual: English/ French/ Spanish / German
- Included accessories: S-video cable, Travel pouch

## Dimensions

- Master carton dimensions: 450 x 307 x 361 mm
- Master carton weight: 9.7 kg
- Master carton quantity: 3
- Packaging type: D-box
- Packaging dimensions (W x H x D): 336 x 282 x 145 mm
- Product dimensions (W x H x D): 270 x 32 x 188 mm
- Product weight: 1.3 kg



Issue date 2012-10-05

Version: 2.0.7

12 NC: 8670 000 29926  
EAN: 87 12581 33431 4

© 2012 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)