



Philips Fidelio  
True Wireless  
Headphones

Exquisite natural sound

Noise Cancelling Pro+  
Superior call quality  
Timeless Fidelio design



T2

## Crafted for everyday adventures

Beautiful to look at. Incredible to listen to. These premium true wireless earbuds give you our most spacious and detailed in-ear sound, and our smartest noise control. Music to calls, films to podcasts: they'll take you places.

### Seamless in every way

- Philips Headphones app. Customise your experience
- Google Assistant. Google Fast Pair
- Advanced multipoint connectivity. Wireless charging

### Philips Fidelio. Crafted for listeners.

- Exquisite. Philips sound signature for Fidelio
- Immersion that adapts to you. Noise Cancelling Pro+
- Superior call quality. Every word is loud and clear
- Timeless Fidelio design
- 2 way design. Balanced-armature and dynamic drivers

### Exquisite natural sound on the go

- Better connectivity and sound. Next-generation Bluetooth\*
- Superb sound for streaming on the go
- LC3, AAC and LDAC codecs supported
- More music. Up to 36 hours with the wireless charging case

# PHILIPS

## True Wireless Headphones

Exquisite natural sound Noise Cancelling Pro+, Superior call quality, Timeless Fidelio design

# Highlights

### Philips sound signature



From the taut, controlled bass to the warm mids and sparkling highs, these superb earbuds bring you exquisite natural sound with precise instrument separation. Balanced-armature and graphene-coated dynamic drivers paint more detail than ever. You'll hear the tracks your favourite artists made—just the way they made them.

### Noise Cancelling Pro+



Adaptive noise cancelling quickly adjusts to your environment to suppress outside noise, including wind, in real time. Music to calls, you can immerse yourself wherever you are without lifting a finger. If you do want to adjust the level of transparency or wind-noise reduction, simply use the Philips Headphones app.

### Superior call quality



You can happily make calls from the busiest, noisiest locations. Beamforming mics focus on the sound of your voice while advanced AI

algorithms stop background noise from ruining the call. If it's really windy, the bone-conduction sensor will reliably pick up your voice, so you'll still be heard.

### Timeless Fidelio design



Every element of your Fidelio earbuds is carefully considered. The polished ceramic housing of each earbud blends beauty with durability, and an IPX4 rating means they don't mind rain. Soft Muirhead leather accents the buds and the curved, compact charging case, which is made from anodised aluminium.

### Next-generation Bluetooth



These earbuds will work with devices that support Bluetooth LE Audio and the LC3 codec. You'll get noticeably better sound and a steadier connection that doesn't dip in built-up areas. There's virtually no lag for films or gaming, and you're all set for shared listening over wireless networks with Auracast broadcasting.\*

T2/00

### Superb sound for streaming




AAC, LDAC and LC3 codecs are supported for a superb sound on any streaming service, and the music pauses if you take an earbud out. Advanced Bluetooth multipoint seamlessly switches back and forth between two devices: listen to music on your laptop, take a call on your phone, and go back to your music automatically.

### 36 hours play time with case



Listen for up to 36 hours with ANC on, or 40 hours with ANC off. You get up to 9 hours of play time from a full charge, and a quick ten-minute charge of the earbuds in their case will get you another hour and a half. You can recharge the case by placing it on any wireless Qi charger.

### Philips Headphones app

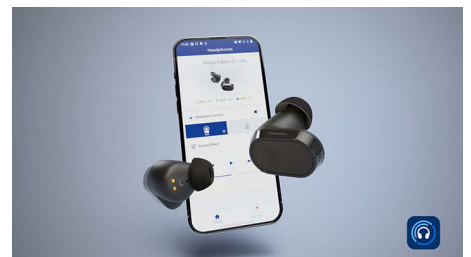

For music and podcasts, four presets and a custom multi-band equalizer let you find your preferred sound. You can also use the app to turn adaptive noise cancelling off and take control yourself.



# Specifications

## Sound

- Frequency range: 7–40,000 Hz
- Speaker diameter: 9.2 mm + BA driver
- Impedance: 16 Ohm
- Maximum power input: 5 mW
- Sensitivity: 100 dB (1 KHz -10 dBFs)
- Driver type: Graphene coated, Balanced Armature
- Hi-Res Audio

## Connectivity

- Bluetooth version: 5.3
- Wireless
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: LDAC, AAC, SBC, LC3
- Type of wireless transmission: Bluetooth

## Outer Carton

- Length: 35 cm
- Number of consumer packages: 24
- Width: 26 cm
- Gross weight: 4.8 kg
- Height: 27.5 cm
- GTIN: 1 48 95229 13173 3
- Net weight: 2.352 kg
- Tare weight: 2.448 kg

## Convenience

- Automatic power off: 60 minutes
- Water resistance: IPX4
- Philips Headphones app support
- Mono mode for TWS
- Firmware updates possible
- Type of controls: Touch
- Google Fast Pair
- Google Hotwords
- Capacitive sensor

## Inner Carton

- Length: 16.2 cm
- Number of consumer packages: 3
- Width: 11.8 cm
- Height: 12.2 cm
- Net weight: 0.294 kg
- Gross weight: 0.55 kg
- Tare weight: 0.256 kg
- GTIN: 2 48 95229 13173 0

## Power

- Rechargeable
- Number of batteries: 3 pcs
- Charging time: 2 hour(s)
- Wireless charging
- Music play time (ANC on): 36 hour(s)
- Music play time (ANC off): 40 hour(s)
- Fast charging time: 10 mins for 1.5 hr
- Battery type (Charging case): Lithium Polymer

- (built-in)
- Battery type (Earbud): Lithium Polymer (built-in)
- Battery weight (Total): 11.5 g
- Battery capacity (Case): 650 mAh
- Battery capacity (Earbud): 75 mAh
- Battery life standby time: 200 hr

## Packaging dimensions

- Height: 13 cm
- Packaging type: Carton
- Type of shelf placement: Hanging
- Width: 11 cm
- Depth: 5 cm
- Number of products included: 1
- EAN: 48 95229 13173 6
- Gross weight: 0.159 kg
- Net weight: 0.098 kg
- Tare weight: 0.061 kg

## Accessories

- Quick Start Guide
- Eartips: 5 pairs
- Charging case
- Charging cable: USB-C cable, 200 mm

## Design

- Colour: Black
- Ear coupling material: Silicone
- Ear fitting: In-ear
- In-ear fitting type: Silicone ear-tip

## Telecommunication

- Microphone for call: 2 AI mics
- Wind noise reduction
- Voice Pick-Up (VPU) sensor

## Dimensions

- Charging case dimension (W x D x H): 2.96 x 6.45 x 4.27 cm
- Earbud dimension (W x D x H): 2.16 x 2.65 x 2.65 cm
- Total weight: 0.076 kg

## UPC

- UPC: 8 40063 20322 8

## ANC features

- ANC technology: Hybrid, ANC Pro+
- Awareness mode
- Adaptive ANC
- Microphone for ANC: 4 mic
- ANC (Active Noise Canceling)

## Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Manual
- Voice assistant support



Issue date 2024-03-24

Version: 5.5.1

EAN: 48 95229 13173 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Google is a trademark of Google LLC. The Google Assistant is not available in certain languages and countries.

\* Requires a software update. The Philips Headphones app will notify you when the latest software version is available.