

# PHILIPS

Over-ear wireless  
headphones

Fidelio

Exquisite natural sound

Noise Cancelling Pro+

Superior call quality

Timeless Fidelio design



L4

## Crafted for escape

Explore new musical worlds from the comfort of anywhere. These audiophile-grade wireless headphones blend exquisite Fidelio sound with smart noise control and a superlative fit, for sublime listening at home or on the go.

### Seamless in every way

- Seamless control with auto pause and multipoint
- Philips Headphones app. Customise your experience
- Google Assistant. Google Fast Pair

### Exquisite natural sound at home or on the go

- Detachable cable. AAC, LDAC codecs supported
- Superb sound from any source. Wireless or wired
- 40 hours play time (50 with NC turned off)

### Philips Fidelio. Crafted for listeners.

- Graphene-coated drivers and spatial audio
- Exquisite. Philips sound signature for Fidelio
- Immersion that adapts to you. Noise Cancelling Pro+
- Superior call quality. Every word is loud and clear
- Timeless Fidelio design

# Highlights

## Philips sound signature




From the taut, controlled bass to the warm mids and sparkling highs, these superb headphones bring you exquisite natural sound with precise instrument separation. Graphene-coated dynamic drivers paint more detail than ever. You'll hear the tracks your favourite artists made—just the way they made them.

## Noise Cancelling Pro+



Adaptive noise cancelling quickly adjusts to your environment to suppress outside noise, including wind, in real time. Music to calls, you can immerse yourself wherever you are without lifting a finger. If you do want to adjust the level of transparency or wind-noise reduction, simply use the Philips Headphones app.

## Superior call quality

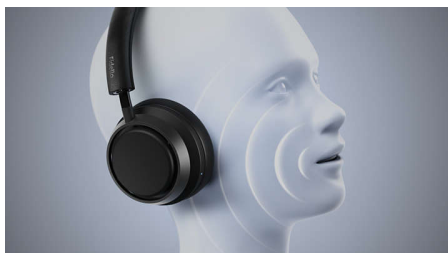


Beamforming mics focus on the sound of your voice while advanced AI algorithms stop background noise from ruining the call. You can happily make calls from the busiest, noisiest locations: the person you're talking to will hear you clearly, and you'll hear them.

## Timeless Fidelio design



Elegant. Assured. Supremely wearable. Whether it's the rounded headband, with dark satin aluminium ear-cup rings and Muirhead leather accents. Or the way these over-ear headphones feel: smaller and lighter, with cushioned memory-foam ear cups that exert a gentle, even pressure on the side of your head.

## Superb sound from any source

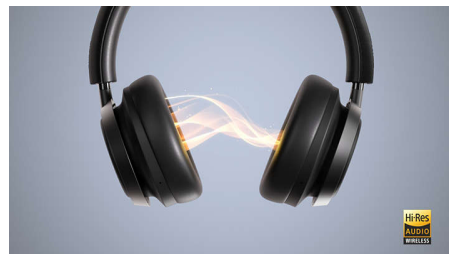

These headphones give you options. For the best sound when streaming on iOS or Android devices, AAC and LDAC codecs are supported. For wired listening, the detachable cable (included) lets you plug into a DAC, headphone amp or laptop. You can also use a USB-C cable to plug into any phone with a USB-C port.

## 40 hours play time (with NC)




You get well over a day of listening even if you have noise cancellation turned on. A full charge takes just 2 hours via USB-C, and a quick 15 minute charge gives you an extra 14 hours. When you're not listening, these headphones fold flat to fit in their storage case.

## Seamless control




There are touch controls and buttons on the ear cups, and the music pauses if you take the headphones off. Advanced Bluetooth multipoint lets you seamlessly switch back and forth between two devices: listen to music on your laptop, take a call on your phone, and go back to your music automatically.

## Philips Headphones app

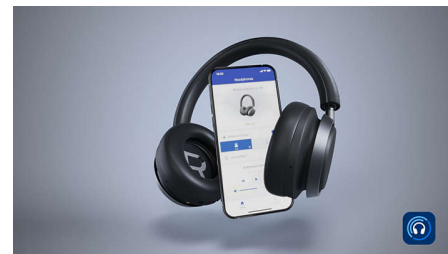

Turn on a subtle spatial audio effect that mimics the experience of listening to stereo speakers. Or turn off adaptive noise cancelling and take control of the levels yourself. For music and podcasts, the app's custom multi-band equalizer lets you fine-tune frequencies to suit the source equipment you're using.

## Google Assistant

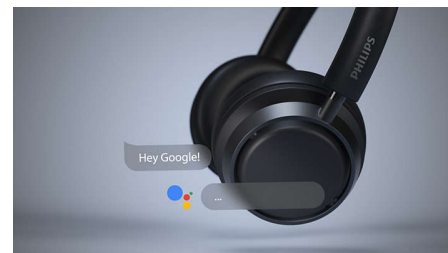

The Google Assistant is fully integrated, so you can simply say "Hey Google" and then ask it anything. Google Fast Pair lets you pair to a compatible Android device with a single tap: if you lose your headphones, you can call them and they'll ring!

# Specifications

## Sound

Frequency range: 7 - 40,000 Hz  
Speaker diameter: 40 mm  
Impedance: 16 Ohm  
Maximum power input: 30 mW  
Sensitivity: 99 dB (1 KHz -10 dBFs)  
Driver type: Graphene coated  
Hi-Res Audio

## Connectivity

Bluetooth version: 5.3  
Bluetooth profiles: A2DP, AVRCP, HFP  
Detachable cable  
Maximum range: Up to 10 m  
Multipoint connection  
Supported codec: AAC, LDAC, SBC  
Type of wireless transmission: Bluetooth  
Headphone socket: 2.5 mm  
USB audio support

## Outer Carton

Length: 24.2 cm  
Number of consumer packages: 3  
Width: 22.6 cm  
Gross weight: 3.4 kg  
Height: 25 cm  
GTIN: 1 48 95229 13174 0  
Net weight: 1.71 kg  
Tare weight: 1.69 kg

## Convenience

Automatic power off  
Volume control  
Philips Headphones app support

Google Fast Pair  
Auto pause (IR sensor)  
Firmware updates possible  
Type of controls: Touch

## Power

Rechargeable  
Number of batteries: 1 pcs  
Charging time: 2 hour(s)  
Music play time (ANC on): 40 hour(s)  
Music play time (ANC off): 50 hour(s)  
Fast charging time: 15 mins for 14 hrs  
Battery weight (Total): 15 g  
Battery capacity (Headphones): 800 mAh  
Battery type (Headphones): Lithium-ion (built-in)

## Packaging dimensions

Height: 25.5 cm  
Packaging type: Carton  
Type of shelf placement: Hanging  
Width: 21 cm  
Depth: 7.4 cm  
Number of products included: 1  
EAN: 48 95229 13174 3  
Gross weight: 0.88 kg  
Net weight: 0.57 kg  
Tare weight: 0.31 kg

## Product dimensions

Height: 5.3 cm  
Width: 21.4 cm  
Depth: 20.9 cm  
Weight: 0.33 kg

## Accessories

Others: 1 pcs hard carrying case  
Audio cable: 2.5-3.5 mm stereo cable, L=1.2 m  
Quick Start Guide  
Charging cable: USB-C cable, 200 mm

## Design

Colour: Black  
Wearing style: Headband  
Foldable design: Flat  
Ear coupling material: Synthetic leather  
Ear fitting: Over-ear  
Earcup type: Closed-back

## Telecommunication

Microphone for call: 2 AI mics

## UPC

UPC: 8 40063 20320 4

## ANC features

ANC technology: Hybrid, ANC Pro+  
Awareness mode  
Adaptive ANC  
ANC (Active Noise Cancelling)

## Voice assistant

Voice assistant compatible: Apple Siri, Google Assistant  
Voice assistant activation: Press Voice Assistant button  
Voice assistant support

