

Philips
DVD player

HDMI 1080p

DivX Ultra Karaoke

DVP3980K



A new experience in high definition video

Also enjoy karaoke scoring

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Brings audio and video to life

- Progressive Scan component video for optimised image quality
- HDMI 1080p upscales to high definition for sharper pictures

Easy to set up and use

- EasyLink for easy control of connected devices via HDMI CEC

Enjoy enhanced karaoke

- Karaoke scoring for fun and exciting song contests at home

Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays DivX, MP3, WMA and JPEG digital camera photos


Brings video to life

- HDMI digital output for easy connection with only one cable
- High definition JPEG playback for images in true resolution

PHILIPS
sense and simplicity

Highlights

Progressive Scan

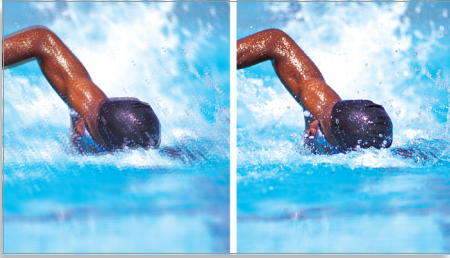

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, it writes both fields at the same time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

DivX Ultra Certified




With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra combines DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Karaoke scoring



Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.

Plays it all

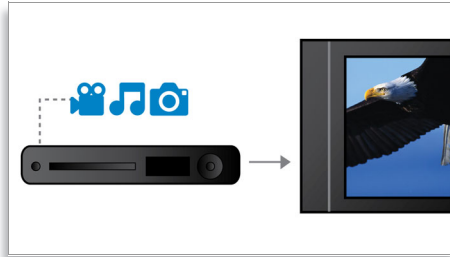

Play virtually any media format you want - whether it is DivX, MP3, WMA or JPEG. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

HDMI for simple AV connection



HDMI stands for High Definition Multimedia Interface. It is a direct digital connection that

can carry digital HD video as well as digital multi-channel audio. By eliminating the conversion to analogue signals it delivers perfect picture and sound quality, completely free from noise. HDMI is fully backwards-compatible with DVI (Digital Video Interface).

High definition JPEG playback

High definition JPEG playback lets you view your pictures on your television in resolutions as high as two megapixels. Now you can view your digital pictures in absolute clarity, without loss of quality or detail - and share them with friends and family in the comfort of your living room.

HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive Scan, Video Upscaling (720p, 1080i/p)

Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: >90
- Distortion and Noise (1 kHz): >65 dB
- Crosstalk (1 kHz): >70 dB
- Dynamic Range (1 kHz): >80 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX Ultra
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, Dolby Digital, PCM, WMA

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD

- Picture compression format: JPEG
- Picture enhancement: Rotate, Zoom, Slideshow

Connectivity

- Front/Side connections: Microphone
- Rear Connections: Analogue audio Left/Right out, Component Video out Progressive, Composite video (CVBS) output, Digital coaxial out, HDMI output

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Korean, Malay, Thai, Traditional Chinese
- Karaoke: MIC volume

Power

- Power consumption: < 10 W
- Standby power consumption: < 1.0 W
- Power supply: 110-240V, 50/60 Hz

Accessories

- Included Accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, User manual, Power cord, Quick start guide, Warranty Leaflet

Dimensions

- Packaging dimensions (W x H x D): 415 x 82 x 282 mm
- Set dimensions (W x H x D): 360 x 37 x 209 mm

Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3, DivX



Issue date 2009-05-13

Version: 2.0.4

12 NC: 8670 000 41715
EAN: 87 12581 43809 8

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com