

Philips
DVD player with HDMI
1080p



DVP3880

Get sharper, clearer pictures

with HDMI 1080p

Be impressed with this Philips DVD player with HDMI digital video and audio connection. Step into another home entertainment arena as you immerse yourself with High Definition video (720p/1080i/1080p).

Bring audio and video to life

- HDMI 1080p upscales to high definition for sharper pictures
- CinemaPlus for better, sharper and clearer images

Play all your movies and music

- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- ProReader Drive for smooth playback on virtually any disc
- DivX Ultra Certified for enhanced DivX video playback

Easy to use

- EasyLink to control all HDMI CEC devices via a single remote

PHILIPS

Highlights


HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Multimedia DivX

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

CinemaPlus

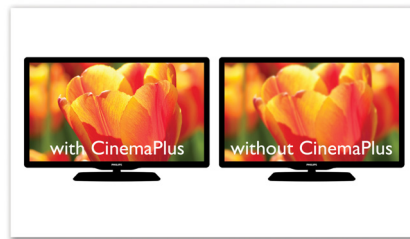

Feast your eyes on images that are razor sharp and a match for reality. An intelligent algorithm, CinemaPlus goes right down to each pixel in each frame, analyzing it before optimizing sharpness and color stability. The results are obvious - you get to see more details, pictures become crystal clear and everything looks superbly natural. Movie nights will never be the same again.

ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.



Specifications

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling, High Def (720p, 1080i, 1080p), Smart Picture, Video upscaling, Video Upscaling(720p, 1080i/p)

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1kHz): 65 dB
- Crosstalk (1kHz): 70 dB
- Dynamic Range (1kHz): 80 dB
- Sound System: Dolby Digital, DTS

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD+R/+RW, DVD-R/-RW, DivX, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, WMV
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- Compression format: PCM, MP3, Dolby Digital, WMA, DTS
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD

- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom, High Definition Resolution, Slideshow with MP3 playback

Connectivity

- Rear Connections: Composite video (CVBS) output, Digital coaxial out, ComponentVideo out Progressive, Analog audio Multi-channel out, HDMI output

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Russian

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 12 W
- Standby power consumption: < 1 W

Accessories

- Included accessories: Audio/Video cable, Quick start guide, World Wide Warranty leaflet, Remote Control, User Manual, Warranty Leaflet, AAA Battery (x1)

Dimensions

- Set dimensions (W x H x D): 360 x 39 x 209 mm
- Packaging dimensions (W x H x D): 400 x 80 x 282 mm
- Set weight: 1.4 kg

Multimedia Applications

- Playback Formats: DivX, JPEG Still pictures, MP3



Issue date 2015-04-02

Version: 4.3.4

12 NC: 8670 000 70556
EAN: 87 12581 57778 0

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com