




Philips Streamium
Network Music Player
with FullSound™

Free internet radio
Full color display

Streamium

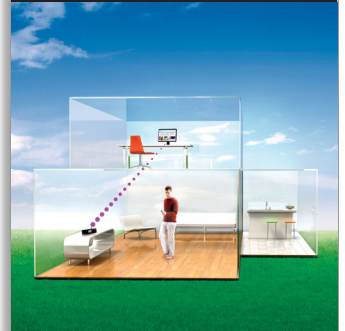

NP2900

Free your music

Enjoy music from PC and Internet - wirelessly

Philips Streamium network music player NP2900 with its built-in speakers gives you wireless access to your PC music and internet radio - all delivered by the immersive LivingSound and superb FullSound technologies.

Unlimited listening pleasure - wirelessly

- Thousands of free Internet Radio Stations
- Wireless music playback from PC/Mac

Easy navigation and control

- Easy and intuitive user interface with album art display
- Alphanumerical search for speedy access
- Large screen and remote control

Quality sound performance

- LivingSound for wider, immersive stereo sound
- Fullsound™ to bring your MP3 music to life
- 4-speaker system for superb sound
- 30W RMS



asimpleswitch.com

PHILIPS

Highlights

Free internet radio stations

Streamium comes with thousands of free Internet radio stations. Now you can stay abreast of all kind of music worldwide.

Connect your Streamium to the Internet and listen to your favorite online programs on your audio system without having to turn on your PC.

LivingSound

Philips' patent-pending LivingSound vastly expands the sweet spot (the ideal listening location in your room) so you can enjoy truly immersive music over a wider area. Combining various sound processes, LivingSound recovers the richness and spatial details of the soundstage that are often lost with a compact stereo system. The effect is a larger than expected sweet spot - one that is extensively

and evenly distributed around the room. Now your music enjoyment is not confined to the traditionally narrow area anymore. Enjoy optimum stereo sound in a wider area.

FullSound™

Philips' innovative FullSound technology faithfully restores sonic details to compressed MP3 music, dramatically enriching and enhancing it, so you can experience CD music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice and instrument clarity, and rich detail. Rediscover your compressed

MP3 music in true-to-life sound that will touch your soul and move your feet.

Wireless music playback

Free your entire music collection from your PC/Mac with the Streamium Network music player! With the UPnP connection that lets you connect to any Universal Plug & Play-enabled device to receive or transmit music; the Streamium enables you to access, select and search your music collection in your comp. Just use the remote control and choose your songs through the Streamium. Enjoy your favorite music wirelessly, effortlessly and with great sound quality. Philips' patented FullSound technology brings the CD listening experience to MP3 while LivingSound produces a wider, immersive stereo sound.



Specifications

Sound

- Equalizer settings: Classic, Jazz, Pop, Rock
- Music Power: 30 W
- Sound Enhancement: Equalizer, Dynamic Bass Boost
- Type: FullSound, LivingSound
- Volume Control: Volume Control up/down

Audio Playback

- Compression format: MP3, WMA, non DRM AAC (m4A), eAAC+, FLAC, Ogg Vorbis
- ID3-tag support
- PC Link playback mode: MP3 streaming via network, Wi-Fi wireless connection
- Internet Radio
- MP3 bit rates: 8-320 kbps and VBR
- WMA bit rates: up to 192kbps, CBR/VBR

Connectivity

- LAN wired: Ethernet (RJ 45) 1x
- Other connections: Digital coaxial out
- Wireless connection: Wireless LAN(802.11g), Wireless LAN(802.11b)
- Wireless Universal Plug & Play: Enabled
- Encryption / security: WEP 128 bit, WEP 64 bit, WPA, WPA2
- Audio Connections: Analogue Audio In (L/R)
- Headphone: 3.5 mm
- Power: 110-230V

Convenience

- Backlight
- Backlight color: White
- Clock: On main display
- Display Type: LCD

- Eco Power Standby: 1 watt
- On-Screen Display languages: Dutch, English, French, German, Italian, Spanish
- Signal strength indication
- Display Enhancements: Brightness Control
- Headphone jack
- Indications: DIM mode
- Remote control: 1-Way
- Alarms: Buzzer Alarm, Sleep timer
- OSD Languages: Portuguese, Swedish
- Wall mountable / Ceiling Throw: Wallmountable

Accessories

- AC/DC Adaptor: 110-240V
- Batteries: 2x AAA
- CD-ROM: CD-ROM with TwonkyMedia, Video Tutorial and manuals
- Included accessories: Wall mounting bracket
- Quick start guide: English, French, German, Spanish, Italian, Dutch, Norwegian, Swedish, Finnish, Portuguese, Danish, Russian
- Remote control: 1-way Remote
- User Manual: English, French, German, Spanish, Italian, Dutch, Norwegian, Swedish, Finnish, Portuguese, Danish, Russian (in CD)
- Warranty Card: Warranty Card

Dimensions

- Product dimensions (WxDxH): 346.5 x 69 x 99 mm
- Set weight: 1.48 kg

Loudspeakers

- Loudspeaker types: Non-detachable
- Built-in speakers: 4



Issue date 2022-06-03

Version: 7.11.10

12 NC: 8670 000 40319
EAN: 87 12581 42838 9

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Some features require broadband internet access support
* Some services are not available in all areas