

Always there to help you

Register your product and get support at
www.philips.com/welcome



Pi3100



User manual

PHILIPS

Contents

1	Important safety information	3		
	General maintenance	3		
	Notice	4		
	Written Offer	5		
2	Your new tablet	6		
	What's in the box	6		
	Files loaded on the device	6		
	Overview	6		
	Controls	6		
	Home screen	7		
3	Get started	8		
	Charge power	8		
	Conserve battery power	8		
	Switch the device on or off	8		
4	Basics	9		
	Find apps	9		
	Use the screen	10		
	Switch screen rotation on or off	10		
	Lock/ unlock the screen	10		
	Customize the Home screen	10		
	Add application icons and widget	10		
	Delete items	10		
	Relocate items	10		
	Add wallpapers	11		
	Text entry	11		
	Select input methods	11		
	Enter text	11		
	Edit text	11		
5	Connections	13		
	Connect to the Internet	13		
	Connect to your PC	13		
	Use a Micro SD card	14		
	Move apps to the SD card	14		
	Connect to an HDTV	14		
6	Apps	16		
	Install apps	16		
	HiMarket	16		
	Other sources	16		
	Manage apps	16		
7	SimplyShare: Connect to your home network	18		
	Share media on your home network	18		
	Control the media play remotely	19		
8	Browser	20		
	Add a bookmark	20		
9	Email	21		
	Set up your email account	21		
	Select account settings	21		
	Check your email messages	21		
	Compose email messages	22		
	Organize email messages	22		
10	Tools	23		
	Camera	23		
	Take photos or record videos	23		
	Calendar	23		
	Alarm clock	23		
	Calculator	24		
11	Use the device in corporate networks	25		
	Install secure credentials	25		
	Set up your Microsoft Exchange account	25		
	Add VPN	25		
12	Settings	27		
	WIRELESS & NETWORKS	27		
	Wi-Fi	27		
	Airplane mode	27		
	VPN settings	27		
	Portable hotspot	27		
	DEVICE	27		
	HDMI	27		
	Sound	27		
	Display	28		

Storage	28
Battery	28
Apps	28
PERSONAL	28
Location services	28
Security	28
Language & input	29
reset	29
ACCOUNTS	29
SYSTEM	30
Date & time	30
Accessibility	30
About tablet	30

13 Check for firmware update	32
Update the firmware online	32

14 Technical data	33
PC system requirements	34

Need help?

Please visit

www.philips.com/welcome

where you can access a full set of supporting materials such as the user manual, the latest software updates, and answers to frequently asked questions.

1 Important safety information

General maintenance

The translation of this document is for reference only.

In the event of any inconsistency between the English version and the translated version, the English version shall prevail.

Caution

- To avoid damage or malfunction:
- Use only power supplies listed in the user manual.
- Do not expose the product to excessive heat caused by heating equipment or direct sunlight.
- Do not drop the product or allow objects to fall on your player.
- Do not allow the product to be submerged in water. Do not expose headphone socket or battery compartment to water; as water entering the set may cause major damage.
- Active mobile phones in the vicinity may cause interference.
- Back up your files. Ensure that you retain the original files you have downloaded to your device. Philips is not responsible for any loss of data if the product becomes damaged or not readable / legible.
- Manage (transfer, delete, etc.) your music files only with the supplied music software to avoid problems.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the product.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

About operating and storage temperatures

- Operate in a place where temperature is always between 0 and 45°C (32 to 113°F)

- Store in a place where temperature is always between -20 and 45°C (-4 to 113°F).
- Battery life may be shortened in low temperature conditions.

Replacement parts/accessories:

Visit www.philips.com/support to order replacement parts/accessories.

Hearing Safety



Listen at a moderate volume:

Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.

Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

Set your volume control at a low setting.

Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.

Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

Listen at reasonable volumes for reasonable periods of time.

Be careful not to adjust the volume as your hearing adapts.

Do not turn up the volume so high that you can't hear what's around you.

You should use caution or temporarily discontinue use in potentially hazardous situations.

Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Modifications

Modifications not authorized by the manufacturer may void user's authority to operate the product.

Copyright information

All other brands and product names are trademarks of their respective companies or organizations.

Unauthorized duplication of any recordings whether downloaded from the Internet or made from audio CDs is a violation of copyright laws and international treaties.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

The Windows Media and the Windows logo are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Be responsible! Respect copyrights.



**Be responsible
Respect copyrights**

Philips respects the intellectual property of others, and we ask our users to do the same. Multimedia content on the internet may have been created and/or distributed without the original copyright owner's authorization. Copying or distributing unauthorized content may violate copyright laws in various countries including yours.


Compliance with copyright laws remains your responsibility.

The recording and transfer to the portable player of video streams downloaded to your computer is intended only for use with public domain or properly licensed content. You may only use such content for your private, non-commercial use and shall respect eventual copyright instructions provided by the copyright owner of the work. Such instruction may state that no further copies shall be made. Video streams may include copy protection technology that prohibits further copying. For such situations the recording function will not work and you will be notified with a message.

Data logging

Philips is committed to improving the quality of your product and enhancing the Philips user experience. To understand the usage profile of this device, this device logs some info / data to the non-volatile memory region of the device. These data are used to identify and detect any failures or problems you as a user may experience while using the device. The data stored, for example, will be the duration of playback in music mode, duration of playback in tuner mode, how many times battery low was encountered, etc. The data stored do not reveal the content or media used on the device or the source of downloads. The data stored on the device are retrieved and used ONLY if the user returns the device to the Philips service center and ONLY to simplify error detection and prevention. The data stored shall be made available to user on user's first request.

Notice

This product is partly based on Open Source software. The license text and acknowledgment can be retrieved from the device under  > About tablet > Legal information.

Written Offer

Philips Electronics Hong Kong Ltd. hereby offers to deliver; upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact open.source@philips.com. If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven, The Netherlands." If you do not receive timely confirmation of your letter; please email to the email address above.

2 Your new tablet

What's in the box

Make sure that you have received the following items:

Pi3100



USB power adapter



USB cable



Quick start guide



Safety and Warranty sheet



Note

- The images serve as reference only. Philips reserves the right to change color/design without notice.


Files loaded on the device



The following files are loaded on **Pi3100**:

- User manual

Overview

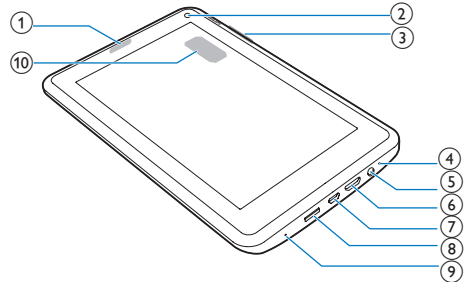Controls



- 1 Power/ lock button**
 - Press and hold: switch on or off the device.
 - Press: lock/unlock the screen; To unlock the screen, drag the lock to an icon.
- 2 Front camera lens**
- 3 +, -**
 - Press: increase/decrease the volume.
 - Press and hold: increase/decrease fast.
- 4 MIC**
 - Microphone
- 5 **
 - 3.5-mm headphone connector
- 6 MINI HDMI**
 - connector for the audio/ video output to a high-definition TV (HDTV)
- 7 **
 - USB connector for data transfer and power charging
- 8 MICRO SD**
 - Slot for Micro SD card
- 9 RESET**
 - Press the hole by using the tip of a ball pen when the screen does not respond to the pressing of keys.

⑩ Speaker

Home screen



- ① **Browser:** Browse Web pages.
⊞ **APPS/WIDGETS:** List all apps or widgets.
⚙ **Settings:** Customize the settings of Pi3100.
- ② **⏠:** Tap to return to the Home screen.
⏪ : Go back one level.
📄 : Display recent applications that you have accessed.
⋮ (for some apps): View the options menu.
- ③ **Google Search**
 - 🔍 : Use the quick search box to search on **Pi3100** or the Web.
- ④ **Notifications, time, setup status**
 - Drag down the bar to check the details and select setup options.

3 Get started


- ① Go to **☰** > Wi-Fi.
- ② At the top bar, select **☰** > Advanced > Keep Wi-Fi on during sleep. Select Never.

Charge power

Pi3100 has a built-in battery that can be charged through the USB connector of the supplied USB power adapter.

The first time you use **Pi3100**, charge **Pi3100** for more than eight hours.

- By using the USB cable, connect **Pi3100** to the supplied USB power adapter.

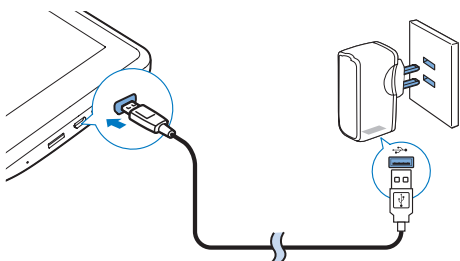

☰ Note

- Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.

Conserve battery power

- To conserve battery power and increase the play time, do the following:

Use the sleep mode

After the selected time duration, **Pi3100** goes to the sleep mode, and the screen switches off automatically. To save battery power, do the following:

- Go to **☰** > **Display** > **Sleep** to set the screen-off timer to a low value.
- To switch off Wi-Fi during the sleep mode,





Switch the device on or off

Press and hold the power/ lock button until the device is switched on or off.

4 Basics

Find apps

Navigate on the Home screen to find an app:

- Swipe left/ right to select a page;
- Alternatively, tap  to open the list of apps. Swipe left/ right to scroll through the list;
- Use the navigation buttons  /  to switch between screens. Tap  to go to the apps that you have accessed recently.

Tip

- On **Pi3100**, you can install apps from the HiMarket or other sources.



安卓市场 :

- Download different apps, games, and others.



Baidu Input:

- Set Baidu Input as the default input method, or select your options of Baidu Input.



Music:

- Play music that you store on **Pi3100**.



Gallery:

- View pictures and videos that you store or make on **Pi3100**.



Camera:

- Take photos or record videos.



HDMI Switch:

- Select the HDMI output options for your **Pi3100**. Select the resolution that your TV supports.



Browser:

- Browse Web pages.



Search:

- Search on **Pi3100** or the Web.



Downloads:

- View the list of your downloads from the Web.



SimplyShare:

Through a Philips HD media player, stream media play from **Pi3100** to a high-definition TV(HDTV).



Settings:

- Customize the settings of **Pi3100**.



ES File Explorer:

- Browse the files/ folders on **Pi3100**, install apps, and manage files.



- **Email:**Set up your email account on **Pi3100**.



Calendar:

- Add events, and set reminders for your events.



Clock:

- Set the alarm clock.



Calculator



多米音乐 : Online music service



QQ : Social networking service



QQ游戏 : Online games



91熊猫看书 : Online book store



微博 : Social networking service



新浪新闻 : News portal





京东商城 : Online shopping service

Use the screen

Switch screen rotation on or off

- 1 Drag down the top bar.




- 2 In the pull-down menu, tap  /  to switch screen rotation on or off.

Lock/ unlock the screen

By locking the screen, you can lock all the touch controls on the screen. Thus, undesired operations are prevented.

Auto lock


After a time duration, the screen dims and is locked automatically. To set the time duration, go to  > **Display** > **Sleep**.

To lock the screen manually

- Press the power/ lock button.

To unlock the screen

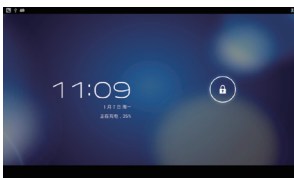

- 1 If necessary, press the power/ lock button to display the lock.
- 2 Drag the lock to an icon.



Customize the Home screen

To access functions quickly from the Home screen, you can add and rearrange items.

Add application icons and widget

- 1 Swipe left/ right to select a page.
 - If necessary, tap  to return to the Home screen.
 - Make sure that the page isn't filled.
 - Tap . Tap **APPS** or **WIDGET** to open the list of apps or widgets.
- 2 Tap and hold an icon or widget until the page is displayed.
 - ↳ The icon or widget is added to the selected page.

Delete items

- 1 Tap and hold an item to unlock.
- 2 Drag the item to **x**.



Relocate items

- 1 Tap and hold an item to unlock.
- 2 Drag the item to a space on the page.
- 3 Release the item.
 - ↳ The item moves to the space.

Add wallpapers

- 1 From the Home screen, go to **Display > Wallpaper**.
- 2 Select your options.

Text entry

With the onscreen keyboard, you can enter text in multiple languages.

Select input methods

- 1 From the Home screen, select **Settings > Language & input**.
- 2 Select your input methods:
 - Android keyboard:** for multiple languages other than Chinese
 - Baidu input:** for Chinese input through handwriting recognition, stroke, and Pinyin, and English input
 - Google Pinyin:** for Chinese Pinyin input and English input

To use Baidu input,

- 1 Select **Baidu input** in Step 2 above.
- 2 Tap **𠄎** next to the input method.
- 3 Follow the onscreen instructions to set **Baidu input** as the default input method.



Enter text

- 1 Tap the text box to show the onscreen keyboard.

- 2 Select text input modes as needed.



- 3 Tap keys or drag on the screen to enter text.

To delete the entry before the cursor,

- Select **<X>**.

To move to the next line,


- Select **↵**.

Edit text

You can cut, copy, and paste the text that you have entered.

Select the text

- 1 Tap and hold the text until the pop-screen is displayed.
 - ↳ Current word is selected, with marks for start and end positions.
 - Tap **Select all** to select all the text.
- 2 Drag the marks to select or change the start/ end positions.

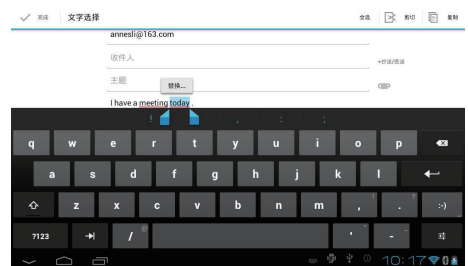


Copy or cut the selected text

- Tap **Copy** or **Cut**.
 - ↳ The selected text is copied or cut.

Paste the selected text

- 1 Put the cursor in a position.
- 2 Tap and hold the position until the pop-screen is displayed.
 - ↳ In the pop-up screen, the option **Paste** is displayed.
 - ↳ Tap **Paste**. The text is pasted in the selected position.

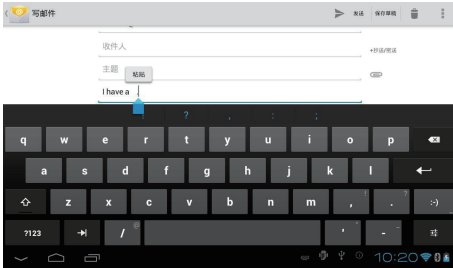


5 Connections


Connect to the Internet

Connect **Pi3100** to a wireless router (Access Point). You can connect **Pi3100** to the network that is built around the router.

To connect to the Internet, make sure that the router connects to the Internet directly and no dial-up is required on the computer.

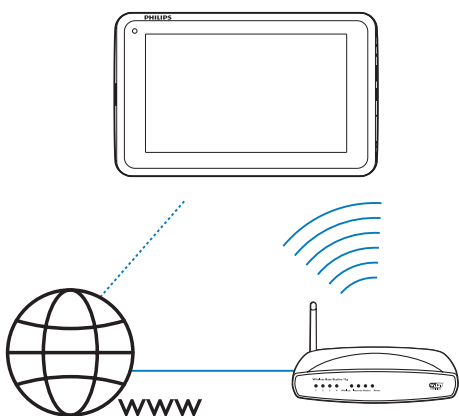

- 1 From the Home screen, tap **Settings** > **Wi-Fi**.
- 2 Select the option to switch on the Wi-Fi function.
↳ You see a list of Wi-Fi networks in range.

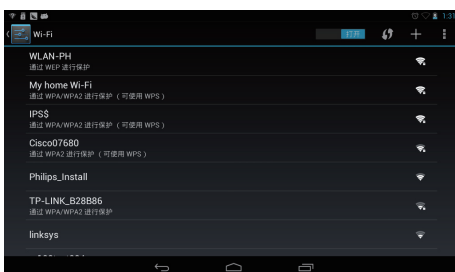

- 3 Connect **Pi3100** to a network:


- ① Tap to select a network.
- ② On the pop-up screen, enter the password to the network.
↳ **Wi-Fi** is displayed in the status bar when the Wi-Fi connection is completed successfully.
↳ Next time you switch on **Pi3100**, **Pi3100** connects to the previously connected network automatically.

Note

- If MAC address filtering is enabled on your router, add the MAC address of **Pi3100** to the list of devices that are allowed to join the network. To find the Wi-Fi MAC address, go to **Settings > About tablet > Status** on the Home screen.
- To refresh the list of networks, select **Scan** at the upper-right corner of the screen.
- If you have disabled SSID broadcasting or hidden the Service Set Identifier (SSID) of the router, manually enter the SSID or public name for the network. Go to **Settings > Wi-Fi**. On the top bar, select **+**.
- If the DHCP (Dynamic Host Configuration Protocol) is unavailable or disabled on the router, manually enter the IP address of **Pi3100**.

Connect to your PC

Connect **Pi3100** to a PC through the USB cable.

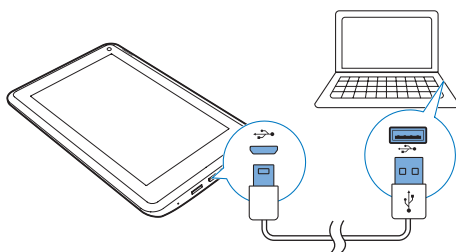

Do the following to transfer apps or media files from your PC to **Pi3100**, the internal storage or SD card:

- In Windows Explorer, drag and drop apps or media files from your PC to **Pi3100**.

- 1 Drag down the top bar to select **Mass storage** as the USB connection mode.



- 2 Turn on the **USB mass storage**.



- Alternatively, transfer media files to **Pi3100** through media management software, such as **Windows Media Player 11**.

Drag down the top bar to select **Media device (MTP)** as the USB connection mode.




Tip

- You can also select the mode of USB computer connection in **Settings > Storage**. On the top bar, tap > **USB computer connection**, and then, select **Mass Storage** or **Media device (MTP)**.

Use a Micro SD card

Insert a Micro SD card (up to 32 GB) into **Pi3100**. You can expand the memory size of **Pi3100**.

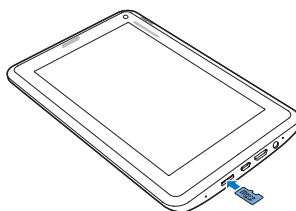



Move apps to the SD card

Move some apps from the internal storage to the SD card. You can expand the internal storage of **Pi3100** (see 'Manage apps' on page 16).

Connect to an HDTV


Connect **Pi3100** to a high-definition TV (HDTV). You can watch on the HDTV the photos and videos that play on **Pi3100**.

- 1 On **Pi3100**,
 - 1 Connect an **HDMI cable** (sold separately) to:
 - the **MINI HDMI** socket on **Pi3100**, and
 - the **HDMI** input socket on the TV.

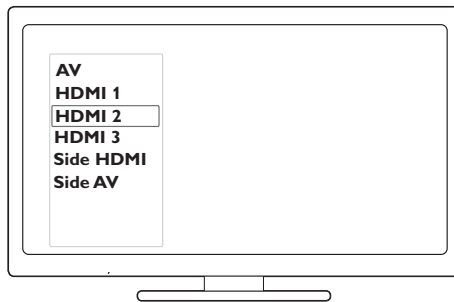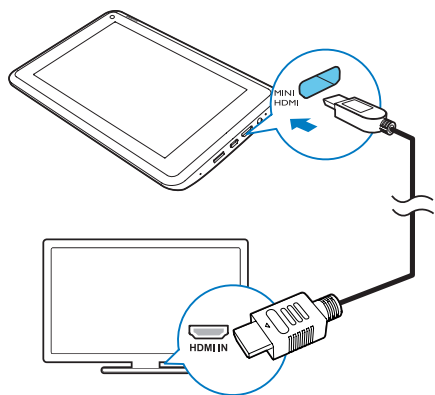

- ② Make sure that you have switched on the HDMI output:
Tap **Settings > HDMI**. Switch on **Enable auto switch**.

- 2 On the TV, switch to the input source of **Pi3100**:
- On the remote control of your TV, use the source button to select the input connector that connects to **Pi3100**.

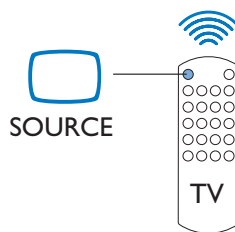

- 3 On **Pi3100**, tap **⊕ APPS > HDMI Switch**. Select the output resolution that your TV supports.
- On **Pi3100**, when the **MINI HDMI** connector is in use, press the **Power/lock** button to return to the previous screen.

Tip


- As a compact audio/video interface, HDMI transmits uncompressed digital data. With the HDMI connection, high-definition video/audio contents can present optimum video and audio quality on an HDTV.

6 Apps

With apps, you can access functions, services, and different audio/ video content on **Pi3100**.

Install apps




On **Pi3100**, you can install apps from

-  (安卓市场) over the Internet; or
- other sources, such as other online sources, the internal storage of **Pi3100**, and the Micro SD card that you have inserted into **Pi3100**.

Note


- HiMarket is an open platform for apps developers to promote their applications. Compatibility and quality of execution of apps in HiMarket may vary from developers to developers.

HiMarket

- 1 In , search for apps needed:
 - Tap  for search by category;
 - Tap  for keyword search.
- 2 Download the app:
 - Tap the app. Confirm as needed.
 - ↳ When the downloading is complete, installation starts automatically.
 - ↳ Check the status bar to find the status. If necessary, tap the icon to start installation as prompted.

Other sources

Allow the installation from unknown sources


- From the Home screen, go to  > **Security**. Tap to switch on **Unknown sources**.

- ↳ If the function is enabled, the tick box is selected.

Download/ transfer apps


- To download apps from online sources, follow the onscreen instructions;
- To transfer apps to the internal memory or SD card of the device, use the USB cable to connect **Pi3100** to your PC.


Start installation

- The downloaded apps start installation automatically;
- To find the apps that you have transferred to the internal memory or SD card, go to . Find the apps and tap the option to start installation.

Manage apps

You can manage the apps on **Pi3100**, for example, install/ uninstall apps, stop running apps, or select other options.


- 1 From the Home screen, select  **Settings** > **Apps**:
 - In **DOWNLOADED**, find the apps that you have downloaded from the HiMarket or other sources.
 - On **SD CARD**, find the apps that you have installed on the SD card.
 - In **RUNNING**, find the apps that are running on **Pi3100**.
 - In **ALL**, find all the apps that you have installed on **Pi3100**.
- 2 Tap an app.
 - ↳ Options and information are displayed.

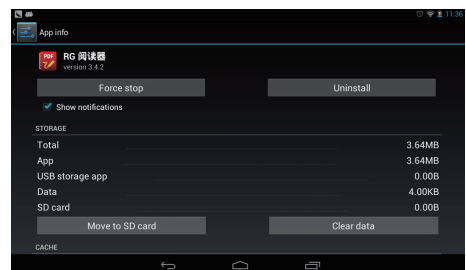

3 Tap to select an option.

7 SimplyShare: Connect to your home network

Connect Pi3100 to your home Wi-Fi network (see 'Connect to the Internet' on page 13). With **SimplyShare** and a Philips HD media player, you can stream media play from **Pi3100** to a high-definition TVs (HDTVs) or hi-fi audio systems.

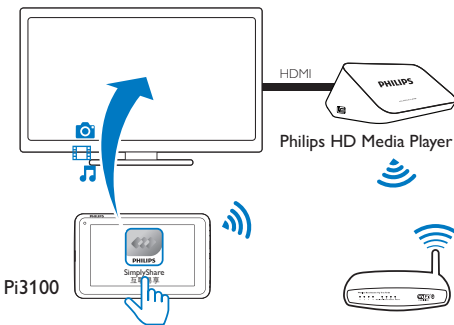

Note

- Make sure that the Philips HD media player supports the **SimplyShare** function.
- The Philips HD media player connects to an HDTV or hi-fi audio systems through an HDMI cable or AV cables.

Share media on your home network

- 1 Make sure that you have connected **Pi3100** to the same Wi-Fi network as your Philips HD media player:

- 2 From the Home screen, go to **SimplyShare**:


- ① The first time you launch **SimplyShare**, enter the activation code as prompted.

74963893



- ② Find **Pi3100** and the Philips HD media player on the network.

- 3 Select the Philips HD media player as the player:
 - Drag **Pi3100** to the device.
 - ↳ The device is selected as player.

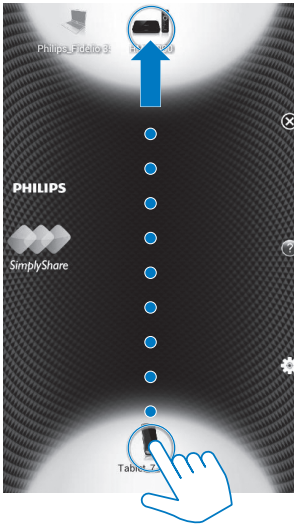


- 4 On **Pi3100**, find the media files that you want to play:
- Tap **Pi3100**.
 - ↳ You can find the music, photos, and videos that you store under the following folders on **Pi3100**: **Music**, **Pictures**, and **Videos**.
 - ↳ You can also find the photos and videos that you take or record on **Pi3100**.



- 5 Add media to the shared list:
- Tap **+** on the media file.
 - ↳ You play the selected files on the device.

Control the media play remotely

- On **Pi3100**, you can control the media that plays on the connected TV or audio system.
- During media play, swipe left/right on the screen to switch between the play screen and the shared list:

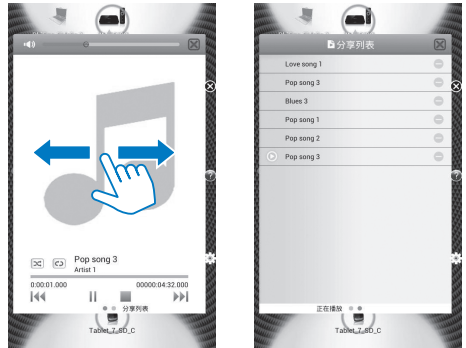


- On the play screen,
- Tap icons to select play options:



- || / ▶ Tap to pause/resume play.
- Tap to stop play.

- On the shared list,
- Tap **-** to remove the media file from the shared list.
 - Tap a media file to start play.

8 Browser

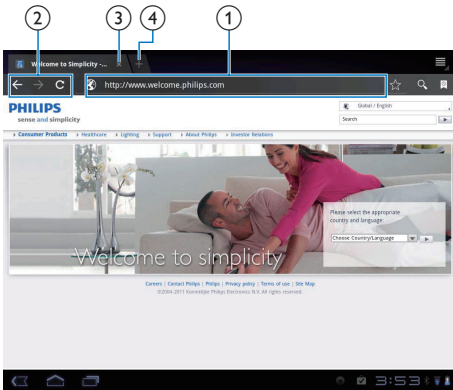
With , you can browse Web pages.



- 1 From the Home screen, tap .
- 2 Tap the icons or text box to do the following:
 - ① Enter the address of web pages. Tap  to start search.
 - ② Tap the icons to search backwards, forward, or refresh the Web page.
 - ③ Close the Web page.
 - ④ Open a new Web page.

To switch between Web pages,

- At the top bar, tap the tab of the selected Web page.

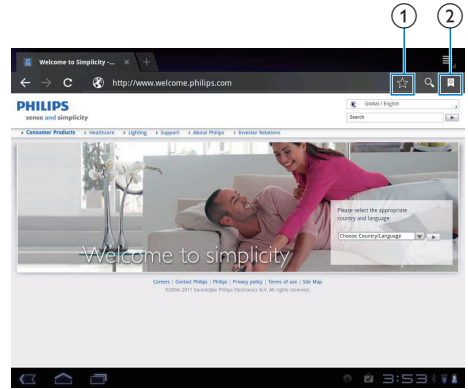

- ① Add a bookmark to current Web page.
- ② Go to the bookmarked Web pages.

Add a bookmark

Add a bookmark. You can quickly access a visited Web page.

9 Email

On **Pi3100**, you can receive and send email as you do on a computer. Do the following:


- Set up your email accounts on the device.

Set up your email account


On **Pi3100**, set up your email accounts in the following ways:





- Set up your POP3 or IMAP mail accounts, or
- Set up your Microsoft Exchange account to access your Exchange mailbox at work (see 'Set up your Microsoft Exchange account' on page 25).

Set up your POP3/ IMAP account

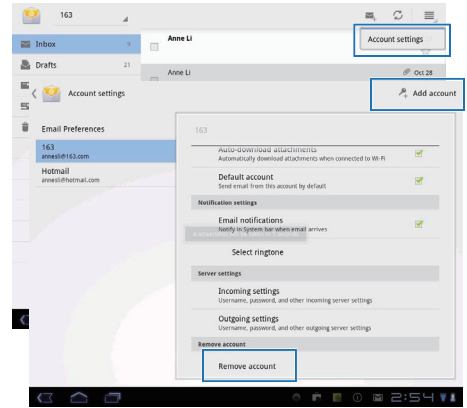
- 1 From the Home screen, go to .
- 2 Set up your email account:
 - Enter the information about your account;
 - Select pop3 or IMAP account.
- 3 Follow the onscreen instructions to complete the setup.
 - Consult your email service provider for the setup information, such as the outgoing server; incoming server.

Select account settings



- 1 On the screen of mail list, tap  > **Settings**.
 - ↳ A pop-up screen is displayed.
 - If necessary, tap  repeatedly to return to the screen of mail list.
- 2 Select your options for the account.
To add an account,
 - On  > **Settings**, tap **Add account**.
To remove an account,
 - On  > **Settings**, select **Remove account**.
 - ↳ Current account is removed.

Check your email messages

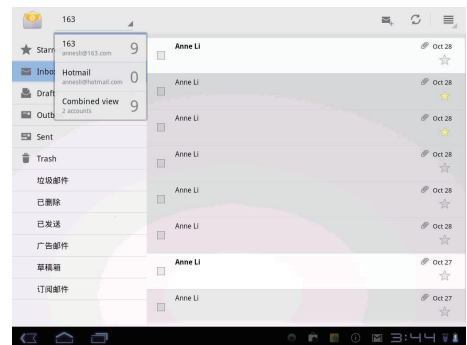


You can check your email messages in the following ways:

- Check one combined mailbox;

- Check messages by account;
- Check starred messages;
- Check unread messages.

To check one combined mailbox,

- 1 On the screen of mail list, tap the account name.
 - ↳ A drop-down list of account names is displayed.
 - If necessary, tap  repeatedly to return to the screen of mail list.

2 Tap **Combined view**.

- ↳ Different colors are used to mark the messages from different accounts.

To check messages from a single account,

- 1 Repeat **Step 1** in "To check one combined mailbox".

2 Tap the selected account.

- ↳ Messages from the account are displayed.

To check starred messages,

- Tap the star next to the message.
 - ↳ The message is added to the **Starred** folder.


To check unread messages,

- On the screen of mail list, the unread messages are in white.

When you read a message, tap the icons to do the following:

- ① **Compose a new message**
- ② **Reply**
- ③ **Reply all**
- ④ **Forward**

Organize email messages

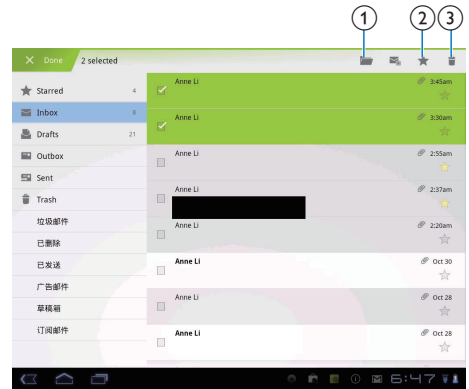


- 1 On the screen of mail list, select messages you want to manage:
 - Tap the check boxes next to the messages.
 - ↳ Selected messages are highlighted.

2 Tap the icons to do the following:

- ① **Move the messages to the selected folder.**
- ② **Add the messages to the Starred folder.**
- ③ **Delete the messages.**

Compose email messages

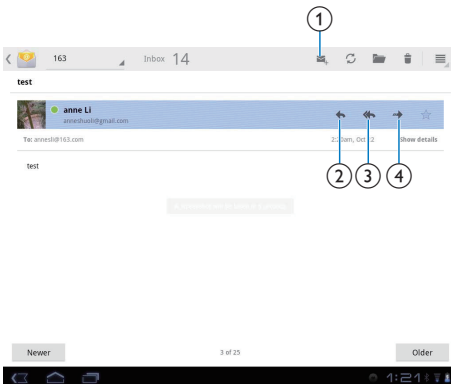


10 Tools


Camera

With the 0.3 Mega-pixel lens at the front, you can do the following on **Pi3100**:

- Shoot yourself by using the camera or video recorder;
- Through apps, have video chats with friends over the Internet.

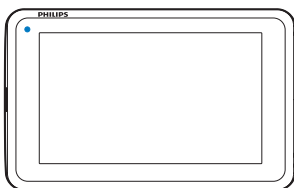

Take photos or record videos

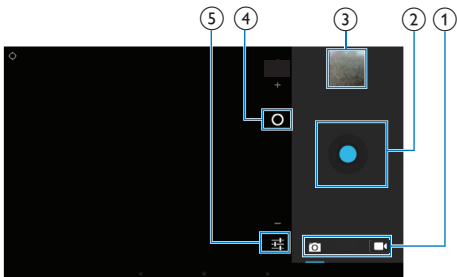

- ① Selector for camera, video recorder, or panorama mode
- ② Shutter
- ③ Thumbnail
- ④ Zoom in/out
- ⑤ Options menu

- 1 From the Home screen, go to .
↳ The onscreen buttons are displayed.
- 2 Tap or to switch to the camera or video recorder mode.

3 To take photos:

- ① Point the lens at objects.
- ② Tap .
- ③ The photo is taken.

To record videos:

- Tap / to start or stop video recording.

To view photos/ videos in the Gallery,

- Tap the thumbnail.
↳ You can view the photos/ videos that you have taken or recorded.

Select settings

- Tap to select your options for the camera or video recorder:

For the camera:

- **White balance**
Tap to select the option according to current source of lights. You can reduce the effects on colors by lights.
- **Exposure**
Tap to select a value according to the lighting conditions.

For the video recorder:

- **White balance**
Tap to select the option according to current source of lights. You can reduce the effects on colors by lights.
- **Time lapse recording**
Tap to record at the selected time interval.

Calendar


On the device, you can sync the calendar with:

- the calendar of your Microsoft Exchange account (see 'Set up your Microsoft Exchange account' on page 25).


Alarm clock

On **Pi3100**, you can set several alarms.

Set an alarm



- 1 Make sure that you have set the clock time (see 'Date 30').
- 2 From the Home screen, tap .
↳ The next alarm is displayed.



- 3 Tap .
↳ The set alarms are displayed.
- 4 To set an alarm clock,
 - To add an alarm, tap **Add alarm**.
 - To change an alarm, tap the preset alarm time.
- 5 Select your options. Confirm as prompted.

Time	Set the alarm time.
Repeat	Select how the alarm repeats.
Ringtone	Select the ringtone for the alarm: silence, buzzer, or ringtone.
Label	Add description for the alarm.

Switch an alarm on or off



- In  > , tap the tick box next to the set alarm time.
↳ If the function is enabled, the tick box is selected.

Use the alarm


At the set alarm time, the alarm sounds. A pop-up screen is displayed.

- To interrupt the alarm, tap **Snooze**.
↳ The alarm sounds 10 minutes later.
- To stop the alarm, tap **Dismiss**.
↳ The alarm repeats at the next set alarm time.

Select settings

- In  > , tap **Settings** to select options for your alarm, such as volume, snooze duration.



Calculator

From the Home screen, tap  to use the calculator:


- 1 Enter numbers and mathematic operators:
 - Use the onscreen keyboard for entry.

- 2 Tap = to start calculation.

To clear entries,

- 1 Tap to put the cursor behind the entry where you start to clear.
- 2 Tap  repeatedly.
 - Entries before the cursor are cleared.
 - To clear all the entries, tap and hold .

To copy an entry,

- 1 Tap and hold an entry until a pop-up screen is displayed.
↳ The entry is copied.
- 2 To paste the entry in your email, do the following:
 - ① In text box of your email, tap and hold a position until a pop-up screen is displayed.
 - ② Tap Paste in the pop-up screen.
↳ The entry is pasted to the selected position. 

11 Use the device in corporate networks

You can use **Pi3100** in corporate networks. Install the secure credentials or security certificates before you access corporate networks.

The access to corporate network may allow you to set up your Microsoft Exchange account and add VPN on the device. With the Microsoft Exchange account, you can access your exchange mailbox at work.

Install secure credentials

Ask your network administrator for secure credentials or security certificates.

To install the secure credentials,

- 1 Make sure that you transfer the files of secure credentials from a PC to the SD card that you have mounted onto the device.

Note

- On **Pi3100**, make sure that the secure credentials are saved to the root directory of the SD card, instead of under a folder.

- 2 Install the secure credentials:

- ① From the Home screen, go to **Security > Install from SD card**.
- ② Tap the file to start installation.
- ③ Set the password and name for the credentials as prompted.

To apply the secure credentials,

- 1 In **Security**, select **Security > Trusted credentials**.
- 2 Make sure that the credential is selected.

- ↳ If the function is enabled, the tick box is selected.
- ↳ On the device, you allow the applications to use the secure credentials.

Set up your Microsoft Exchange account

- 1 From the Home screen, go to **Settings**.
- 2 Set up your email account:
 - Enter the information about your account, and select **Exchange** as the account type.
 - If you have set up other email accounts, select **Settings** on the screen of mail list. Tap **Add account**.
- 3 Follow the onscreen instructions to complete the setup.
 - For the server address, enter the web address for your Outlook web access, for example, **owa.company name.com** or **mail. company name.com/owa**.
 - For other setup information, such as domain name, user name, check with your system administrator.

Note


- The device can work with Microsoft Exchange 2003 and 2007.

Add VPN


Virtual private network (VPN) allows you to connect to private networks through secure access.

Sometimes, you need VPN access to connect to corporate networks.

To add VPN on the device


- 1 Ask your network administrator for the configuration information.
- 2 From the Home screen, go to  > **Wireless & networks** > **More** > **VPN**.
- 3 Configure the VPN as prompted.
- 4 Install the secure credentials as needed (see 'Install secure credentials' on page 25).

To connect to the VPN,

- 1 Make sure that you have connected **Pi3100** to the Internet.
- 2 From the Home screen, go to  > **Wireless & networks** > **More**.
↳ A list of VPNs is displayed.
- 3 Tap the VPN to start connection.

12 Settings

To select your settings,

- 1 Go to  from the Home screen.
- 2 Swipe up or down to scroll through lists of options.
- 3 Tap an option to select it.

WIRELESS & NETWORKS

Wi-Fi

In **WIRELESS & NETWORKS > Wi-Fi**, select your Wi-Fi settings on the device (see 'Connect to the Internet' on page 13).


Add Wi-Fi network


Enter SSID manually

SSID (Service Set Identifier) is the name of a router. By the name, the router is recognized by other Wi-Fi devices. If you have hidden the SSID of the router (for example, disable the SSID broadcasting), the router is invisible in the list of available networks. To connect **Pi3100** to the router, enter the SSID of the router manually before you search for available networks on the **Pi3100**.

- 1 In **Wi-Fi**, drag the slider to switch on Wi-Fi.
- 2 On the top bar, tap **+**.
- 3 Enter the SSID of the router:
 - ↳ The **Pi3100** starts searching for the network.
 - ↳ You can find the network in the list of networks.
- 4 Connect **Pi3100** to the network.

Network notification

Switch on **Network notification**. At the base of the screen,  is displayed when an open Wi-Fi network is available.

- 1 In **Wi-Fi**, drag the slider to switch on Wi-Fi.
- 2 At the top bar, tap  and select **Advanced > Network notification**.

Airplane mode

Switch on the airplane mode when:

- you need to disable the access to Wi-Fi for safety purposes, such as on an airplane.

In **WIRELESS & NETWORKS**, select **More > Airplane mode**. You can disable or enable the access to Wi-Fi.

VPN settings

Use VPN settings to access private networks, such as corporate networks (see 'Use the device in corporate networks' on page 25).

Portable hotspot

Pi3100 can work as a Wi-Fi hotspot. Through **Pi3100**, you can have your wireless devices connected to the Internet.

To connect to the Internet through **Pi3100**,

- 1 Connect **Pi3100** to the Internet.
- 2 In **More... > Portable hotspot**, select the checkbox to switch on **Portable Wi-Fi hotspot**.
- 3 Go to **Set up Wi-Fi hotspot** to check and edit the network name (SSID) and password.
- 4 On your wireless devices, search for and connect to **Pi3100**.

DEVICE

HDMI

In **HDMI**, tap **Enable auto switch** to switch on or off the HDMI output.

Sound

In **Sound**, select sound settings for your device.

Volume	Drag the slider to select the volume level for media, notifications, and alarms.
Default notification	Set an audio file as ringtone.
Touch sounds	Sounds play when you tap on the screen.
Screen lock sound	Sounds play when you lock/unlock the screen.

Display

In **Display**, select your display settings:

Brightness	Drag the slider to change the display brightness.
Wallpaper	Set the wallpaper of the device.
Sleep	After the selected time duration, the screen switches off automatically. To save battery power, select a low value.
Font size	Select font size for the on-screen display.

Storage

In **Storage**, learn the space information about the internal storage and SD card on your **Pi3100**.

In **Storage** > **Erase SD card**, you can erase all the data that you have stored on the SD card.

USB computer connection

In **Storage**, tap **!** > **USB computer connection** on the top bar. You can select how to connect Pi3100 to a PC through the USB cable, as a mass storage device or MTP device.

Battery

In **Battery**, check the battery use by applications.

Apps

In **Apps**, manage the apps on the internal storage of Pi3100 (see 'Manage apps' on page 16).

PERSONAL

Location services

- In **Location services**, switch on or off **Google's location service**.
 - ↳ If the function is enabled, the tick box is selected.
 - ↳ You can allow or disallow your location information to be used in online location services of Google, such as Maps, or other relevant services and applications.

Security

Screen lock

By default, to unlock the screen of **Pi3100**, press the power/ lock button and then, drag the lock to an icon.

In **Screen lock**, you can set a pattern, pin, or password as the unlock security. To unlock the screen, such unlock security is required.

None	Switch off the lock.
Slide	Slide to unlock the screen (default).
Pattern	Set a pattern as the unlock security.
PIN	Set a PIN that consists of numbers.
Password	Set a password that consists of a combination of numbers, letters, and symbols.

Visible passwords

Your password consists of several characters. To make sure that you have entered the characters

correctly, show the characters as you type the password. Switch **Make passwords visible** on or off as needed.

- Tap the tick box.
 - ↳ If the function is enabled, the tick box is selected.



Device administrators


Applications in corporate networks require the rights of device administrator, such as the email and calendar under your Microsoft Exchange account.

Before you uninstall such an application, disable the rights of device administrator:

- In **Device administrators**, tap an application.
 - ↳ The rights of device administrator are disabled.
 - ↳ You cannot sync data for the application.

Unknown sources

On **Pi3100**, you can install applications that you download from , or from sources other than .

- For the applications from sources other than , tap **Unknown sources** to allow installation on the **Pi3100**.
 - ↳ If the function is enabled, the tick box is selected.

Language & input

Language

In **Language**, select the language for the onscreen instructions of **Pi3100**.

Personal dictionary

In **Personal dictionary**, add or remove words or phrases to/ from the user dictionary. You can customize the word suggestions that are displayed on the pop-up screen during your text entry on the Android keyboard.

To add a word or phrase,


- Tap **+** to add a word or phrase.

To edit a word or phrase,

- 1 Tap on the word or phrase.
 - ↳ A pop-up screen is displayed.

- 2 Edit the word or phrase.

To remove a word or phrase,

- Tap  next to the word or phrase.

Text-to-speech output

In **Text-to-speech output**, select your options for:


- voice output for the accessibility function on the device (see 'Accessibility' on page 30).

Install voice data

Download from the Market the voice data for speech synthesis.

- 1 Connect the device to the Internet.
- 2 In **Text-to-speech settings**, tap **Install voice data**.
 - ↳ Search for and download the voice data.

Select your options for the voice output

- 1 In **Pico TTS**, tap  > **Language**. Select a language as needed.
- 2 In **Speech rate**, select a speed at which the text is read, normal, fast, or slow.
- 3 Tap **Listen to an example**.
 - ↳ Your options are used to play the demo of speech synthesis.

reset

In **reset** > **Factory data reset**, you can erase all the data that you have stored on the internal storage of **Pi3100**.

ACCOUNTS

In **ACCOUNTS**, add, remove, or manage an account.

- Tap **Add account** to add an account.
- Tap an account to manage the account, for example, remove the account or select sync options.

SYSTEM

Date & time

Automatic setting

Over the Internet, you can sync the date and time on **Pi3100** from Philips online services.

To switch on the automatic clock setting,

- 1 In **Date & time**, tap to switch on **Automatic date & time**.
 - ↳ If the function is enabled, the tick box is selected.

- 2 In **Select time zone**, select your current time zone.

- 3 In **Use 24-hour format** and **Select date format**, select your options for time and date display.

Manual setting


- 1 In **Date & time**, tap to switch off **Automatic date & time**.
 - ↳ If the function is disabled, the tick box is deselected.

- 2 Tap to set date, time, and time zone in **Set date**, **Set time**, and **Set time zone**.
 - To select a date, tap the date in the calendar.
 - To select the digits, tap or hold ▲, ▼.

Accessibility

With the accessibility function, actions on the screen of the device are read out through the text-to-speech technology, such as the taps, selection of menu items. For people who cannot read the screen clearly, the function allows them to use the device in an easier way.

Install the accessibility applications

- From , download an application, such as Talkback. Install the application on your device.

Use the accessibility function

- 1 Select **Accessibility**.

↳ If the function is enabled, the tick box is selected.

- 2 Select an accessibility application that you have installed.
- 3 Select your options for voice output (see 'Text-to-speech output' on page 29).

Auto-rotate screen

In **Auto-rotate screen**, tap to switch on or off screen rotation.

About tablet

In **About tablet**, learn the status and information about your **Pi3100**.

System updates

In **System updates**, check for the system updates of **Pi3100**. Make sure that you have connected the device to the Internet.

Register your **Pi3100** to access the firmware upgrades.

Register

- 1 Make sure that you have connected the device to the Internet.
- 2 To register **Pi3100** with www.philips.com/welcome,
 - ① Select **System updates > Register**.
 - ② Enter your valid email address.
 - ↳ You receive an email message from ConsumerCare@Philips.com.
 - ③ Use the **Web page link in the email to complete registration**.

To check registration information

You can check whether you have registered your **Pi3100**, whether you have completed the registration, and what account you have used for registration.

- Tap **Register > Registration information**.

To unregister Pi3100

To use another email address as your account with www.philips.com/welcome, you can unregister **Pi3100**.

- 1 Tap **Register > Unregister**.

2 Confirm as prompted.

Upgrade

- 1 Make sure that your device is more than 75% charged.
- 2 Make sure that you have connected the device to the Internet.
- 3 Select **System updates > Upgrade**.
 - ↳ The device starts to check for the firmware update.
 - ↳ The firmware information is displayed.
- 4 Follow the onscreen instructions to download the firmware update to your device.
 - ↳ When the message "An update.zip is detected from your Device Storage. Do you want to have this update?" is displayed, the downloading is complete.
- 5 Select the option to start upgrading.

Android version: Firmware version of the Android platform that the device is running on
Build number: Software version of **Pi3100**



Note

- During the upgrading process, keep the screen or button untouched.
- Keep the device powered on before the firmware update is complete.

Status and information about the device

- In **Status, Battery status**: Display the status of power charging.
- **Battery level**: Display remaining power by percentage.
- **IP address**: Display the IP address that is assigned to **Pi3100** when the device is connected a Wi-Fi network.
- **Wi-Fi MAC address**: Display the unique identifier that is assigned to the network adapter of **Pi3100**. If MAC address filtering is enabled on your router, add the MAC address of **Pi3100** to the list of devices that are allowed to join the network.

Battery use: Display the power consumption by each running application.

Legal information: Legal information for **Pi3100**

Model number: Model no. of the device

13 Check for firmware update

Connect **Pi3100** to Wi-Fi. You can receive notifications about firmware updates. Drag down the top bar to check the notifications.

Update the firmware online

On **Pi3100**, you can update the firmware through Philips online services over the Internet (see 'System updates' on page 30).

14 Technical data

Power

- Power adapter
Philips ASSA1i-050200
Input: 100-240 V~ 50/60 Hz, 0.45 A
Output: DC 5.0 V, 2 A
- Power supply: 3,000 mAh Li-ion polymer internal rechargeable battery
- Play time¹
video (MP4, Wi-Fi off): 3 hours

Display

- Type: LCD Touch-sensitive screen
- Diagonal screen size (inch): 7
- Resolution: 1024 x 600 pixels

Platform

Android™ 4

Connectivity

- Headphone: 3.5 mm
- USB: 2.0 High speed, Micro type
- Wireless LAN: Wi-Fi 802.11 b/g/n
- Mini HDMI

Headphone sound

- Channel separation: > 45 dB
- Frequency response: 60-18,000 Hz
- Output power: 2 x 5 mW (maximum)
- Signal to noise ratio: > 80 dB

Speaker sound

- Frequency response: 100-15,000 Hz
- Output power: 600 mW
- Signal to noise ratio: > 60 dB

Audio playback

- Supported formats:
WAV, MP3, AAC / .m4a, OGG Vorbis, 3GPP, AMR-NB (mono), AMR-WB (stereo), FLAC, MIDI (Type 0 and 1 (.mid, .xmf, .mxmf)), RTTTL/RTX (.rtttl, .rtx), OTA (.ota), and iMelody(.imy)

Audio capturing

- AMR-NB
Bitrate: 4.75 to 12.2 kbps
Sampling rate: 8 kHz
File supported: 3GPP (.3gp)
• Specified

Bitrate: 128 kbps
Sampling rate: 44.1 kHz
File format: MP3

- Built-in microphone: mono

Video playback

- Supported formats:
MPEG-4 (.3gp), H.264 AVC (3gp, .mp4), H.263 (3gp, .mp4), VP8 (.webm, .mkv), RMVB (.rm, .rmvb)

Video capturing

- H.264 Aspect ratio (4:3 or 16:9 selectable)
- Video resolution: VGA (640 x 480)
- Frame rate: 30 frames per second
- Container: .mp4
- Audio format: MP3
- Lens: Fixed focus length
- Recording time: Depending on the storage

Still picture playback

- Supported formats:
JPEG, BMP, PNG, GIF

Still picture capturing

- Picture resolution: VGA (640 x 480)
- Picture format: JPEG, PNG
- Lens: Fixed focus length

Storage media

- Built-in memory capacity²:
8 GB NAND Flash, 16 GB NAND Flash
- External storage:
Micro SD memory card slot (Maximum memory card capacity: 32 GB)

Preloaded applications


- 安卓市场, Duomi, QQ, QQ Game, 91PandaReader, Weibo, 新浪新闻, 京东商城, ES File Explorer, Baidu Input
- Search, Browser, Gallery, Music, Camera, Email, Calendar, Clock, Calculator
- **SimplyShare**

Note

- ¹ Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.
- ² 1GB = 1 billion bytes; available storage capacity is less. Full memory capacity may not be available as some memory is reserved for the device. Storage capacity is based on 4 minutes per song and 128 kbps MP3 encoding.

PC system requirements

- Windows®XP (SP3 or above), Vista/7 (32-bit, 64-bit)
- Pentium III 800 MHz processor or higher
- 512 MB RAM
- 500 MB hard disk space
- Internet connection
- Windows® Internet Explorer 6.0 or later
- USB port

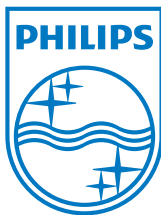

Specifications are subject to change without notice

© 2013 Koninklijke Philips Electronics N.V.

All rights reserved.

Pi3100_93_UM_V1.0 wk1323.4