



Philips  
Dual screen portable DVD  
player

**18 cm/7" LCD**

Dual screens



**PD7032**



## Enjoy your movies and games on the road

with two widescreen LCDs

Play your movies and games in the car! The Philips PD7032 featuring two 7"/18 cm TFT LCD display screens lets you indulge in enjoying your DVD/DivX® movies, music and photos. 2 game controllers are double the fun on the road.

### Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

### Game-ready for extra fun

- 17.8 cm (7") TFT colour LCD display for high-quality viewing
- Games CD provided for instant fun

### Extra touches for your convenience

- Car adapter and mounting strap included
- Full Resume on Power Loss
- AC/DC adapter included
- Stereo headphone jack for better personal music enjoyment

**PHILIPS**

sense and simplicity

Dual screen portable DVD player  
18 cm/7" LCD Dual screens

# Specifications

## Product dimensions

- Product dimensions (W x H x D):  
20 x 15.5 x 5.5 cm
- Weight: 0.897 kg

## Packaging dimensions

- Packaging dimensions (W x H x D):  
36 x 29.5 x 7.2 cm
- Net weight: 1.4055 kg
- Gross weight: 1.769 kg
- Tare weight: 0.3635 kg
- EAN: 87 12581 59645 3
- Number of products included: 1
- Packaging type: Soother
- Type of shelf placement: Soother

## Outer Carton

- Outer carton (L x W x H): 37 x 23 x 30.5 cm
- Net weight: 4.2165 kg
- Gross weight: 5.707 kg
- Tare weight: 1.4905 kg
- Number of consumer packages: 3

## Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size: 7 inch / 18 cm
- Resolution: 480(w) x 234(H) x 3(RGB)

## Sound

- Output Power: 250 mW RMS (built-in speakers)
- Output power (RMS): 10 mW RMS (earphone)
- Signal to noise ratio: >80 dB (earphone), >62 dB (built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Shuffle Play, Zoom,

- Resume Playback from Stop
- Video disc playback system: NTSC, PAL
- Compression formats: Divx, MPEG4

## Audio Playback

- Compression format: Dolby Digital, MP3
- MP3 bit rates: 32 - 320 kbps
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9 V, 0.8 A
- Headphone jack: 3.5 mm Stereo Headphone x 2
- AV output: Composite (CVBS) x 1

## Accessories

- AC/DC Adapter: DC-in 9 V, 0.8 A (110-240 v, 50/60 Hz)
- Cables: 3.5 mm AV cable
- Car kit: cigarette charger, headrest mounting straps x 2
- User Manual: English
- Second LCD screen: 7" TFT LCD (PAC134) x 1 pcs
- Remote control: Game controllers x 2

## Convenience

- Shock proof


## Dimensions

- Master carton dimensions: 230 x 305 x 370 mm
- Master carton quantity: 3
- Master carton weight: 6.28 kg
- Packaging dimensions (W x H x D):  
360 x 295 x 72 mm
- Product dimensions (W x H x D):  
199 x 38 x 153 mm
- Product weight: 1 kg
- Packaging type: D-box

PD7032/05

# Highlights

## DVD, DVD+/-RW, (S)VCD, CD

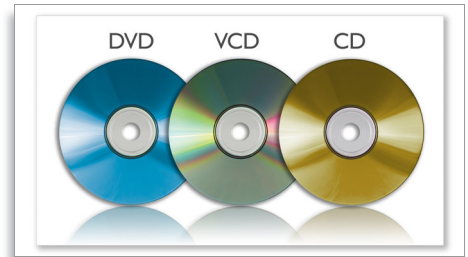

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

## DivX Certified

With DivX® support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified® Philips device.

## Power Resume

The DVD-Video player remembers where you last stopped watching both if it is powered off directly and if the power supply is discontinued. If you did not change to another disc, your player will resume play where you last stopped the movie just by reloading the disc—making your life a lot easier!



Issue date 2013-03-03

Version: 1.0.7

12 NC: 8670 000 74895  
EAN: 87 12581 59645 3

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified and associated logos are trademarks of  
DivXNetworks, Inc. and are used under licence.