



Cordless phone

- 1.6" display/ amber backlight

D1401B/90

## Keep it simple

The Philips D140 Cordless Phone has all the essential functions you need. Just plug and play to enjoy calls. And with micro-USB charging, the D140 can run on a power bank, so you can keep talking even if the power cuts out.

### Benefits

#### Nice and simple

- Easy to read 4.1 cm (1.6") display with backlight
- Caller ID – so you always know who is calling\*
- Ultimate convenience through easy setup
- Textured back cover for non-slip grip
- Up to 10 hours talk time on a single charge
- Stay connected during power cuts via micro-USB power bank

#### Crystal clear sound

- Advanced sound testing & tuning for superb voice quality
- Automatic Volume Control offsets unwanted volume variation
- Optimized antenna layout for great reception in any room
- Parametric Equalizer delivers pure and clear sound


#### Eco-conscious product

- Low radiation and power consumption

**PHILIPS**

## Features

### 4.1cm (1.6") display

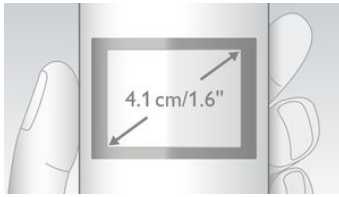

### Advanced sound testing

We test the sound quality of our DECT phones the same way as high-end headphone manufacturers do. Using an advanced ear simulator, we can accurately re-create the way people actually hear. This helps our acoustic engineers to measure and fine-tune things like frequency response, distortion and overall hearing perception, to create perfect voice reproduction.

### Automatic Volume Control




Automatic Volume Control offsets variations in sound signal, which can be caused by distance, signal strength or the caller's phone - so what you hear always remains consistent. Reducing the audio amplification for strong signals, and increasing it for weak ones, it means you can enjoy a smooth conversation without unwanted sound volume variation.

### Caller ID\*



Sometimes it is good to know who is calling before you answer. And our Caller ID lets you keep track of who is on the other end of the line.

### Easy setup

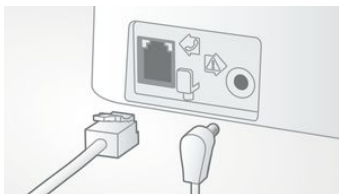

Ultimate convenience through easy set up. Simplified installation - Plug & Play product

### Eco-conscious product




Philips phones are energy efficient and designed to be respectful to the environment.

### Non-slip grip



The rear of the handset is treated with a special texture for added comfort and better grip.

### Optimized antenna layout

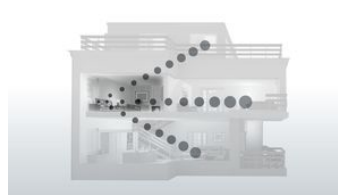

Our optimized antenna layout ensures strong and stable reception – even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in the house, and enjoy a long, uninterrupted conversation even as you walk around.

### Parametric Equalizer



Our telephones use parametric equalization in the digital sound processing to fine-tune the sound response back to the intended linear frequency response curve, delivering sound that is pure and clear, for each conversation.

### Up to 10 hours talk time

### Micro-USB connector

The integrated micro-USB connector socket on the base unit ensures that the phone can stay powered via a pre-charged power bank, allowing you to make calls even if the power cuts out. The power bank charging feature supports most power bank products with which are able to provide a minimum output current below 85mA without automatic shutdown. Power bank sold separately.

Specifications

[field not found 'disclaimer\_text']

#### Convenience

Menu structure in the handset	List Menu
Signal strength indicator	3-bar indicator
Battery level indicator	3-bar battery icon
Intercom - multiple handsets	Yes
Date / Time display	Yes
Call Management	Call Waiting* Caller ID* Microphone mute Missed Calls Received Calls Dialed calls
Keypad lock	Yes
Key tone on/off	Yes
Auto hang up	Yes
Multi handset capability	Up to 4
Number of keys	20
Base Station keys	Paging key
Up to 10 hrs talk time	Yes hr
Charge time: 8 hours	Yes
Line cord length	1.5m
Power cord length	1.5m
Range	Open field <300m; indoor <50m
Non-slip grip	Triangular pattern
Up to 200 hrs standby time	Yes

#### Sound

Volume control on handset	Yes
Ringtones on handset	10 standard
HQ-Sound	Yes

#### Picture/Display

Display size	4.1cm / 1.6"
Display type	12 digits (Alphanumeric) +hard icons
Backlight: Yes	Yes

Backlight color	Amber
-----------------	-------

#### Memory Capacity

Phonebook	50 names and numbers
Redial List Capacity	10 last numbers
Call log entries	20 entries

#### Power

Battery capacity	300 mAh
Battery type	AAA NiMH Rechargeable
Mains power	AC 100-240V ~50/60Hz
Power Consumption	< 0.7 W

#### Security

Transmission encryption : Yes	Yes
-------------------------------	-----

#### Network Features

Compatible	GAP
------------	-----

#### SAR Value

Philips handsets	<0.1 W/kg
------------------	-----------

#### Packaging dimensions

Packaging type	Carton
Number of products included	1
Type of shelf placement	Laying
Height	13.5 cm
Width	18.4 cm
Depth	5.9 cm
Gross weight	0.368 kg
Nett weight	0.294 kg
Tare weight	0.074 kg
EAN	48 95185 62898 1

#### USB Charging

Yes	Yes
-----	-----

\* \*This feature requires additional subscription of Caller ID service. Please check with your local network operator for details.



data subject to change  
2018, February 25

Version: 1.1.2  
EAN: 4895185628981

© 2018 Koninklijke Philips N.V.  
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)