

Philips  
DVD home theatre system



HTS9810

## Not a home cinema, but a cinema at home

### with 9.1 Cinema Sound

Be submerged in grand sound, picture and design. Bask in 9.1 Cinema Sound—powered by Ambisound—which gives you the ultimate cinematic listening experience at home. HTS9810 is sheer beauty and top performance for the movie connoisseur.

#### Hear

- 9.1 Cinema Sound for 9.1 surround sound from just 5 speakers
- Excellent sound quality with soft dome tweeters and DoubleBASS
- FullSound™ to bring a CD listening experience to MP3

#### Live

- Wireless rear speakers for fewer wires across your room
- Touch screen controls for easy playback and volume control
- Full length tower speakers for more impressive sound

#### See

- Faroudja DCDi for incredibly sharp high-quality video
- HDMI 1080p upscales to high definition for sharper pictures


#### Connect

- EasyLink controls all EasyLink products with a single remote
- Hi-Speed USB 2.0 Link plays video/music from USB flash drives
- MP3 Link plays music from portable media players

**PHILIPS**  
sense and simplicity


# Highlights

## Faroudja DCDi

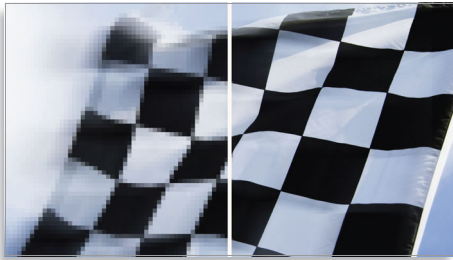


Enjoy incredibly sharp, high-quality video on your progressive scan TV with Faroudja DCDi. The feature alleviates jagged edges that appear when standard interlaced video is viewed, especially with moving images, thus delivering natural-looking action scenes. Bring your viewing experience to the next level with clearer, smoother pictures

## 9.1 Cinema Sound

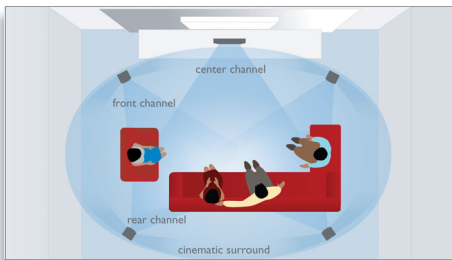

9.1 Cinema Sound—powered by Ambisound—creates the ultimate all-around sound ambiance that modern cinemas provide. Without the clutter of a multitude of speakers, 9.1 Cinema Sound gives the incredible sense that there are speakers along the sides of the room. It recreates cinema sound right in your living room, delivering unparalleled surround sound that truly envelops you.

## Wireless rear speakers

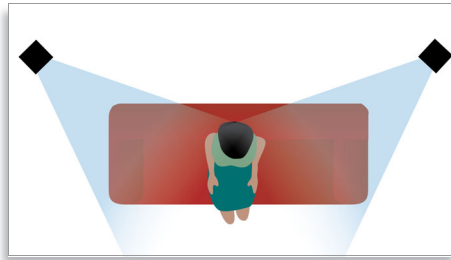


Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.

## EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Hi-Speed USB 2.0 Link

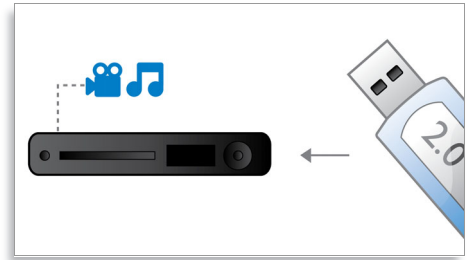

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## MP3 Link



MP3 Link allows playback of MP3 files directly from your portable media player on your home theatre system. Simply connect your portable MP3 player to the built-in MP3 Link jack and enjoy your MP3 music in the superior sound quality delivered by the Philips home theatre system. MP3 Link brings your portable music into the comfort of your living room.



# Specifications

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Video upscaling, Faroudja DCDi, High Def (720p, 1080i, 1080p)

## Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 20 Hz-20000 Hz
- Signal to noise ratio: >95 dB
- Sound Enhancement: Class "D" Digital Amplifier, Treble and Bass Control, ClearVoice, DoubleBass, Smart Surround
- Output power (RMS): (@10%THD): 8 x 75 W (Front/Front Side/Rear/Rear Side) + 1 x 100 W (Centre) + 1 x 100 W (Subwoofer)
- Equalizer settings: Action, Classic, Drama, Jazz, Rock, Concert, Digital, Gaming, News, Party, Sports
- Sound System: Ambisound, Dolby Digital, Dolby Prologic II, DTS, Stereo

## Video Playback

- Playback Media: DVD-Video, Video CD/SVCD, CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, WMV 9
- Video disc playback system: PAL, NTSC

## Audio Playback

- Playback Media: CD, CD-R, CD-R/RW, USB flash drive
- Compression format: MP3, WMA
- MP3 bit rates: 32-256 kbps and VBR

## Still Picture Playback

- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Tuner/Reception/Transmission

- Tuner Bands: AM, FM
- RDS: Station Name

## Connectivity

- Front/Side connections: MP3 Line-in, USB
- Rear Connections: AUX in, Component Video output, Composite video (CVBS) output, Easy-Fit speaker connectors, HDMI output, Interconnect (to Power Box), TV in (audio, cinch)
- Subwoofer (Power Box): AUX In (cinch, 2 pairs), Coaxial Digital input, FM Antenna, Interconnect (to Main Unit), Optical digital input

## Power

- Power supply: 100-240 VAC, 50/60 Hz
- Standby power consumption: < 1 W
- Power consumption: 180 W

## Loudspeakers

- Satellite Speaker: 2-way, 4 Floor standing pillars, Wireless rear speakers, Magnetically shielded front
- Satellite speaker drivers: 2 x 3" full-range woofer, 18 mm Dome Tweeter, 2.5" Woofer
- Satellite speaker freq range: 120 Hz-20000 Hz
- Satellite speaker impedance: 6 ohm
- Centre Speaker: 2-way
- Centre speaker drivers: 18 mm Dome Tweeter, 2 x 2.5" woofers
- Centre freq range: 120 Hz-20000 Hz
- Centre speaker impedance: 4 ohm
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer freq range: 20-120 Hz
- Subwoofer impedance: 4 ohm
- Subwoofer type: Active

## Accessories

- Included Accessories: Quick start guide, Remote Control, Interconnect cable, FM antenna, Screws for wall mounting x 2, World Wide Warranty leaflet, User Manual, Batteries for remote control, HDMI cable, MP3 Line-in cable, Power cord, Wall mounting bracket

## Dimensions

- Packaging dimensions (W x H x D): 800 x 732 x 1200 mm
- Set dimensions (W x H x D): 304.2 x 299.7 x 84.55 mm
- Set weight: 2.74 kg
- Subwoofer dimensions (W x H x D): 322 x 425 x 322 mm
- Subwoofer Weight: 12.7 kg

## Outer Box

- Gross weight: 49 kg
- Outer carton (L x W x H): 120 x 80 x 73.2 cm
- Net weight: 42.634 kg
- Tare weight: 6.366 kg
- EAN: 87 12581 40516 8
- Number of consumer packages: 1

## Packaging dimensions

- Packaging dimensions (W x H x D): 80 x 73.2 x 120 cm
- Gross weight: 49 kg
- Net weight: 42.634 kg
- Tare weight: 6.366 kg
- EAN: 87 12581 40516 8
- Number of products included: 1
- Packaging type: Box
- Type of shelf placement: Laying

## Product dimensions

- Product dimensions (W x H x D): 30.42 x 29.97 x 8.455 cm
- Product dimensions with stand (W x H x D): 30.42 x 30.594 x 13.52 cm
- Weight: 2.74 kg
- Weight (with stand): 3.5 kg



Issue date 2009-10-14

Version: 3.3.4

12 NC: 8670 000 38244  
EAN: 87 12581 40516 8

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* Avoid extensive use of the set at a volume higher than 85 decibels because this may damage your hearing.