



Philips
wireless portable speaker

Bluetooth®
Rechargeable battery
2 W

BT55P

Big sound that fits in a fist

Live life with music streamed wirelessly from one compact and easy-to-carry speaker. Trendy colours help you pick one that fits your style and a built-in rechargeable battery keeps music pumping wherever and whenever you take it.

Impressive sound

- Anti-clipping function for loud, distortion-free music

Simplicity in use

- Wireless music streaming via Bluetooth

Designed for grab and go

- Built-in rechargeable battery for music playback anywhere

PHILIPS

wireless portable speaker
Bluetooth® Rechargeable battery, 2 W

Specifications

Compatibility

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display, iPad 4, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3, iPad mini 4, iPad Pro
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone 7, iPhone 7 Plus, iPhone SE
- iPod touch: 3rd generation or later
- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other Bluetooth-enabled device

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10 m or 30 ft
- USB charging

Sound

- Output power (RMS): 2 W
- Sound System: Mono



Loudspeakers

- Speaker driver: 1 x 1.5" full range driver

Power

- Operating time on battery: 6 hr
- Battery type: lithium polymer (built-in)

Accessories

- Included accessories: USB cable for PC charging, Quick install guide

Dimensions

- Packaging dimensions (WxDxH): 130 x 55 x 100 mm
- Product weight: 0.12 kg
- Weight incl. Packaging: 0.19 kg
- Product dimensions (WxDxH): 85 x 34 x 75.8 mm


Design and finishing

- Colour: Pink

BT55P/00

Highlights

Anti-clipping function_BT55

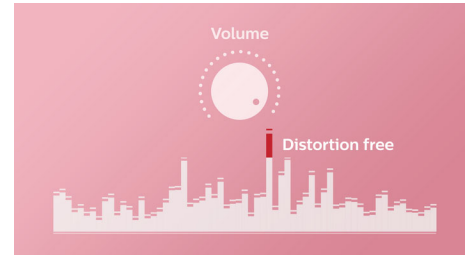

Anti-Clipping lets you play music louder and keeps the quality high, even when the battery is low. It accepts a range of input signals from 300 mV to 1000 mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, but anti-clipping reduces peaks caused by low battery, keeping music distortion-free.

Built-in rechargeable battery



Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of tangled power cords and the inconvenient search for an electrical socket. Enjoy great music with the freedom of portability now.

Wireless music streaming_BT55



Bluetooth is a wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can easily enjoy your favourite music and sound from videos or games wirelessly on this speaker.



Issue date 2022-05-15

Version: 4.3.7

12 NC: 8670 001 47315
EAN: 69 51613 99225 8

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com