

Philips  
Portable DVD Player

18cm/ 7" LCD

2-hr playtime  
Dual screens



PD7013



## Double your movies on the road

with two widescreen LCDs

Play your movies and music in car! The PD7013 portable DVD player features two 7" LCD screens for your great viewing experience. It comes with full set accessories for your great convenience. Install and mount easily for in-car enjoyment.

### Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

### Enrich your AV entertainment experience

- 17.8 cm/7" TFT color LCD display in 16:9 wide screen format
- Expand movie enjoyment with dual TFT LCD screens
- Built-in stereo speakers

### Extra touches for your convenience

- Up to 2-hour playback with rechargeable built-in battery\*
- Smart Car Mount for ease-of-use
- Travel bag included
- AC adaptor, car adaptor and AV cable included
- Full Resume on Power Loss

**PHILIPS**

Portable DVD Player  
18cm/ 7" LCD 2-hr playtime, Dual screens

PD7013/77


# Highlights

## 18 cm/7" TFT color LCD (16:9)



The color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints. The 16:9 widescreen aspect ratio is standard for universal to high-definition digital television. A native 16:9 aspect ratio means video display without bars at top and bottom of the picture and without the quality loss that comes from scaling, altering an image to fit on a different screen size.

## DVD, DVD+/-RW, (S)VCD, CD

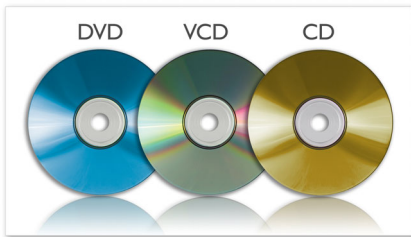

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise,

DVD+/-RW handles both common rewritable disc types.

## MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

## Smart Car Mount



To enjoy entertainment on the go, why not bring your portable DVD player from home on the road with you? A unique Car Mount system ensures ease-of-use, with a quick-release arm that facilitates easy removal of the player when not in use. You can bring the portable DVD player with you, leaving just the Mount behind in the car.

## Dual TFT LCD display screens



Dual screens allow you to display same videos or images from the portable DVD players. Simply plug in and mount the screens on the headrests in your car. Now you can enjoy your favorite DVD movies and JPEG photos with family and friends at the backseats easily and comfortably.

## DivX Certified

With DivX® support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified® Philips device.

## Power Resume

The DVD-Video player remembers where you stop watching last time when it is powered off directly or when the power supply discontinued. If you did not switch to play another disc, your player will resume play where you have stopped the movie last time just by reloading the disc. Making your life a lot easier!



# Specifications

## Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size (inch): 7 inch
- Resolution: 480(w)x234(H)x3(RGB)

## Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(line out), >76dB(earphone), >62dB(built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Zoom, Shuffle Play, Resume Playback from Stop
- Video disc playback system: NTSC, PAL
- Compression formats: MPEG4, Divx

## Audio Playback

- Compression format: Dolby Digital, MP3
- MP3 bit rates: 32 - 320 kbps
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9V
- Headphone jack: 3.5mm Stereo Headphone
- AV output: Composite (CVBS) x1

## Convenience

- Battery charging indication
- Shock proof

## Accessories

- AC/DC Adaptor: 9V (110-240v, 50/60Hz)
- Cables: 1 x AV Cables
- Car kit: cigarette outlet adaptor, 12vDC
- User Manual: Spanish

- Second LCD screen: 7" TFT LCD x 1 pcs
- Smart car mount: AY4246 x 2
- Pouch: Travel bag x 1

## Power

- Battery lifetime: Up to 2hrs\*
- Battery Type: Built-in battery

## Dimensions

- Master carton dimensions: 325 x 305 x 370 mm
- Master carton weight: 6.88 kg
- Master carton quantity: 3
- Packaging dimensions (W x H x D): 360 x 295 x 90 mm
- Product dimensions (W x H x D): 199 x 38 x 153 mm
- Product weight: 1.2 kg
- Packaging type: D-box

## Product dimensions

- Cable length: 0 cm
- Product dimensions (W x H x D): 0 x 0 x 0 cm
- Weight: 0 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 36 x 29.5 x 9 cm
- EAN: 87 12581 54389 1
- Gross weight: 2.2 kg
- Nett weight: 1.69 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.51 kg

## Outer Carton

- EAN: 87 12581 54392 1
- Gross weight: 6.88 kg
- Outer carton (L x W x H): 37 x 28.5 x 30.5 cm
- Nett weight: 5.07 kg
- Number of consumer packagings: 3
- Tare weight: 1.81 kg



Issue date 2014-06-06

Version: 2.1.2

12 NC: 8670 000 63172  
EAN: 87 12581 54389 1

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

\* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

\* Battery life varies by use and settings.

\* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.