



Philips
5.1 Home theater

Blu-ray
Dolby Digital
300W

HTB2510

300W Powerful cinematic surround sound

Bring the power of the cinema into your home! Pump up your home entertainment experience with exposed speakers drivers offering powerful surround sound and in Full HD 1080p with Blu-ray Disc playback.

Great listening experience

- 300W RMS power delivers great sound for movies and music
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- Exposed speaker drivers for powerful surround sound

Simply enjoy all your entertainment

- Blu-ray Disc playback for sharp images in full HD 1080p
- DivX Plus HD Certified for high definition DivX playback
- EasyLink to control all HDMI CEC devices via a single remote
- Karaoke for endless singing entertainment at home
- Audio in to enjoy music from iPod/iPhone/MP3 player

Designed to enhance your cinema at home

- Great sound for a realistic movie experience
- Modern design to complement your home environment

PHILIPS

Highlights

300W RMS power




300W RMS power delivers great sound for movies and music

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Dolby TrueHD and DTS-HD

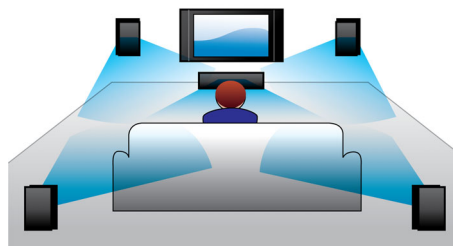

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

Karaoke for endless singing



Karaoke for endless singing entertainment at home

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Specifications

Sound

- Sound Enhancement: Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, dts ES, DTS-HD High Resolution Audio, DTS-HD Master Audio Essential
- Center speaker output power: 50 W
- Cube speaker output power: 2 x 50 W
- Satellite speaker output power: 2 x 50 W
- Subwoofer output power: 50 W
- Total Power RMS @ 10% THD: 300 W

Loudspeakers

- Loudspeaker types: 4 x Satellite speakers
- Cube speaker impedance: 3 ohm
- Satellite speaker impedance: 3 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer impedance: 8 ohm

Connectivity

- Front Connections: Microphone In, USB, Audio in
- Rear Connections: AUX in, Digital optical in, HDMI 1.4 output (ARC), Easy-Fit Speaker Jacks, FM Antenna Socket, Digital coaxial in

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC), Content Type, Deep color

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg

Audio Playback

- Compression format: AAC, MP3, WAV, WMA, Dolby Digital, DTS, FLAC
- MP3 bit rates: 32 - 320kbps

Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4, AVCHD

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 60 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: 2 x AAA Batteries, HDMI cable, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet, FM antenna

Product dimensions

- Product dimensions (W x H x D):
34 x 5.5 x 27.8 cm
- Weight: 1.87 kg

Packaging dimensions

- EAN: 48 95185 61330 7
- Packaging dimensions (W x H x D):
51.9 x 30.8 x 37.8 cm
- Gross weight: 6.81 kg
- Nett weight: 5.58 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.23 kg
- Type of shelf placement: Laying

Outer Carton

- EAN: 48 95185 61330 7
- Gross weight: 6.81 kg
- Outer carton (L x W x H): 51.9 x 37.8 x 30.8 cm
- Nett weight: 5.58 kg
- Number of consumer packagings: 1
- Tare weight: 1.23 kg



Issue date 2015-09-22

Version: 1.1.2

12 NC: 8670 001 28061
EAN: 48 95185 61330 7

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.