



Philips  
Portable DVD Player

17.8 cm/7" widescreen LCD

PET736



## Movies that travel with you

with 3 hours playback and USB port

Enjoy your movies anytime, anyplace! The portable PET736 DVD player featuring 7" TFT LCD display lets you indulge in the pleasure of enjoying DVD movies, MP3-CD/CD music and JPEG photos on the go.

### Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard playback of DivX videos
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

### Enrich your AV entertainment experience

- 17.8 cm/7" TFT color LCD display in 16:9 wide screen format
- Built-in stereo speakers

### Extra touches for your convenience

- Enjoy up to 3 hours playback with a built-in battery\*
- USB connection for video, photo and music playback
- Smart Car Mount for ease-of-use
- AC adaptor, car adaptor and AV cable included

# PHILIPS


# Highlights

## 18 cm/7" TFT color LCD (16:9)



The color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints. The 16:9 widescreen aspect ratio is standard for universal to high-definition digital television. A native 16:9 aspect ratio means video display without bars at top and bottom of the picture and without the quality loss than comes from scaling, altering an image to fit on a different screen size.

## DVD, DVD+/-RW, (S)VCD, CD

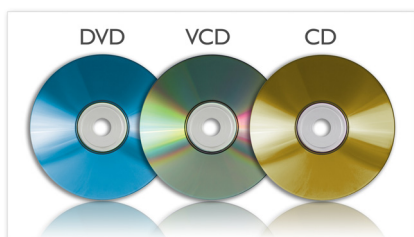

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

## MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

## View JPEG from picture disc


Play JPEG photos that are saved on your disc. Relive your favorite moments with family and friends anytime you want!

## 3 hours built-in battery\*



This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 3 hours of continuous movie, photo and music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

## DivX Certified

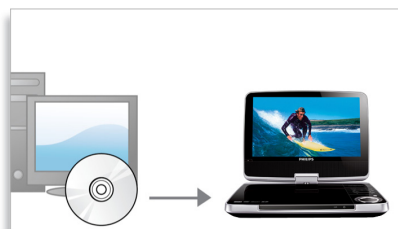

With DivX® support, you are able to enjoy DivX® encoded videos. The DivX media

format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs.

## USB connection



Simply plug in your portable USB device to the USB connector on your Philips portable DVD player and playback your digital videos, music or photos directly. Now you can share your favorite moments with family and friends.

## Smart Car Mount



To enjoy entertainment on the go, why not bring your portable DVD player from home on the road with you? A unique Car Mount system ensures ease-of-use, with a quick-release arm that facilitates easy removal of the player when not in use. You can bring the portable DVD player with you, leaving just the Mount behind in the car.



# Specifications

## Picture/Display

- Diagonal screen size (inch): 7 inch
- Resolution: 480(w)x234(H)x3(RGB)
- Display screen type: LCD TFT
- Brightness: 80 cd/m<sup>2</sup>
- LCD panel type: Anti-glare polarizer
- Contrast ratio (typical): 200:1
- Effective viewing area: 154.1x86.6mm
- Response time (typical): 30 ms

## Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(line out), >76dB(earphone), >62dB(built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Zoom
- Video disc playback system: PAL, NTSC
- Compression formats: Divx, MPEG4

## Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9V, 1A
- Headphone jack: 3.5mm Stereo Headphone
- AV output: Composite (CVBS) x1
- USB

## Convenience

- Battery charging indication
- Shock proof

## Accessories

- AC/DC Adaptor: DC 9V, 1A, 110-240v, 50/60Hz
- Cables: 1 x AV Cables
- User Manual: Spanish/Portuguese
- Car kit: cigarette outlet adaptor, 12vDC
- Remote control: AY5521
- Smart car mount

## Power

- Battery lifetime: Up to 3hrs\*
- Battery Type: Built-in battery

## Dimensions

- Master carton dimensions: 245 x 270 x 225 mm
- Master carton quantity: 3
- Master carton weight: 3.9 kg
- Packaging dimensions (W x H x D): 233 x 251 x 70 mm
- Product dimensions (W x H x D): 195 x 39 x 153 mm
- Product weight: 0.71 kg
- Packaging type: D-box



Issue date 2014-02-12

Version: 1.1.2

12 NC: 8670 000 60469  
EAN: 87 12581 52778 5

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

\* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

\* Battery life varies by use and settings.

\* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.

\* Avoid extensive use of the set in a volume higher than 85 decibel because this may damage your hearing.