

# Always there to help you

Register your product and get support at  
[www.philips.com/support](http://www.philips.com/support)



B150  
B155



## Extended user documentation

# PHILIPS



# Contents

---

## 1 Important safety instructions 3

---

## 2 Your phone 4

- What is in the box 4
- Overview of the phone 5
- Overview of the base station 6

---

## 3 Get started 7

- Connect the base station 7
- Install the supplied batteries 8
- Configure your phone (country dependent) 8
- Change the remote access PIN code (for B155) 9
- Charge the handset 9
- Check the battery level 9
- What is standby mode? 9
- Display icons 10
- Check the signal strength 10
- Switch the handset on or off 10

---

## 4 Calls 11

- Make a call 11
- Answer a call 11
- End a call 11
- Adjust the earpiece volume 12
- Mute the microphone 12
- Make a second call 12
- Answer a second call 12
- Switch between two calls 12
- Make a conference call with the external callers 12

---

## 5 Intercom and conference calls 13

- Make a call to another handset 13
- Make a conference call 13

---

## 6 Text and numbers 15

- Enter text and numbers 15

---

## 7 Phonebook 16

- View the phonebook 16
- Search a record 16
- Call from the phonebook 16
- Add a record 16
- Edit a record 17
- Delete a record 17
- Delete all records 17

---

## 8 Call log 18

- View the call records 18
- Save a call record to the phonebook 18
- Return a call 18
- Delete a call record 18
- Delete all call records 18

---

## 9 Redial list 20

- View the redial records 20
- Redial a call 20
- Save a call record to the phonebook 20
- Delete a redial record 20
- Delete all redial records 20

---

## 10 Phone settings 21

- Sound settings 21
- Name the handset 21
- Set the date and time 21
- Set the display language 21

---

## 11 Telephone answering machine 23

- Turn the answering machine on or off 23
- Set the answering machine language 23
- Announcements 23
- Incoming messages 24
- Set the ring delay 25
- Remote access 25

---

## 12 Services 27

- Auto conference 27
- Auto prefix 27
- Network type 27
- Select the recall duration 27
- Dial mode 28

Auto clock	28
Register additional handsets	28
Unregister the handsets	29
Restore default settings	29

---

## **13 Technical data** 30

---

<b>14 Notice</b>	31
Declaration of conformity	31
Use GAP standard compliance	31
Compliance with EMF	31
Disposal of your old product and battery	31

---

## **15 Frequently asked questions** 33

---

<b>16 Appendix</b>	35
Text and number input tables	35

# 1 Important safety instructions

## Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.



### Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

## To avoid damage or malfunction



### Caution

- Use only the power adapter listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Do not dispose of batteries in fire.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Always use the cables provided with the product.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not use the product in places where there are explosive hazards.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Active mobile phones in the vicinity may cause interference.
- Metallic objects may be retained if placed near or on the handset receiver.

## About operating and storage temperatures

- Operate in a place where temperature is always between 0°C to +35°C (32°F to 95°F).
- Store in a place where temperature is always between -20°C and +45°C (-4°F to 113°F).
- Battery life may be shorter in low temperature conditions.

## 2 Your phone

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### What is in the box




Handset \*\*




Base station (B150)



Base station (B155)




Charger\*\*

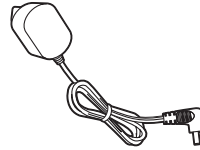

Power adapter\*\*



Line cord\*



2 x AAA rechargeable batteries\*\*



Guarantee




Short user manual

#### Note

- \* In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.
- \*\* In multi-handset packs, there are additional handsets, chargers, power adapters and batteries.

## Overview of the phone

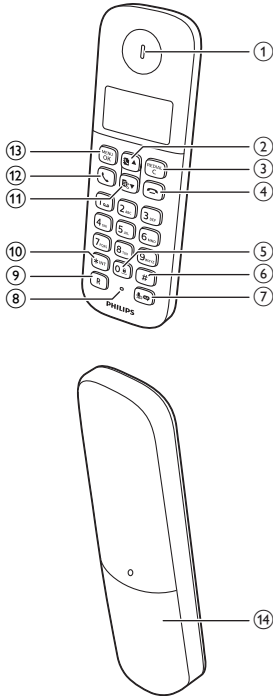

① **Earpiece**

② 

- Scroll up on the menu.
- Increase the earpiece volume.
- Access the phonebook in standby mode.

③ **REDIAL/C**

- Delete text or digits.
- Cancel operation.
- Access the redial list.

④ 




- End the call.
- Exit the menu/operation.
- Press and hold to switch the handset on or off.

⑤ **0**

- Press to enter a space during text editing.
- Press and hold to lock/unlock the keypad in standby mode.

⑥ **#**

Press and hold to enter a pause.

⑦  (for B150) or  /  (for B155)

- Mute or unmute the microphone.
- Access to the answer machine menu in standby mode (for B155 only).
- Listen to new messages from the answering machine (for B155 only).

⑧ **Microphone**

⑨ **R**

Recall key (This function is network dependent).

⑩ **\*INT**

- Set the dial mode (pulse mode or temporary tone mode).
- Press to enter \* in standby mode or during text editing.
- Press and hold to switch between the intercom call and external call.

⑪  ▼

- Scroll down on the menu.
- Decrease the earpiece volume.
- Access the call log in standby mode.

⑫ 

Make and receive calls.

⑬ **MENU/OK**


- Access the main menu.
- Confirm selection.
- Enter the options menu.
- Select the function displayed on the handset screen directly above the key.

⑭ **Battery door**

---


## Overview of the base station

B150

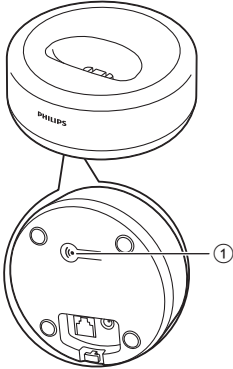

- ① •))
- Press to find handsets.
  - Press and hold to enter the registration mode.

B155

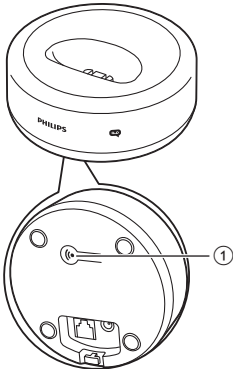

- ① •))
- Press to find handsets.
  - Press and hold to enter the registration mode.



# 3 Get started

## Caution

- Make sure that you have read the safety instructions in the 'Important safety instructions' section before you connect and install your handset.

## Connect the base station


## Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone.
- Use only the supplied power adapter to charge the batteries.


## Note

- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket. The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the base station.


- 1 Connect each end of the power adapter to:
  - the DC input jack at the bottom of the base station;
  - the power socket on the wall.
- 2 Connect each end of the line cord to:
  - the telephone socket at the bottom of the base station;
  - the telephone socket on the wall.

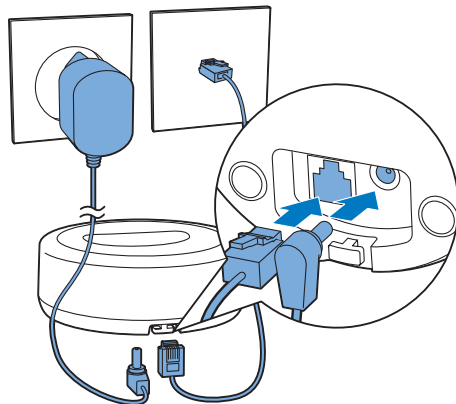

- 3 Connect each end of the power adapter to (for multi handset version only):
  - the DC input jack at the bottom of the extra handset charger;
  - the power socket on the wall.

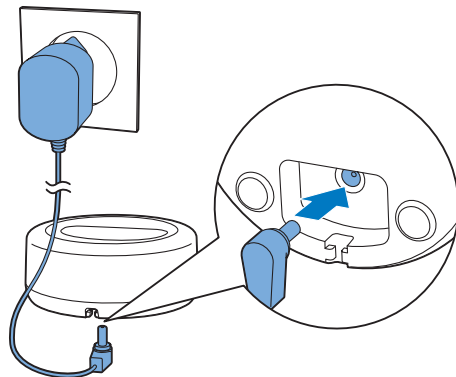

## Install the supplied batteries

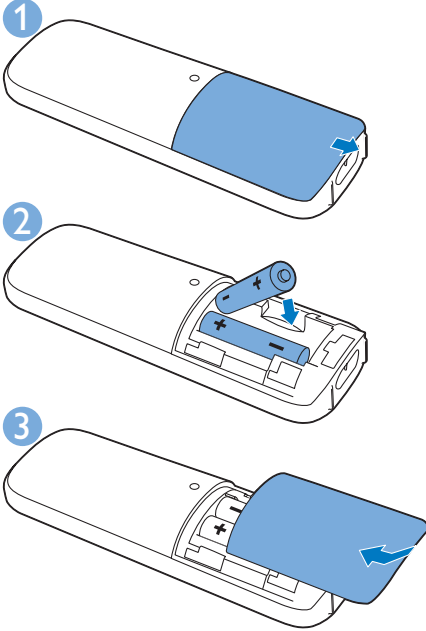

### Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.

### Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are charging, it is normal.

### Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

## Configure your phone (country dependent)

- 1 When using your phone for the first time, you see a welcome message.
- 2 Press **MENU/OK**.

### Set the country/language

Select your country/language, then press **MENU/OK** to confirm.

↳ The country/language setting is saved.

### Note

- The country/language setting option is country dependent. If no welcome message is displayed, it means the country/language setting is preset for your country.

To re-set the language, see the following steps.

- 1 Select **MENU/OK** > **[PHONE SETUP]** > **[LANGUAGE]**, then press **MENU/OK** to confirm.
- 2 Select a language, then press **MENU/OK** to confirm.  
↳ The setting is saved.

### Set the date and time

- 1 Press **MENU/OK**.
- 2 Select **[PHONE SETUP]** > **[DATE/TIME]**, then press **MENU/OK** to confirm.
- 3 Press the numeric buttons to enter the date, then press **MENU/OK** to confirm.  
↳ The time setting menu is displayed on the handset.
- 4 Press the numeric buttons to enter the time.
  - If the time is in 12-hour format, press **▲** / **▼** to select **[AM]** or **[PM]**.
- 5 Press **MENU/OK** to confirm.

## Change the remote access PIN code (for B155)

### Note

- The default answering machine remote access PIN code is 0000 and it is important to change it to ensure the security.

- 1 Press **☰** / **☎** or **MENU/OK** > **[ANSW MACHINE]** > **MENU/OK**.
- 2 Select **[REMOTE ACC.]** > **[CHANGE PIN]**, then press **MENU/OK** to confirm.
- 3 Enter the old PIN/passcode, then press **MENU/OK** to confirm.
- 4 Enter the new PIN/passcode, then press **MENU/OK** to confirm.
- 5 Enter the new PIN/passcode again, then press **MENU/OK** to confirm.  
↳ The setting is saved.

## Charge the handset

Place the handset on the base station or the charging cradle to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

↳ The handset starts charging.

### Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.

You can activate or deactivate the docking tone. Your phone is now ready to use.

## Check the battery level



The battery icon displays the current battery level.



When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low).



When the handset is on the base station/charger, the bars flash until charging completes.



The empty battery icon flashes. The battery is low and needs recharging.

The handset turns off if the batteries are empty. If you are on the phone, you hear warning tones when the batteries are almost empty. The call gets disconnected after the warning.

## What is standby mode?

Your phone is in standby mode when it is idle. The handset name (or date and time) are displayed on the standby screen.

















### Tip

- Press and hold **MENU/OK** to switch between the handset name and date and time display.


## Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Icon	Descriptions
	When the handset is off the base station/charger, the bars indicate the battery level (from full to low).
	When the handset is on the base station/charger, the bars keep scrolling until charging is complete.
	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.
	It displays the connection status between the handset and base station. The more bars are shown, the better the signal strength is.
	It remains steadily on when browsing incoming calls in the call log.
	It indicates an outgoing call in the redial list.
	It flashes when there is a new missed call or when browsing new missed calls. It remains steadily on when browsing the missed calls in call log that are already read.
	It flashes when receiving incoming call. It remains steadily on during a call.
	The ringer is off.
	Answering machine (B155 only): it flashes when there is a new message or when the memory is full. It is displayed when the telephone answering machine is turned on.
	It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message.


-  / It is displayed when you scroll up/down a list/increase and decrease the volume.
- 
-  There are more digits on the right. Press **REDIAL/C** to read.

## Check the signal strength

-  The number of bars indicates the connection status between the handset and base station. The more bars are shown, the better the connection is.

- Make sure the handset is connected to the base station before you make or receive calls and carry out the phone functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset close to the base station.

## Switch the handset on or off

Press and hold  to switch the handset on or off.

# 4 Calls

## Note

- When the power fails, the phone cannot access emergency services.

## Tip

- Check the signal strength before you make a call or when you are in a call (see 'Check the signal strength' on page 10).


## Make a call

You can make a call in these ways:


- Normal call.
- Redial call.

You can also make a call from the redial list (see 'Redial a call' on page 20), phonebook list (see 'Call from the phonebook' on page 16) and call log (see 'Return a call' on page 18).

### Normal call

- 1 Press .
- 2 Dial the phone number.
  - ↳ The number is dialed out.
  - ↳ The duration of your current call is displayed.


### Redial call

- 1 Dial the phone number.
  - To erase a digit, press **REDIAL/C**.
  - To enter a pause, press and hold **#**.
- 2 Press  to dial out the call.

## Note

- The talk time of your current call is displayed on the call timer.
- If you hear warning tones, the phone is almost out of battery or out of range. Charge the battery or move the phone close to the base station.

## Answer a call

When there is an incoming call, press  to answer the call.

## Warning

- When the handset rings, keep the handset away from your ear to avoid ear damage.

## Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.

## Tip


- When there is a missed call, a notification message appears.

## Turn off the ringer of an incoming call

When the phone rings, press **REDIAL/C**.



## End a call

You can end a call in these ways:

- Press .
- Place the handset to the base station or charging cradle.

---



## Adjust the earpiece volume

Press  ▲ /  ▼ to adjust the volume during a call.

- ↳ The earpiece volume is adjusted and the phone is back to the call screen.

---

## Mute the microphone

- 1 Press  during a call.
  - ↳ [MUTE ON] is displayed on the handset.
  - ↳ The caller cannot hear you, but you can still hear his voice.
- 2 Press  again to unmute the microphone.
  - ↳ You can now communicate with the caller.

---

## Make a second call

### Note

- This service is network dependent. Check with your network provider for operation.

- 1 Press **R** during a call.
  - ↳ The first call is put on hold.
- 2 Dial the second number:
  - ↳ The number displayed on the screen is dialed out.

---

## Answer a second call

### Note

- This service is network dependent. Check with your network provider for operation.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press **R** and **2<sub>ABC</sub>** to answer the call.
  - ↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press **R** and **1<sub>DEF</sub>** to end the current call and answer the first call.

---

## Switch between two calls

### Note

- This service is network dependent. Check with your network provider for operation.

Press **R** and **2<sub>ABC</sub>**,

- ↳ The current call is put on hold, and you are now connected to the other.

---

## Make a conference call with the external callers

### Note

- This service is network and country dependent. Check with the service provider for operation and additional charges.

When you are connected to two calls, press **R**, then **3<sub>DEF</sub>**,

- ↳ The two calls are combined and a conference call is established.

# 5 Intercom and conference calls



An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation between you, another handset user and the outside callers.

---

## Make a call to another handset

### Note

- If the base station only has 2 registered handsets, press and hold \*INT to make a call to another handset.

- 1 Press and hold \*INT.
  - ↳ For multi-handset versions, the handsets available for intercom are displayed, then go to step 2.
  - ↳ For two-handset versions, the other handset rings, then go to step 3.
- 2 Select a handset, then press **MENU/OK** to confirm.
  - ↳ The selected handset rings.
- 3 Press  on the selected handset.
  - ↳ The intercom is established.
- 4 Press **REDIAL/C** or  to cancel or end the intercom call.

---

## While you are on the phone

You can go from one handset to another during a call:

- 1 Press and hold \*INT.
  - ↳ The current caller is put on hold.
  - ↳ For multi-handset versions, the handsets available for intercom are displayed, then go to step 2.

- 2 Select a handset, then press **MENU/OK** to confirm.
  - ↳ Wait for the other side to answer your call.

---

## Switch between calls

Press and hold \*INT to switch between the outside call and the intercom call.



---

## Make a conference call

A 3-way conference call is between you, another handset user and the outside callers. It requires two handsets to share the same base station.

---

## During an external call

- 1 Press and hold \*INT to initiate an internal call.
  - ↳ The external caller is put on hold.
  - ↳ For multi-handset versions, the handsets available for intercom are displayed, then go to step 2.
  - ↳ For two-handset versions, the other handset rings, then go to step 3.
- 2 Select a handset, then press **MENU/OK** to confirm.
  - ↳ The selected handset rings.
- 3 Press  on the selected handset.
  - ↳ The intercom is established.
- 4 Press **MENU/OK**.
  - ↳ You are now in a 3-way conference call with an external call and a selected handset.
- 5 Press  to end the conference call.

### Note

- Press  to join an ongoing conference with another handset if **[SERVICES] > [CONFERENCE]** is set to **[AUTO]**.

---

## During the conference call

- 1** Press and hold **\*INT** to put the internal call on hold and go back to the external call.  
↳ The internal call is put on hold.
- 2** Press and hold **\*INT** again to put the external call on hold and go back to the internal call.  
↳ The external call is put on hold.
- 3** Press **MENU/OK** to go back to the conference call.



### Note

- If a handset hangs up during the conference call, the other handset remains connected to the external call.






# 6 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

---

## Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **REDIAL/C** to delete a character. Press and hold **REDIAL/C** to delete all characters. Press  **▲** and  **▼** to move the cursor left and right.
- 3 Press **0**  to add a space.



### Note

- For information on key mapping of characters and numbers, see the chapter 'Appendix'.

# 7 Phonebook

This phone has a phonebook that stores up to 50 records. You can access the phonebook from the handset. Each record can have a name up to 12 characters long and a number up to 24 digits long.

You have up to 2 direct access memories (Keys 1 and 2). Depending on your country, keys 1 and 2 are preset to the voice mail number and information service number of your service provider respectively. When you press and hold on the key in standby mode, the saved phone number is dialed automatically.

## Note

- The availability of direct access memory is country dependent.

## View the phonebook

### Note

- You can view the phonebook on one handset only each time.

- 1 Press ▲ or press **MENU/OK** > **[PHONEBOOK]** > **[VIEW]** to access the phonebook list.
- 2 Select a contact and view the available information.

## Search a record

You can search the phonebook records in these ways:

- Scroll the contacts list.
- Enter the first character of the contact.

## Scroll the contact list

- 1 Press ▲ or press **MENU/OK** > **[PHONEBOOK]** > **[VIEW]** to access the phonebook list.
- 2 Press ▲ and ▼ to scroll through the phonebook list.

## Enter the first character of a contact

- 1 Press ▲ or press **MENU/OK** > **[PHONEBOOK]** > **[VIEW]** to access the phonebook list.
- 2 Press the alphanumerical key that matches the character.
  - ↳ The first record that starts with this character is displayed.

## Call from the phonebook

- 1 Press ▲ or press **MENU/OK** > **[PHONEBOOK]** > **[VIEW]** to access the phonebook list.
- 2 Select a contact in the phonebook list.
- 3 Press to make the call.

## Add a record

### Note





- If your phonebook memory is full, the handset displays a notification message. Delete some records to add new ones.
- When you change the number of a record, the new number will overwrite the old number.

- 1 Press **MENU/OK**.
- 2 Select **[PHONEBOOK]** > **[ADD NEW]**, then press **MENU/OK** to confirm.
- 3 Enter the name, then press **MENU/OK** to confirm.

- 4 Enter the number, then press **MENU/OK** to confirm  
↳ Your new record is saved.



#### Tip

- Press and hold **#** to insert a pause.
- Press once or several times on the alphanumeric key to enter the selected character.
- Press **REDIAL/C** to delete the character: Press   or   to move the cursor left and right.

---

## Edit a record

- 1 Press **MENU/OK**.
- 2 Select **[PHONEBOOK] > [EDIT]**, then press **MENU/OK** to confirm.
- 3 Select a contact, then press **MENU/OK** to confirm.
- 4 Edit the name, then press **MENU/OK** to confirm.
- 5 Edit the number; then press **MENU/OK** to confirm.  
↳ The record is saved.

---

## Delete a record

- 1 Press **MENU/OK**.
- 2 Select **[PHONEBOOK] > [DELETE]**, then press **MENU/OK** to confirm.
- 3 Select a contact, then press **MENU/OK** to confirm.  
↳ A confirmation request is displayed on the handset.
- 4 Press **MENU/OK** to confirm.  
↳ The record is deleted.

---

## Delete all records

Press **MENU/OK**.

- 1 Select **[PHONEBOOK] > [DELETE ALL]**, press **MENU/OK** to confirm.  
↳ A confirmation request is displayed on the handset.
- 2 Press **MENU/OK** to confirm.  
↳ All records are deleted.



# 8 Call log

The call log stores the call history of all missed or received calls. The incoming call history includes the name and number of the caller, call time and date. This feature is available if you have registered to the caller ID service with your service provider. Your phone can store up to 20 call records. The call log icon on the handset flashes to remind you of any unanswered calls. If the caller allows the display of his identity, you can view his name or number. The call records are displayed in chronological order with the most recent received call at the top of the list.


## Note

- Make sure that the number in the call list is valid before you can call back directly from the call list.


The icons shown on the screen tell you whether they are missed/received calls.

Icons	Description
	It remains steadily on when browsing incoming calls in the call log.
	It flashes when there is a new missed call. It remains steadily on when browsing the missed calls in call log.



## View the call records

- 1 Press  ▼.  
↳ The incoming call log is displayed.
- 2 Select a record, then press **MENU/OK** and select **[VIEW]** for more available information.


## Save a call record to the phonebook

- 1 Press  ▼.  
↳ The incoming call log is displayed.
- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[SAVE NUMBER]**, then press **MENU/OK** to confirm.
- 4 Enter and edit the name, then press **MENU/OK** to confirm.
- 5 Enter and edit the number, then press **MENU/OK** to confirm.  
↳ The record is saved.

## Return a call

- 1 Press  ▼.
- 2 Select a record on the list.
- 3 Press  to make the call.

## Delete a call record

- 1 Press  ▼.  
↳ The incoming call log is displayed.
- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[DELETE]**, then press **MENU/OK** to confirm.  
↳ A confirmation request is displayed on the handset.
- 4 Press **MENU/OK** to confirm.  
↳ The record is deleted.

## Delete all call records

- 1 Press  ▼.

- ↳ The incoming call log is displayed.
- 2** Press **MENU/OK** to enter the options menu.
- 3** Select **[DELETE ALL]**, then press **MENU/OK** to confirm.
  - ↳ A confirmation request is displayed on the handset.
- 4** Press **MENU/OK** to confirm.
  - ↳ All records are deleted.

## 9 Redial list

The redial list stores the call history of dialed calls. It includes the names and/or numbers you have called. This phone can store up to 10 redial records.


---

### View the redial records

Press **REDIAL/C**.

---

### Redial a call

- 1 Press **REDIAL/C**.
- 2 Select a record, then press   
↳ The number is dialed out.

---

### Save a call record to the phonebook

- 1 Press **REDIAL/C** to enter the list of dialed calls.
- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[SAVE NUMBER]**, then press **MENU/OK** to confirm.
- 4 Enter and edit the name, then press **MENU/OK** to confirm.
- 5 Enter and edit the number then press **MENU/OK** to confirm.  
↳ The record is saved.

---

### Delete a redial record

- 1 Press **REDIAL/C** to enter the list of dialed calls.

- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[DELETE]**, then press **MENU/OK** to confirm.  
↳ A confirmation request is displayed on the handset.
- 4 Press **MENU/OK** to confirm.  
↳ The record is deleted.

---

### Delete all redial records

- 1 Press **REDIAL/C** to enter the list of dialed calls.
- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[DELETE ALL]**, then press **MENU/OK** to confirm.  
↳ A confirmation request is displayed on the handset.
- 4 Press **MENU/OK** to confirm.  
↳ All records are deleted.

# 10 Phone settings

You can customize the settings to make it your own phone.

---

## Sound settings

### Set the handset's ringtone volume

You can select among 5 ringtone volume levels or [OFF].

- 1 Press **MENU/OK**.
- 2 Select **[PHONE SETUP] > [SOUNDS] > [RING VOLUME]**, then press **MENU/OK** to confirm.
- 3 Select a volume level, then press **MENU/OK** to confirm.  
↳ The setting is saved.

---

### Set the handset's ringtone

You can select from 10 ringtones.

- 1 Press **MENU/OK**.
- 2 Select **[PHONE SETUP] > [SOUNDS] > [RING TONES]**, then press **MENU/OK** to confirm.
- 3 Select a ringtone, then press **MENU/OK** to confirm.  
↳ The setting is saved.

---

### Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Press **MENU/OK**.
- 2 Select **[PHONE SETUP] > [SOUNDS] > [KEY TONE]**, then press **MENU/OK** to confirm.
- 3 Select **[ON]/[OFF]**, then press **MENU/OK** to confirm.  
↳ The setting is saved.

---

### Set the docking tone

Docking tone is the sound made when you place the handset on the base station or charger:

- 1 Press **MENU/OK**.
- 2 Select **[PHONE SETUP] > [SOUNDS] > [DOCKING TONE]**, then press **MENU/OK** to confirm.
- 3 Select **[ON]/[OFF]**, then press **MENU/OK** to confirm.  
↳ The setting is saved.

---

### Name the handset

The name of the handset can be up to 10 characters. It is displayed on the handset screen in standby mode. You can press **MENU/OK** to switch between and handset name and date and time display.

- 1 Press **MENU/OK**.
- 2 Select **[PHONE SETUP] > [PHONE NAME]**, then press **MENU/OK** to confirm.
- 3 Enter or edit the name. To erase a character, press **REDIAL/C**.
- 4 Press **MENU/OK** to confirm.  
↳ The setting is saved.

---

### Set the date and time

For information, see 'Set the date and time'.

---

### Set the display language

#### Note

- This feature only applies to models with multiple-language support.
- Languages available vary from country to country.

- 1 Press **MENU/OK**.

- 2 Select **[PHONE SETUP] > [LANGUAGE]**, then press **MENU/OK** to confirm.
- 3 Select a language, then press **MENU/OK** to confirm.  
↳ The setting is saved.



# 11 Telephone answering machine

## Note

- Available only for B155.

Your phone includes a telephone answering machine that records unanswered calls when it is on. By default, the answering machine is set to the **[RECORD ALSO]** mode. You can access the answering machine remotely and change the settings through the answering machine menu on the handset.

## Turn the answering machine on or off

- 1 Press **📞 / 📠** or **MENU/OK** > **[ANSW MACHINE]** > **MENU/OK**.
- 2 Select **[ON/OFF]** > **[ON]/[OFF]**, then press **MENU/OK** to confirm.
- 3 Select **[RECORD ALSO]/ [ANSWER ONLY]** when the answer machine is on, then press **MENU/OK** to confirm.  
↳ The setting is saved.

## Note

- **[RECORD ALSO]** means calls are answered and messages are recorded. **[ANSWER ONLY]** means calls are only answered, messages are not recorded.

## Set the answering machine language

### Note

- This feature only applies to models with multiple-language support.

The answering machine language is the language for the announcements.

- 1 Press **📞 / 📠** or **MENU/OK** > **[ANSW MACHINE]** > **MENU/OK**.
- 2 Select **[LANGUAGE]**, then press **MENU/OK** to confirm.
- 3 Select a language, then press **MENU/OK** to confirm.  
↳ The setting is saved.

## Announcements

The announcement is the message your caller hears when the answering machine picks up the call. The answering machine has 2 default announcements: the **[RECORD ALSO]** mode and **[ANSWER ONLY]** mode.

### Record an announcement

The maximum length of the announcement you can record is 3 minutes. The newly recorded announcement automatically replaces the old one.

- 1 Press **📞 / 📠** or **MENU/OK** > **[ANSW MACHINE]** > **MENU/OK**.
- 2 Select **[ANNOUNCEMENT]**, then press **MENU/OK** to confirm.
- 3 Select **[RECORD ALSO]** or **[ANSWER ONLY]**, then press **MENU/OK** to confirm.
- 4 Select **[RECORD]**, then press **MENU/OK** to confirm.
- 5 Start recording close to the microphone after the beep.

- 6 Press **MENU/OK** to stop recording or the recording stops after 3 minutes.

#### Note

- Make sure that you speak close to the microphone when you record an announcement.

### Listen to the announcement

- 1 Press **📞 / 🗨️** or **MENU/OK** > **[ANSW MACHINE]** > **MENU/OK**.
- 2 Select **[ANNOUNCEMENT]**, then press **MENU/OK** to confirm.
- 3 Select **[RECORD ALSO]** or **[ANSWER ONLY]**, then press **MENU/OK** to confirm.
- 4 Select **[PLAY]**, then press **MENU/OK** to confirm.  
↳ You can listen to the current announcement.

#### Note

- You can no longer listen to the announcement when you pick up an incoming call.

### Restore the default announcement

- 1 Press **📞 / 🗨️** or **MENU/OK** > **[ANSW MACHINE]** > **MENU/OK**.
- 2 Select **[ANNOUNCEMENT]**, then press **MENU/OK** to confirm.
- 3 Select **[RECORD ALSO]** or **[ANSWER ONLY]**, then press **MENU/OK** to confirm.
- 4 Select **[USE DEFAULT]**, then press **MENU/OK** to confirm.  
↳ A confirmation request is displayed on the handset.
- 5 Press **MENU/OK** to confirm.  
↳ The default announcement is restored.

## Incoming messages

Each message can be up to 3 minutes long. When you receive new messages, the new message indicator on the handset flashes.

#### Note

- If you pick up the phone when the caller leaves a message, the recording stops and you can talk to the caller directly.
- If the memory is full, the answering machine switches to **[ANSWER ONLY]** automatically. Delete old messages to receive new ones.

### Listen to the incoming message

You can listen to the incoming messages in the sequence they are recorded.

- If there are new messages, press **📞 / 🗨️** to listen.
- If there is no new message, press **📞 / 🗨️** or **[ANSW MACHINE]** > **[PLAY]**, then **MENU/OK** to listen to old messages.
- Press **MENU/OK** > **[ANSW MACHINE]** > **[PLAY]**, then press **MENU/OK** to confirm.  
↳ New messages start playing. Old messages start playing if there is no new message.
- Press **REDIAL/C** to stop listening.
- Press **MENU/OK** to enter the options menu.
- Press **🔊 ▲ / 🔊 ▼** to increase/decrease the volume.

### Delete an incoming message

- 1 When you listen to the message, press **MENU/OK** to enter the options menu.
- 2 Select **[DELETE]**, then press **MENU/OK** to confirm.  
↳ The current message is deleted.

---

## Delete all old incoming messages

- 1 Press / or **MENU/OK** > **[ANSW MACHINE]** > **MENU/OK**.
- 2 Select **[DELETE ALL]**, then press **MENU/OK** to confirm.  
↳ A confirmation request is displayed on the handset.
- 3 Press **MENU/OK** to confirm.  
↳ All old messages are permanently deleted.

### Note

- You can delete the read messages only. No deleted messages can be recovered.

---

## Set the ring delay

You can set the number of times the phone rings before the answering machine picks up the call.

- 1 Press / or **MENU/OK** > **[ANSW MACHINE]** > **MENU/OK**.
- 2 Select **[RING DELAY]**, then press **MENU/OK** to confirm.
- 3 Select a new setting, then press **MENU/OK** to confirm.  
↳ The setting is saved.

### Note

- Make sure that the answering machine is switched on before this feature can be applied.

### Tip

- When you access the answering machine remotely, you are recommended to set the ring delay to **[TOLL SAVER]** mode. This is a cost effective way to manage your messages. When there are new messages, the answering machine picks up the call after 3 rings; When there is no messages, it picks up the call after 5 rings.

---

## Remote access

You can operate your answering machine when you are away from home. Simply make a call to your phone with a touch tone phone and enter your 4-digit PIN code.

### Note

- The remote access PIN code is the same as your system PIN. The preset PIN is 0000.

---

## Activate/deactivate the remote access

You can allow or block remote access to the answering machine.

- 1 Press / or **MENU/OK** > **[ANSW MACHINE]** > **MENU/OK**.
- 2 Select **[REMOTE ACC.]**, then press **MENU/OK** to confirm.
- 3 Select **[ACTIVATE]/[DEACTIVATE]**, then press **MENU/OK** to confirm.  
↳ The setting is saved.

---

## Change the PIN/passcode

- 1 Press / or **MENU/OK** > **[ANSW MACHINE]** > **MENU/OK**.
- 2 Select **[REMOTE ACC.]** > **[CHANGE PIN]**, then press **MENU/OK** to confirm.
- 3 Enter the old PIN/passcode, then press **MENU/OK** to confirm.
- 4 Enter the new PIN/passcode, then press **MENU/OK** to confirm.
- 5 Enter the new PIN/passcode again, then press **MENU/OK** to confirm.  
↳ The setting is saved.

---

## Access the answering machine remotely

- 1 Make a call to your home number with a touch tone phone.
- 2 Enter # when you hear the announcement.
- 3 Enter your PIN code.
  - ↳ You now have access to your answering machine, and you can listen to the new messages.

### Note

- You have 2 chances to enter the correct PIN code before your phone hangs up.

- 4 Press a key to carry out a function. See the Remote access commands table below for a list of available functions.

### Note

- When there is no message, the phone hangs up automatically if no key is pressed for 8 seconds.

## Remote access commands


Key	Function
1	Listen to the previous message.
2	Listen to messages.
3	Skip to the next message.
6	Delete the current message.
7	Switch the answering machine on (not available when you listen to the messages).
8	Stop listening to the message.
9	Switch the answering machine off. (not available when you listen to the messages).

# 12 Services

The phone supports a number of features that help you handle and manage the calls.

---

## Auto conference

To join an external call with another handset, press .

---

### Activate/Deactivate auto conference

- 1 Press **MENU/OK**.
- 2 Select **[SERVICES] > [CONFERENCE]**, then press **MENU/OK** to confirm.
- 3 Select **[AUTO]/[OFF]**, then press **MENU/OK** to confirm.  
↳ The setting is saved.

---

## Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out.

---

#### Note

- The maximum length of a detect number is 10 digits. The maximum length of an auto prefix number is 10 digits.
- This is a country dependent feature.

---

## Set auto prefix

- 1 Press **MENU/OK**.

- 2 Select **[SERVICES] > [AUTO PREFIX]**, then press **MENU/OK** to confirm.
- 3 Press **MENU/OK**. Enter the detect number, then press **MENU/OK** to confirm.
- 4 Press **MENU/OK**. Enter the prefix number, then press **MENU/OK** to confirm.  
↳ The setting is saved.

---

#### Note

- To enter a pause, press and hold #.
- If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.
- The feature is unavailable if the dialed number starts with \* and #.

---

## Network type

---

#### Note

- This is a country dependent feature. It only applies to models with network type support.

- 1 Press **MENU/OK**.
- 2 Select **[SERVICES] > [NETWORK TYPE]**, then press **MENU/OK**.
- 3 Select a network type, then press **MENU/OK**.  
↳ The setting is saved.

---

## Select the recall duration

Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[SHORT]**, **[MEDIUM]** and **[LONG]**. The number of available options varies with different countries. For details, consult your service provider.

- 1 Press **MENU/OK**.

- 2 Select **[SERVICES]** > **[RECALL TIME]**, then press **MENU/OK** to confirm.
- 3 Select an option, then press **MENU/OK** to confirm.  
↳ The setting is saved.

---

## Dial mode

### Note

- This feature only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

---

### Set the dial mode

- 1 Press **MENU/OK**.
- 2 Select **[SERVICES]** > **[DIAL MODE]**, then press **MENU/OK** to confirm.
- 3 Select a dial mode, then press **MENU/OK** to confirm.  
↳ The setting is saved.

### Note

- If your phone is in pulse dial mode, press **\*INT** during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals.

---

## Auto clock

### Note

- This service is network dependent.
- Make sure you have subscribed to the caller ID service before you use this feature.

It synchronizes the date and time on your phone with the public switched telephone

network (PSTN) automatically. For the date to be synchronized, make sure the current year is set.

- 1 Press **MENU/OK**.
- 2 Select **[SERVICES]** > **[AUTO CLOCK]**, then press **MENU/OK** to confirm.
- 3 Select **[ON]/[OFF]**, then press **MENU/OK**.  
↳ The setting is saved.

---

## Register additional handsets

You can register additional handsets to the base station. The base station can register up to 4 handsets.

- 1 You can register your handset as follows:
  - If the handset is in **[Unregistered]** status, press **MENU/OK**.
  - If the handset is in **[SEARCHING]** and **[UNAVAILABLE]** status, press **MENU/OK** > **[SERVICES]** > **[REGISTER]** > **MENU/OK**.
- 2 Press and hold **(\*)** on the base station for 10 seconds.

### Note

- For models with an answering machine, you hear a confirmation beep indicating that the base is now in registration mode.

- 3 Enter the system PIN. Press **REDIAL/C** to make corrections. Then press **MENU/OK** to confirm the PIN.  
↳ Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset.

### Note

- If the PIN is incorrect or no base is found within a certain period, a notification message will be displayed on your handset.
- If registration fails, unplug the power adapter from the base station and plug it back. Wait for 15 seconds, and then repeat the registration procedure.
- The preset PIN is 0000. No change can be made on it.

↳ A confirmation request is displayed on the handset.

- 3 Press **MENU/OK** to confirm.  
↳ All settings are reset.

---

## Unregister the handsets

If two handsets share the same base station, you can unregister a handset with another handset.

- 1 Press **MENU/OK**.
- 2 Select **[SERVICES] > [UNREGISTER]**, then press **MENU/OK** to confirm.
- 3 Enter the system PIN. (The preset PIN is 0000). Press **REDIAL/C** to remove the number.
- 4 Select the handset number to be unregistered.
- 5 Press **MENU/OK** to confirm.  
↳ The handset is unregistered.

### Tip

- The handset number is displayed beside the handset name in standby mode.

### Note

- A handset cannot unregister itself.

---

## Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Press **MENU/OK**.
- 2 Select **[SERVICES] > [RESET]**, then press **MENU/OK** to confirm.

# 13 Technical data

## General specification and features

- Talk time: 10 hours
- Standby time: 200 hours
- Range indoor: 50 meters
- Range outdoor: 300 meters
- Phonebook list with 50 entries
- Redial list with 10 entries
- Call log with 20 entries
- Answering machine with 25 minutes recording time
- Caller identification standard support: FSK, DTMF

## Battery

- Philips: 2 × AAA Ni-MH 1.2V 300 mAh rechargeable batteries

## Power adapter

### Base and charger

- Tenpao: S003IB0600040 , input: 100-240 V~, 50/60 Hz 150 mA, output: 6 Vdc 400 mA
- Meic: MN-A102-U130 , input: 100-240 V~, 50/60 Hz 200 mA, output: 6 Vdc 400 mA

## Power consumption

- Power consumption in idle mode: around 0.70 W (B150); 0.75 W (B155)

## Weight and dimensions

- Handset: 83.8 grams  
154.4 × 48 × 25.2 mm (H × W × D)
- Base: 63.8 grams  
94.50 × 94.50 × 32.10 mm (H × W × D)
- Charger: 40.8 grams  
79.40 × 79.40 × 31.0 mm (H × W × D)



# 14 Notice

## Declaration of conformity

Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com).

## Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

## Compliance with EMF

This product complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

## Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste. Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

### Removing the disposable batteries

To remove the disposable batteries, see section 'Install the supplied batteries'.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box),

polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

# 15 Frequently asked questions

## No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays [UNREGISTERED], register your handset.

### Tip

- For further information, see the chapter 'Services', section 'Register additional handsets'.

## If I fail to pair (register) the additional handsets to the base station, what do I do?

Your base memory is full. Unregister the unused handsets and try again.


### Tip

- For further information, see the chapter 'Services', section 'Unregister the handsets'.

## My handset is in searching or unavailable status, what do I do?

- Make sure that the base station has power supply.
- Register the handset to the base station.
- Move the handset closer to the base station.

## I have chosen a wrong language which I cannot read, what do I do?

- 1 Press  to go back to the standby screen.
- 2 Press MENU/OK to access the main menu screen.
- 3 Select [PHONE SETUP] > [LANGUAGE], then you see one of the following texts appear on the screen:

---

CONFIG.TÉL > LANGUE

PHONE SETUP > LANGUAGE

---

CONFIG.TEL. > IDIOMA

---

- 4 Select it to access the language options.

- 5 Select your own language.

## No dialing tone.

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.

## No docking tone.

- The handset is not placed properly on the base station/charger.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

## I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

## The handset on the charger does not charge.

- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. The battery icon animates when charging.
- Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones with the same specifications.

## No display.

- Make sure the batteries are charged.
- Make sure there is power and the phone is connected.

## Bad audio (crackles, echo, etc.).

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

## The handset does not ring.

- Make sure the handset ringtone is turned on.
- Make sure the handset is registered to the base station.

**The caller ID does not display.**

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.



**Note**

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

# 16 Appendix

## Text and number input tables

key	Characters (for English/Latin)
0	space 0
1	- 1
2	A B C 2
3	D E F 3
4	G H I 4
5	J K L 5
6	M N O 6
7	P Q R S 7
8	T U V 8
9	W X Y Z 9
*	* ? / \ ( )
#	# ' , - &

key	Characters (for Norwegian/Danish/Polish)
0	space 0
1	- 1
2	A Æ B C 2
3	D E F 3
4	G H I 4
5	J K L 5
6	M N O 6
7	P Q R S 7
8	T U V 8
9	W X Y Z 9
*	* ? / \ ( )
#	# ' , - &

Key	Characters (for Greek)
0	space 0
1	- 1
2	A B Γ 2
3	Δ E Z 3
4	H Θ   4
5	K Λ M 5
6	N Ξ O 6

7	Π Ρ Σ 7
8	Τ Υ Φ 8
9	Χ Ψ Ω 9
*	* ? / \ ( )
#	# ' , - &

key	Characters (for Polish)
0	space 0
1	- 1
2	A B C 2
3	D E F 3
4	G H I 4
5	J K L Ł 5
6	M N O 6
7	P Q R S 7
8	T U V 8
9	W X Y Z 9
*	* ? / \ ( )
#	# ' , - &



2015 © Gibson Innovations Limited. All rights reserved.  
This product has been manufactured by, and is sold  
under the responsibility of Gibson Innovations Ltd., and  
Gibson Innovations Ltd. is the warrantor in relation to  
this product.

Philips and the Philips Shield Emblem are  
registered trademarks of Koninklijke Philips  
N.V. and are used under license from  
Koninklijke Philips N.V.

UM\_B150\_155\_05\_EN\_V1.0  
wk1533

**CE 0168**

