



Philips
5.1 DVD Home theater

Double basspipes

HDMI ARC & USB
Built-in Bluetooth
1000W

HTD5520

Powerful cinematic surround sound with deep sound

Bring the power of the cinema into your home! Pump up your home entertainment experience with speakers with double basspipes offering powerful 1000W surround sound and in Full HD 1080p with DVD Disc playback.

Great listening experience

- 1000W RMS power delivers great sound for movies and music
- Powerful speakers with double basspipes for great sound
- Dolby Digital for ultimate movie experience
- Exposed speaker drivers for powerful surround sound

Simply enjoy all your entertainment

- Bluetooth wireless music streaming from your music devices
- DivX Ultra Certified for enhanced DivX video playback
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Plays DVD, VCD, CD and USB devices
- Karaoke for endless singing entertainment at home
- Audio in to enjoy music from iPod/iPhone/MP3 player

Designed to enhance your cinema at home

- Modern design to complement your home environment

PHILIPS

5.1 DVD Home theater
Double basspipes HDMI ARC & USB, Built-in Bluetooth, 1000W

HTD5520/55

Highlights

1000W RMS power



1000W RMS power delivers great sound for movies and music

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.


DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD

recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Dolby Digital

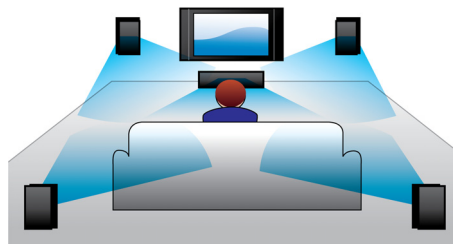

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

Karaoke for endless singing



Karaoke for endless singing entertainment at home



Specifications

Sound

- Sound System: Dolby Digital 5.1
- Total Power RMS @ 10% THD: 1000 W
- Center speaker output power: 166 W
- Satellite speaker output power: 4 x 166 W
- Subwoofer output power: 166 W
- Sound Enhancement: Double Bass Sound, Night Mode

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 3" Full range woofer
- Center speaker freq range: 150-20k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Satellite speaker freq range: 150-20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 8" woofer
- Subwoofer freq range: 20-150 Hz
- Subwoofer impedance: 4 ohm

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Picture/Display

- Picture enhancement: Video upscaling

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

Still Picture Playback

- Picture Enhancement: Rotate, Zoom
- Picture Compression Format: BMP, GIF, JPEG, TIFF

File Format

- Video: avi, divx, mpeg, mp3
- Audio: mp3, wma
- Picture: GIF, JPEG, BMP

Connectivity

- Front Connections: Audio in, Hi-Speed USB, Microphone In
- Rear Connections: Digital optical in, HDMI 1.4 output (ARC), Mini Easy-Fit Speaker Jacks, Composite video (CVBS) output, AUX IN 1

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play,

- One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC)

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

Power

- Power consumption: 105 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: Remote Control, AAA Battery (x1), Safety & Legal Leaflet, Trademarks Sheet, User Manual, HDMI cable

Dimensions

- Center Speaker (W x H x D): 223 x 100 x 80 mm
- Center Speaker Weight: 0.65 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 90 x 185 x 82 mm
- Front Speaker cable length: 3 m
- Front Speaker Weight: 0.53 kg
- Rear Speaker (W x H x D): 90 x 185 x 82 mm
- Rear Speaker cable length: 7 m
- Rear Speaker Weight: 0.53 kg
- Subwoofer (W x H x D): 178 x 300 x 343 mm
- Subwoofer cable length: 3 m
- Subwoofer Weight: 3.66 kg

Packaging dimensions

- EAN: 87 12581 71528 1
- Packaging dimensions (W x H x D): 59.7 x 32.5 x 38.9 cm
- Gross weight: 10.67 kg
- Nett weight: 9.44 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.23 kg
- Type of shelf placement: Laying

Outer Carton

- EAN: 87 12581 71528 1
- Gross weight: 10.67 kg
- Outer carton (L x W x H): 59.7 x 38.9 x 32.5 cm
- Nett weight: 9.44 kg
- Number of consumer packagings: 1
- Tare weight: 1.23 kg

Product dimensions

- Product dimensions (W x H x D): 36 x 5.8 x 33.5 cm
- Weight: 2.4 kg



Issue date 2015-09-22

Version: 4.0.5

12 NC: 8670 001 13127
EAN: 87 12581 71528 1

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.
* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.