

Philips
5.1 Home theater

3D Blu-ray



HTB3560

Powerful Surround Sound from Compact Speakers

with 3D Blu-ray

Bring the power of the cinema into your home with the Philips home cinema system HTB3560! Pump up your home entertainment experience with exposed speakers drivers offering powerful surround sound and in Full HD 1080p with 3D Blu-ray.

Great listening experience

- 300W RMS power delivers great sound for movies and music
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- Exposed speaker drivers for powerful surround sound

Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Access your favorite YouTube videos & Picasa photos easily
- DivX Plus HD Certified for high definition DivX playback
- EasyLink to control all HDMI CEC devices via a single remote
- Audio in to enjoy music from iPod/iPhone/MP3 player

Designed to enhance your cinema at home

- Modern design to complement your home environment

PHILIPS

Highlights

300W RMS power



300W RMS power delivers great sound for movies and music

Access YouTube and Picasa



Get YouTube videos and Picasa photos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn on your computer. Simply ensure that your Blu-ray player or Home cinema system is connected to the Internet, either wirelessly over Wi-Fi or with a cable to the LAN connector - then sit back and enjoy the best of YouTube & Picasa.

Audio in




Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Dolby TrueHD and DTS-HD

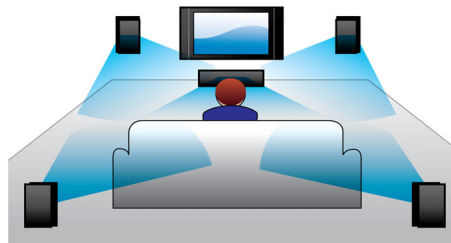

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar

speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Modern design

Modern design to complement your home environment



Specifications

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, dts ES, DTS-HD High Resolution Audio, DTS-HD Master Audio Essential
- Center speaker output power: 50 W
- Cube speaker output power: 2 x 50 W
- Satellite speaker output power: 2 x 50 W
- Subwoofer output power: 50 W
- Total Power RMS @ 30% THD: 300 W

Loudspeakers

- Loudspeaker types: 2 x Satellite speakers, 3 x Cube speakers
- Drivers per Cube speaker: 1 x 2.5" woofer
- Cube speaker freq range: 150 - 20k Hz
- Cube speaker impedance: 4 ohm
- Drivers per Satellite speaker: 1 x 2.5" woofer
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

Connectivity

- Front Connections: Music iLINK, USB
- Rear Connections: AUX in, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital optical in, Ethernet, Fixed FM Antenna, HDMI 1.4 output (ARC)

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color
- Online services: Picasa, YouTube

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg

Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320kbps

Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 60 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Main Unit Weight: 2.40 kg
- Center Speaker (W x H x D): 84.5 x 89 x 89 mm
- Center Speaker Weight: 0.30 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 85 x 160 x 95 mm
- Front Speaker Weight: 0.28 kg
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 84.5 x 159 x 80 mm
- Rear Speaker Weight: 0.30 kg
- Rear Speaker cable length: 7 m
- Subwoofer (W x H x D): 160 x 267.5 x 265 mm
- Subwoofer Weight: 2.5 kg
- Subwoofer cable length: 2 m
- Packaging (W x H x D): 520 x 310 x 377 mm
- Weight incl. Packaging: 8.75 kg

Accessories

- Compatible accessories: STS3001 Speaker stand
- Included accessories: 2 x AAA Batteries, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

Packaging dimensions

- Packaging dimensions (W x H x D): 37.7 x 52 x 31 cm
- EAN: 87 12581 64845 9
- Gross weight: 7.47 kg
- Nett weight: 6.37 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.1 kg
- Type of shelf placement: Laying

Outer Carton

- EAN: 87 12581 64845 9
- Gross weight: 7.47 kg
- Outer carton (L x W x H): 52 x 37.7 x 31 cm
- Nett weight: 6.37 kg
- Number of consumer packagings: 1
- Tare weight: 1.1 kg



Issue date 2015-08-10

Version: 4.0.3

12 NC: 8670 000 91122
EAN: 08 71258 16484 59

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com