



Philips
MP3 portable speaker

Universal 3.5 mm



SBA1700

Impressive sound, stylish design

for music enjoyment on the go

Move with your music! Enjoy stereo sound wherever you go on a stylish travel speaker with folding stand. Secure the line-in cable and use as a lanyard for easy portability. Inside, a digital amplifier eliminates mobile-phone interference.

Enjoy your music in stereo


- Class 'D' digital amplifier for quality sound performance
- Lightweight, portable design for music enjoyment any time
- Mobile phone shielding technology for static-free sound
- Universal: works via your device's 3.5 mm headphone jack

Take your music with you

- 20 hours of continuous play for worry-free enjoyment
- Battery powered for portability
- Carrying pouch to protect your speakers when not in use
- Line-in cable becomes a lanyard for easy portability

Smart design

- Built-in folding stand to direct the sound
- Polished aluminium body and rugged metal grill

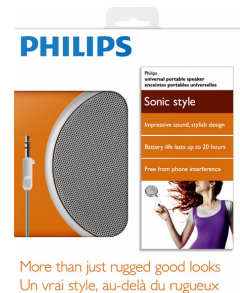

More than just rugged good looks
Un vrai style, au-delà du robuste



PHILIPS
sense and simplicity

Highlights

20 hours of continuous play

Powered by batteries, this speaker offers up to 20 hours of continuous play for worry-free enjoyment when you're listening to your music on the go.

Battery powered

Powered by batteries, it's easy to take with you for enjoyment on the go - anywhere and everywhere.

Built-in folding stand

When enjoying your music out loud and on the go, you can easily prop up the speaker to direct the sound with the speaker's convenient, built-in folding stand.

Carrying pouch



Look after your speaker and stop the cable getting tangled by storing it in this handy soft pouch when not in use.

Class 'D' Amplifier

The Class 'D' Digital Amplifier takes an analogue signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, the Class 'D' Digital Amplifier has over 90% efficiency compared to traditional AB amplifiers. This

high efficiency translates into a powerful amplifier with a small footprint.

Lightweight, portable design



The durable, lightweight material and design mean you can carry the speakers with you wherever you go.

Line-in doubles as lanyard

These speakers are ready to go! When it's time to take your music on the go, reconnect the line-in cable and secure it in place to use as a convenient lanyard.

Mobile phone shielding

Mobile phone shielding technology is an advanced circuitry design that cuts out mobile phone interference to ensure static free sound

Polished metal body and grill

Finally, a travel speaker that looks as good as it sounds. With a polished aluminium body and rugged metal grill, this speaker is built for both travel and style.

Universal 3.5 mm headphone jack

Plug and play with any of your mobile devices that have a 3.5 mm headphone jack – iPods, iPhones, GoGears, MP3 players, laptops, netbooks, music phones and more.

Specifications

Design and finishing

- Colour(s): silver
- Materials: aluminium/soft-touch backing

Accessories

- Carrying case: carrying case included
- Batteries: not included

Power

- Battery type: AAA
- Operating time on battery: 20 hr
- Number of batteries: 3

Sound

- Frequency response: 200 - 16,000 Hz
- Impedance: 4
- RMS Power rating: 2 W

Packaging dimensions

- Type of shelf placement: Soother
- Packaging type: Soother
- Number of products included: 1
- Packaging dimensions (W x H x D): 12.6 x 17.3 x 5.05 cm
- Gross weight: 0.248 kg
- Net weight: 0.17 kg
- Tare weight: 0.078 kg
- EAN: 87 12581 50206 5

Outer Carton

- Number of consumer packages: 12
- Outer carton (L x W x H): 56.8 x 22.5 x 15.8 cm
- Gross weight: 3.65 kg
- Net weight: 2.04 kg
- Tare weight: 1.61 kg
- EAN: 87 12581 50207 2

Inner Carton

- Number of consumer packages: 4
- Inner carton (L x W x H): 21 x 18.2 x 13.5 cm
- Gross weight: 1.1 kg
- Net weight: 0.68 kg
- Tare weight: 0.42 kg
- EAN: 87 12581 50208 9

