



Philips
Faro design cordless phone

1.8" display/white backlight
Hands-free speakerphone



M7701B

A new form of conversation

The boldly sculptured Philips Faro elevates cordless phone design to a modern art form. Refined lines unify the phone with its secondary base display. Enjoy smart functions like instant access to speakerphone and easy alarm snooze.

Exquisite design with high quality execution

- Finely crafted, bold and sculptural
- Secondary display on the base shows caller ID and clock
- Charge handset either way around
- Calibrated, seamlessly integrated keys for precise dialling

Ultimate calling experience

- High-contrast 4.6 cm (1.8") white-on-black graphical display
- HQ-Sound: high quality acoustic engineering for superb sound
- Instant-access speakerphone for easy hands-free chats
- Easy-access snooze button for extra sleep time
- Black list, anonymous call, silence mode, call barring
- Visual ringer flashes to alert you of incoming calls
- Hearing aid compatible - reduces unwanted noise

Eco-conscious product

- Zero power emission when ECO+ mode is activated

PHILIPS

Faro design cordless phone
1.8" display/white backlight Hands-free speakerphone

Highlights

4.6 cm (1.8") graphical display



A high-contrast, white-on-black reverse LCD display ensures easy reading and also blends perfectly with the Philips Faro overall sleek design language.

Bold and sculptural

Finely crafted, bold and sculptural

Calibrated keypad



The calibrated keypad allows you to clearly feel every keystroke whenever you are dialling a number or entering a contact from your phonebook. Detailed study of keypad materials and structures, as well as extensive user tests, have resulted in the right balance between the key pressing force and the key response to ensure precise dialling

Easy alarm snooze

At the touch of a dedicated button on the base station, you can easily respond to the alarm and choose to snooze for a few more minutes — for up to a maximum of 3 times. Just set the easy alarm feature and ensure that the handset is docked in the base station. An icon on the

base display will indicate that the alarm has been set.

ECO+ mode



Philips phones are energy efficient and designed to be respectful to the environment. When ECO mode is activated the emitted radiation is reduced by up to 60%, and up to 95% when the phone is charging. With ECO+ mode activation the radiation drops to zero.

Extended privacy settings

Black list restricts receiving calls from specific numbers or starting with certain digits, keeping unwanted calls away from you away. You can block 4 sets of numbers. Each set of numbers can consist of between 1 to 24 digits. When there is an incoming call that starts with one of these numbers or being one of 4 exact caller numbers, the phone will not ring. With silent mode you can disable ringtones at specific times to enjoy peace and silence. Thanks to call barring, you can avoid expensive phone bill surprises by blocking calls to specific numbers starting with certain digits.

Hassle-free charging

For reliability and convenience the handset can be charged in both directions of the docking station.


Hearing aid compatible

This feature enables the phone to couple with the hearing aid to amplify conversation while reducing ambient noise and the buzzing,

M7701B/38

humming or whining noise that can otherwise occur.

HQ-Sound

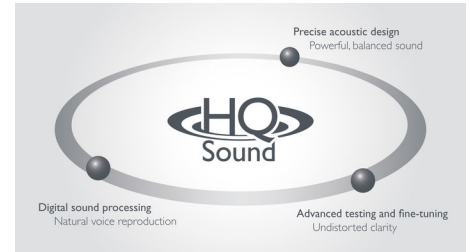

HQ-Sound: high quality acoustic engineering for superb sound reproduction. We build upon decades of experience and breakthrough innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything — high quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

Instant-access speakerphone



The phone's built-in loudspeaker amplifies the caller's voice so that you can enjoy conversations hands free. This allows you to multitask while taking important calls. Just hit the dedicated speakerphone button on the base station and start your hands-free conversation with the handset docked. The smart speaker design on top of the handset guarantees superb sound delivery in speakerphone mode — always.

Specifications

Sound

- Ringtones on handset: 10 polyphonic
- HQ-Sound
- Volume control on handset
- Hearing Aid Compatible
- Sound Profile: MySound

Picture/Display

- Backlight: Yes
- Backlight colour: White
- Base display size: 7.0 cm/2.77"
- Base display type: Reversed dot matrix
- Handset display size: 4.6 cm/1.8"
- Handset display type: Reversed dot matrix

Convenience

- Speakerphone — talk hands-free
- Menu structure in the handset: List Menu
- Signal strength indicator: 3 bar indicator
- Battery level indicator: 3 bar battery icon
- Date/Time display
- Programmable hot keys: Key 1 and 2
- Auto hang up
- Key tone on/off
- Call Management: Caller ID*, Call Waiting*, Dialed calls, Microphone mute, Missed Calls, Received Calls
- Multi-handset capability: Up to 4
- Line cord length: 1.8 m
- Power cord length: 1.8 m
- Charge time: 8 hours
- Up to 16 hrs talk time
- Up to 250 hrs standby time
- Range: Open field < 300 m (984 ft); indoor < 50 m (164 ft)
- Keypad lock
- Block callers/Blacklist*: Restrict the phone from ringing on specific incoming numbers
- Call barring: Restrict the phone from making specific outgoing calls
- Event notifications: For events status
- Number of keys: 23
- Premium MMI: Standard
- Alarms: Alarm Clock, Repeat alarm (snooze)
- Backlit keypad: White

- Base station keys: Paging key, alarm snooze button, speaker
- Enlarge dialling digit
- Illuminated keypad
- Intercom — multiple handsets
- Personalisation: Silent mode
- Visual ringer

Memory Capacity

- Phonebook: 100 names and numbers
- Redial List Capacity: 20 entries
- Call log entries: 50 entries
- Phonebook store in the base
- Multiple phonebook entries: 3 field

Eco Design

- Eco+
- Eco Mode: Automatic and manual

Power

- Battery Capacity: 550 mAh
- Battery type: 2 x AAA, NiMH rechargeable
- Mains power: AC 100-240 V ~ 50/60 Hz
- Power Consumption: < 1.35 W

Security

- Transmission encryption

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: < 0.1 W/kg

Packaging dimensions

- Number of products included: 1
- Packaging type: Carton
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 12.1 x 22.5 x 10.1 cm
- Gross weight: 0.5 kg
- Net weight: 0.357 kg
- Tare weight: 0.143 kg
- EAN: 48 95229 10796 0



Issue date 2022-05-16

Version: 3.1.3

12 NC: 8670 001 36713
EAN: 48 95229 10796 0

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com