



Philips
Over-ear wireless
headphones

Active Noise Canceling

Xiaowei integrated
Bluetooth multipoint
Touch control



TAH9505BK

Made to immerse

Inspiration. Motivation. Concentration. With excellent Active Noise Canceling and clear sound for calls, these wireless over-ear headphones have you covered. The fully integrated Tencent Xiaowei lets you get more done, hands-free.

Superb sound. Sleek design.

- Hybrid Active Noise Canceling. Focus where you want it
- Awareness Mode. Let the world in when you need to
- Rounded over-ear design. Sleek looks, superb sound
- 40 mm drivers. Deep bass, balanced midrange. Clear treble
- Philips Headphones app. Custom sound control

All-day comfort for music and calls

- 27 hours play time(ANC on/off)*
- Memory foam ear-cup cushions. Touch controls
- Clear calls. Rock-solid connectivity
- Integrated with the Tencent Xiaowei

Immerse in any source

- Connect to any source. Wireless or wired
- Hi-Res Audio certified. Hear every detail
- 1.2 m detachable cable for wired listening

PHILIPS


Over-ear wireless headphones

Active Noise Canceling Xiaowei integrated, Bluetooth multipoint, Touch control

TAH9505BK/93

Highlights

Hybrid Active Noise Canceling

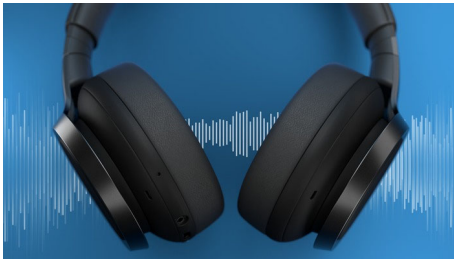

When the song deserves your full attention, these wireless headphones let you immerse. One external mic and one internal mic combine to filter out external noise. Cover the right ear cup to trigger Awareness Mode, and bring the world back in.

Sleek looks, superb sound



The round earcups lend a distinctive sense of style. The over-ear fit creates a seal that passively isolates external noise. Perfectly tuned 40 mm drivers deliver deep bass, a balanced midrange, and sparkling high frequencies.

Philips Headphones app



Enhance the bass. Tone down the treble. The Philips Headphones app puts you in charge of

the music you're listening to. Adjust levels yourself or choose from preset sound styles. You can also switch between preset ANC modes with a single tap.

27 hours play time*




It doesn't matter whether ANC is on or off—you get 27 hours play time and the same crisp, detailed sound. A speedy 15-minute charge gives you an extra 5 hours play time. A full charge takes 4 hours via the included USB-C.

Memory foam ear-cup cushions



The cushioned ear-cup cushions and headband are perfect for long listening sessions. There are touch controls for music and calls, and buttons on the right ear cup let you control ANC. The ear cups fold flat for easy storage.

Clear calls

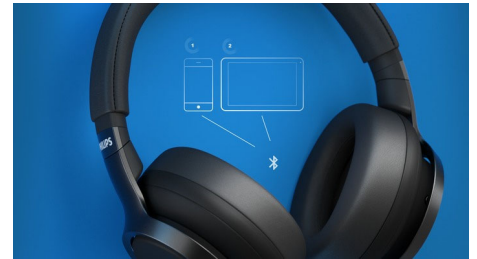

Calls are clear and you can connect to two Bluetooth devices at once. Ideal if you want to hear notifications from your phone while streaming podcasts via your laptop. There is Google Fast Pairing for Android phones.

Tencent Xiaowei

Simply press the voice button to wake the Tencent Xiaowei. The fully integrated Tencent Xiaowei lets you interact with your phone completely hands-free. Have notifications read to you, ask to play music—and more.

Connect to any source

These Hi-Res Audio certified headphones let you immerse in your favorite albums—on your smart device, home setup, TV, or laptop. You can plug the detachable cable into high resolution equipment for wired listening.



Over-ear wireless headphones

Active Noise Canceling Xiaowei integrated, Bluetooth multipoint, Touch control

TAH9505BK/93

Specifications

Accessories

- USB cable: USB-C cable
- Audio cable
- Quick start guide
- Airplane adapter
- Carry case

Connectivity

- Bluetooth profiles: AAC, A2DP, AVRCP, HFP
- Bluetooth version: 5.0
- Maximum range: Up to 10 m

Convenience

- Volume control
- Call Management: Call on Hold, Switch between 2 calls, Answer/End Call, Reject Call

Design

- Color: Black

Power

- Battery type: Li-Polymer
- Rechargeable
- Charging time: 4 hr
- Music play time(ANC on): 27 hrs
- Music play time(ANC off): 27 hrs
- Battery lifetime: 27 hrs*

Sound

- Acoustic system: Closed

- Impedance: 32 Ohm
- Speaker diameter: 40 mm
- Sensitivity: 103 dB (1K Hz)
- Frequency range: 20 - 40,000 Hz
- Maximum power input: 30 mW

Outer Carton

- Number of consumer packagings: 3
- Outer carton (L x W x H): 22.3 x 21.2 x 25.1 cm
- Gross weight: 2.6 kg
- Nett weight: 0.876 kg
- Tare weight: 1.724 kg
- GTIN: 1 69 51613 94572 5

Product dimensions

- Product dimensions (W x H x D): 17.01 x 9 x 18.92 cm
- Weight: 0.25 kg

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Both
- Packaging dimensions (W x H x D): 20.85 x 25.3 x 6.5 cm
- Gross weight: 0.766 kg
- Nett weight: 0.292 kg
- Tare weight: 0.474 kg
- EAN: 69 51613 94572 8



Issue date 2022-05-10

Version: 4.0.1

12 NC: 8670 001 70035
EAN: 69 51613 94572 8

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

Philips Headphones App



* Battery life of playtime is approximate and may vary depending on application condition.