



Philips Cineos
DVD/SACD Player

CINEOS

DVP9005



Turn up your experience with high definition

Yearning for multi-channel surround sound movies and sound? Experience state-of-the-art audio and video technology with this DVD/SACD player that promises an intensifying music and movie experience.

Unrivalled audio and video performance

- HD video output to 720 and 1080i
- 216MHz/12bit video upsampling for improved picture quality
- DCDi™ from Faroudja and Digital Crystal Clear

Sound in detail

- Multi-channel Super Audio CD for total music immersion
- Metal chassis & circuitry for best audio performance
- DSD-upsampling for smoother and sweeter sound from your CDs
- Advanced Bass Management for optimized bass response

Plays practically any disc format

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD
- Music: SACD, CD, MP3-CD, CD-R and CD-RW
- Picture CD (JPEG) with music (MP3) playback

PHILIPS
sense and simplicity

Highlights

HD video output in 720p/ 1080i

HD video output to 720 and 1080i

216MHz/12bit video upsampling

Video Upsampling is a technology that decreases distortion to dramatically improve picture quality.

Digital Crystal Clear DCDi™

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels.

Multi-channel Super Audio CD

Multi-channel SACD is a new generation music format that offers ultra high quality music reproduction. With a 5.1 multi-channel surround sound and full CD compatibility both forward and backward, what results is unsurpassed audio performance for your listening pleasure.

Metal chassis & circuitry

The player features reinforced chassis by using extensive bracing and shielding to reduce the negative effects of stray EMI and vibration. Audio circuitry is constructed with audiophile quality parts that are carefully selected based on extensive subjective listening tests and backed by excellent measurements results. The components in the critical audio path are carefully chosen and matched for superior audio performance.

CD upsampling to DSD

DSD Upsampling is a sound processing technology that converts and enhances the signal from a standard audio CD to provide clear smooth sound.

Advanced Bass Management

Advanced Bass Management is a feature that allows the user to finetune the bass attributes of the system, such as cut off frequency and cross-over slope, to get the best bass response

possible in their room regardless of the room size and equipment type.

Multi-format Movies

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

Multi-format Music with SACD

Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure

Picture CD with MP3 Playback

Picture CD is a CD-R or CD-RW disc on which you can store your MP3 and digital pictures. When inserting a Picture CD in the DVD player, a screen menu will pop up, showing your JPEG's and/or MP3 files on the disc. Just select the music and pictures files you wish to enjoy and press play or OK. You can watch your pictures on TV with your music playing simultaneously.



HDMI™



DCDi™
by FAROUDIA



Specifications

Picture/Display

- Aspect ratio: 4:3, 16:9
- Features: Digital Zoom

Sound

- Crosstalk (1kHz): 108 dB
- D/A converter: 192kHz/24-bit/ DSD hybrid
- Distortion and Noise (1kHz): 95 dB
- Dynamic Range (1kHz): 98 dB
- Signal to noise ratio: 115
- Sound Enhancement: 3D Virtual Surround, Night Mode, Upsampling to DSD
- Sound System: AC-3 Dolby Digital Decoding, Dolby Digital, Dolby Digital (AC-3), Dolby Prologic, Dolby Prologic II, Dolby Prologic Surround Sound, Dolby Surround, DTS

Video Playback

- Compression formats: MPEG1, MPEG2
- Playback Media: CD-R, CD-RW, CD-R/CD-RW, DVD, DVD+RW, DVD+R, DVD-RW (Video mode), DVD-R, DVD-Video, MP3-CD, Picture CD, SVCD, Video CD, Video CD/SVCD
- Disc Playback Modes: A-B Repeat, CD Text, Chapter repeat, Disc Menu, Fast Forward, Fast Forward/Reverse (2-Speed), Favourite Track Selection, Intros can, OSD, Pause, Repeat, Resume Playback from Stop, Scan, Screen Saver, Skip, Slow Backward, Slow Forward, Slow Motion, Standard Play, Still Picture, Title Repeat, Zoom
- Video disc playback system: PAL
- Video Enhancement: 720p and 1080i, Digital Crystal Clear, Faroudja DCDi, Motion Adaptive De-interlacing, Smart Picture, Video Upscaling

Audio Playback

- CD Playback Enhancements: Next/Previous Track, Repeat, Resume Play
- Compression format: Dolby Digital, DTS, MP3, MPEG2 Multichannel, PCM
- Playback Media: CD-R, CD-RW, MP3-CD, CD, MP3-DVD, SACD Multichannel, SACD Stereo

- Disc Playback Modes: A-B Repeat, Scan, CD Text display, Next/Previous Album Search, Next/Previous Track Search, Repeat one/album/all, Repeat Play, Resume Playback from stop, Shuffle album/all, Shuffle Play
- MP3 sample rates: 8, 11.025, 16, 22.050, 32, 44.1, 48 kHz

Still Picture Playback

- Playback Media: Picture CD
- Picture Compression Format: JPEG
- Slide show

Connectivity

- Other connections: Analog audio Left/Right out, Analog audio Multi-channel, Component Video out Progressive, Composite video (CVBS) out, Digital coaxial out, Digital optical out, HDMI out, S-Video out

Convenience

- Child Protection: Child Lock, Parental Control
- User convenience: Compass GUI, Menu Languages
- Display Type: LCD, On Screen (OSD)
- On-Screen Display languages: English, French, German, Italian, Norwegian, Portuguese, Spanish, Swedish
- Remote Control: Unified Remote Control

Accessories


- Included Accessories: Audio Cable, Batteries for remote control, Power cord, Safety & warranty booklet, Scart Cable

Dimensions

- Product dimensions (W x H x D): 435 x 79 x 315 mm
- Product weight: 5.3 kg

Power

- Power supply: 100-240VAC, 50/60Hz
- Standby power consumption: <1W

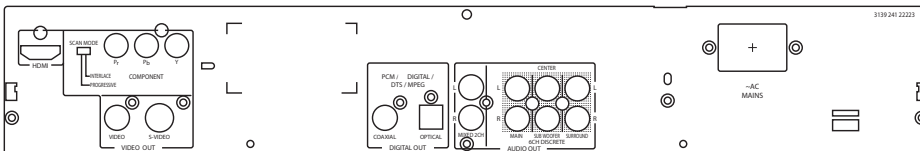

Issue date 2009-07-03

Version: 3.0.7

12 NC: 8622 810 12505
EAN: 87 10895 89539 2

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com