



Philips
Car coaxial speaker

16.5 cm (6.5")

2-way 210W Peak



CSP610

Your mobile music theater

with 2-way stereo for vivid sound

Feel your music with the Philips Car stereo speakers CSP610. These 16.5cm 2-way speakers have peak power at 210W, and feature a light polypropylene cone with a soft PEI dome tweeter for you to enjoy vivid music details in clear sound.

Vivid sound on the road

- 40W RMS power handling
- Light polypropylene cone for clear sound delivery
- Soft PEI dome tweeter for warm and textured tones
- Sensitive cloth surround for maximum sound details
- Strong ferrite magnet for high power performance

High durability, sustainable performance

- Sturdy polypropylene cone for all-weather performance
- Stylish speaker grille protects against damages
- Endurance and performance stability in extreme conditions

Easy to use and install

- Fits perfectly in all 16.5cm speaker openings
- Simple wires plug-in for designated speaker terminals

PHILIPS

sense and simplicity

Highlights

Light polypropylene cone




Inside the speaker, a diaphragm sits on top of a voice coil to produce a signal waveform once an input signal is received. It transforms the signal wave into a sound wave. Polypropylene is one of the lightest plastics ever invented and is great material for speaker diaphragms due to its weight, high strength, stiffness and tolerance for high temperatures. These polypropylene cones deliver high quality music by reacting to even the smallest sound signal to produce clear, vivid sound.

Sensitive cloth surround



A highly sensitive cloth connects the woofer diaphragm to the speaker frame to form a surround suspension system. When a sound signal reaches the cone inside the woofer, the cloth surround assembly brings the cone back into position to be ready to receive another sound signal. By doing so, the woofer can capture every signal with a minimum of distortion, giving you clear, smooth sound no matter how loud or how quiet the music is played.


Soft PEI dome tweeter

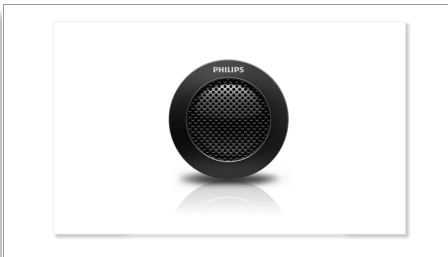

PEI (Polyetherimide) is ideal material for tweeter domes due to its light weight, high tensile strength,


high stability and tolerance for high temperatures. Inside the tweeter, the small diaphragm (the dome opening) produces high frequency tones. These PEI domes can capture even the highest musical notes to make your music textured with warm, full-range treble. The dome shape also spreads the sound around so that you can hear the high notes from every seat in the car.

Strong ferrite magnet

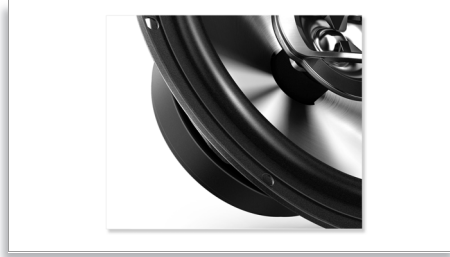

Ferrite is a lightweight but strong material with a permanent and coherent magnetic field. It is the key speaker component that induces the movement of the voice coil and the diaphragm. When an input signal is received, the voice coil acts as an electromagnet that causes the woofer and tweeter diaphragm to either attract or repel. The ferrite magnet produces an even magnetic field for smooth diaphragm movement, ensuring sound output with lower distortion. Using such a stable and highly coercive magnet like ferrite, the voice coil can produce loud sounds while keeping the tone smooth.

Stylish speaker grille

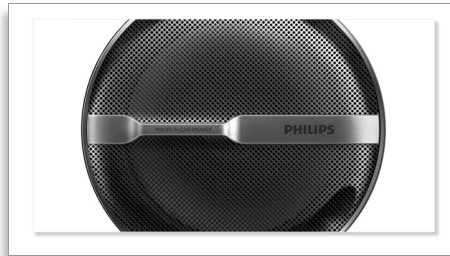

The speaker grille has been designed to give cars the look of luxury. Composed of two parts - a detachable metal mesh casing and a plastic ring, when installed over the speaker, it fully covers the tweeter dome and speaker cone. Hard and durable, it protects the speakers from accidental kicks and curious fingers, both of which can be damaging to their sound performance.

Specifications

Sound

- Output power (RMS): 40W
- Peak Music Power: 210W
- Sensitivity: 90dB
- Frequency response: 40-30k Hz
- Impedance: 4 Ohms

Loudspeakers

- Speaker type: Coaxial speaker
- Number of ways: 2-way
- Speaker size: 16.5cm (6.5")
- Number of Loudspeakers: 2

Woofer

- Diaphragm: Cone
- Diaphragm material: Polypropylene
- Surround: Cloth
- Voice coil: Single
- Voice coil material: Copper
- Magnet: Ferrite
- Magnet mass: 7.6 Oz
- Damper: Conex

Tweeter

- Size: 38mm (1-1/2")
- Diaphragm: Dome
- Diaphragm material: PEI
- Magnet: Neodymium

Accessories

- Speaker grille: With metal net
- Quick start guide: English, Spanish, Portuguese, Russian
- Cables: Speaker wires

Dimensions

- Product dimensions (W x H x D):
173 x 81 x 173 mm
- Mounting depth: 57.8 mm
- Tweeter protrusion: 4 mm



Issue date 2012-02-07

Version: 1.0.6

12 NC: 8670 000 70861
EAN: 69 23410 70646 8

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com