



Philips
True Wireless
Headphones

Detailed, natural sound

Noise Canceling Pro
Clearer calls on the go
Reliable in-ear fit



TAA5508BK

Your workout essential

Gym to street, these noise canceling true wireless sports headphones will motivate your moves! Music and podcasts sound great, and you'll be heard clearly if you stop to take a call. A reliable in-ear fit keeps the earbuds nicely in place.

Detailed, energizing sound

- Warm, detailed, natural. Philips sound signature
- 8 mm graphene-coated drivers
- Immerse freely. Noise Canceling Pro
- Clearer calls on the go. They'll hear you, not the noise

Seamlessly brilliant

- Philips Headphones app. Control noise canceling and more
- Quick charge for 5 minutes and get an extra hour
- No worries. Up to 28 hours play time with the case
- Multipoint, earbud touch controls, and voice assistants

For your kind of active life

- Better connectivity and sound. Next-generation Bluetooth*
- Textured silicone ear-tips and reflective earbuds
- Get out there. IPX5 water resistant
- Reliable in-ear fit. Move it, don't lose it

PHILIPS


True Wireless Headphones

Detailed, natural sound Noise Canceling Pro, Clearer calls on the go, Reliable in-ear fit

TAA5508BK/00


Highlights

Noise Canceling Pro

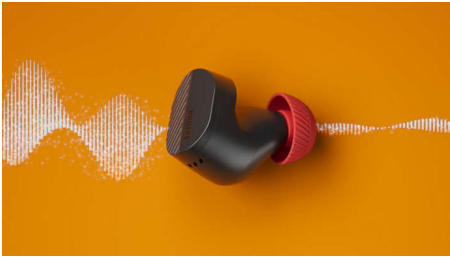


Busy gym? Windy park? Adaptive noise cancellation quickly reacts to your surroundings to suppress external noise, including wind, in real time. If your run takes you near busy roads, you can tap an earbud to activate Awareness Mode and let outside sounds in.

Clearer calls on the go

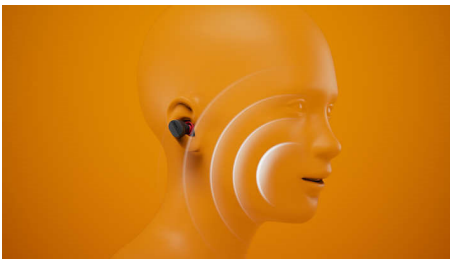

When you're on a call, a dedicated mic picks up the sound of your voice while an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, not the traffic or the chatter of people standing next to you!

Reliable in-ear fit

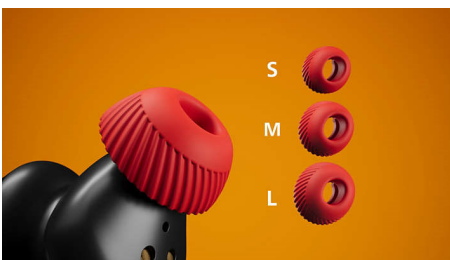

Doesn't matter how you move, these buds stay put. The silicone ear-tips feature a textured grip pattern, which helps the earbuds stay in your ears and makes them easy to hold with


sweaty hands. The surface of the earbuds is reflective, which can help with visibility at night.

Next-generation Bluetooth



These earbuds will work with devices that support Bluetooth LE Audio and the LC3 codec to give you a steadier connection and noticeably better sound. The sound won't dip if you're streaming music or taking calls in built-up areas, and there's virtually no lag if watching movies or gaming.*

IPX5 water protection

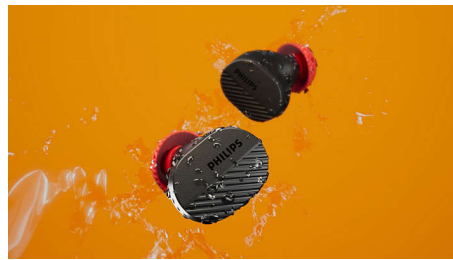

An IPX5 rating means these headphones don't mind a drop of rain or a downpour, so they'll never give you an excuse to stay on the couch! If you get a sweat on in the gym, the headphones won't mind that either.

28 hours play time with case



Don't want to worry about daily charging? You get 7 hours play time and an extra 21 hours

from the small charging case. Pop the earbuds back in and they'll recharge fully in 2 hours: if you need a quick boost, just 5 minutes gives you an extra hour. The case can be charged via USB-C.

Philips sound signature

Go big on the tunes that get you going! You get detailed, energizing sound with rich bass as the graphene-coated drivers reproduce every sparkling high and weighty low. Android or iOS, you'll enjoy all the immersion you need to keep your energy up.

Philips Headphones app

You can use the Philips Headphones app to customize noise canceling, turn auto wind noise reduction off, and adjust the level of transparency when using Awareness Mode. An equalizer lets you fine-tune your sounds, and you can keep your headphone's software up to date via the app too.

Multipoint connectivity

Bluetooth multipoint lets you connect to two devices at once: great if you're streaming from a phone and getting training alerts from your smartwatch. Touch controls on the earbuds cover calls, music playback, and more. Siri and the Google Assistant are both supported.

Quick charge for 5 minutes

Quick charge for 5 minutes and get an extra hour

Textured silicone ear-tips

Textured silicone ear-tips and reflective earbuds

8 mm graphene-coated drivers

8 mm graphene-coated drivers

True Wireless Headphones

Detailed, natural sound Noise Canceling Pro, Clearer calls on the go, Reliable in-ear fit

TAA5508BK/00

Specifications

Sound

- Frequency range: 20 - 20,000 Hz
- Speaker diameter: 8 mm
- Impedance: 16 Ohm
- Maximum power input: 5 mW
- Sensitivity: 110 dB (1K Hz)
- Driver type: Graphene coated

Connectivity

- Bluetooth version: 5.3
- Wireless
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: AAC, SBC, LC3
- Type of wireless transmission: Bluetooth

Outer Carton

- Length: 34.3 cm
- Number of consumer packagings: 24
- Width: 29.8 cm
- Gross weight: 4.544 kg
- Height: 30.6 cm
- GTIN: 1 48 95229 13147 4
- Nett weight: 1.8 kg
- Tare weight: 2.744 kg

Convenience

- Water resistance: IPX5
- Philips Headphones app support
- Google fast pair
- Mono mode for TWS
- Firmware updates possible
- Type of controls: Touch

Inner Carton

- Length: 16.2 cm
- Number of consumer packagings: 3
- Width: 14 cm
- Height: 13.8 cm
- Nett weight: 0.225 kg
- Gross weight: 0.49 kg
- Tare weight: 0.265 kg
- GTIN: 2 48 95229 13147 1

Power

- Number of batteries: 3 pcs
- Charging time: 2 hour(s)
- Music play time (ANC on): 7 + 21 hour(s)
- Music play time (ANC off): 8 + 23 hour(s)
- Fast charging time: 5 mins for 1 hr
- Battery type(Charging case): Lithium Polymer (Built-in)
- Battery type(Earbud): Lithium Polymer (Built-in)

- Battery weight (Total): 10.1 g
- Battery capacity(Case): 600 mAh
- Battery capacity(Earbud): 53 mAh
- Battery life standby time: 200 hr

Packaging dimensions

- Height: 13.02 cm
- Packaging type: Carton
- Type of shelf placement: Hanging
- Width: 11.4 cm
- Depth: 5.37 cm
- Number of products included: 1
- EAN: 48 95229 13147 7
- Gross weight: 0.132 kg
- Nett weight: 0.075 kg
- Tare weight: 0.057 kg

Accessories

- Others: 1 pcs lanyard
- Quick Start Guide
- Eartips: 3 pairs(S/M/L)
- Charging cable: USB-C cable, 200 mm

Design

- Color: Black
- Ear coupling material: Silicone
- Ear fitting: In-ear
- In-ear fitting type: Silicone ear tip

Telecommunication

- Microphone for call: 2 AI mics

Dimensions

- Charging case dimension(WxDxH): 5.49 x 2.90 x 4.15 cm
- Earbud dimension(WxDxH): 2.00 x 2.57 x 2.14 cm
- Total weight: 0.045 kg

UPC

- UPC: 8 40063 20307 5

ANC features

- ANC technology: Hybrid, ANC Pro
- Awareness mode
- Adaptive ANC
- ANC (Active Noise Canceling)
- Auto wind noise cancelation

Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Manual
- Voice assistant support



Issue date 2024-03-25

Version: 5.0.1

EAN: 48 95229 13147 7

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Requires a software update. The Philips Headphones app will notify you when the latest software version is available.