



Philips
In.Sight wireless HD home
monitor

For home, pets or business

Noise and motion detection
Unlimited live viewing
Optional cloud recording



M115G

Watch over your home from your smartphone/tablet

With HD and night vision

Keep an eye on things when you're not there with the Philips InSightHD monitor. Live HD video, 24 hours a day, to check on the kids when they get home, see what the dog's up to or watch over your home while you're away.

With InSightHD you're never far away

- Wi-Fi-enabled monitor for placement anywhere in your home
- Watch any time, anywhere via Wi-Fi/3G/4G LTE
- HD video for crystal clear viewing
- Unlimited live viewing via app

Peace of mind

- Noise and motion detection with notifications to your phone
- Video encryption for security and privacy protection
- Cloud streaming and video storage, powered by Ivideon

Flexibility

- Manage alert notifications and monitoring zones
- Designed with universal tripod mount
- Add as many cameras as you need to your InSightHD account
- Download the app and experience the InSightHD live demo
- Optional recording and storage with paid subscription

PHILIPS

In.Sight wireless HD home monitor
For home, pets or business Noise and motion detection, Unlimited live viewing, Optional cloud recording

M115G/12

Highlights

Alert notifications




Alerts let you know straight away when a noise or motion event has been detected. The sensitivity can be adjusted and monitor zones can be set up to ensure you get the coverage and monitoring levels to suit your needs.

Noise/motion notifications



It's impossible to predict when something might happen. In.SightHD keeps watching with adjustable motion and sound detection. Notifications will be sent to your phone automatically when noise or motion is detected.

Experience the live demo

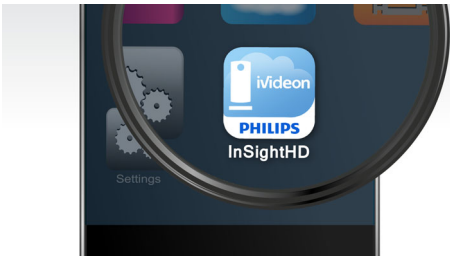

The In.SightHD app can be downloaded from the App Store or Google Play and comes with a demo mode to allow you to see In.Sight in action. Simply type In.SightHD in the app search bar.

HD video quality




The In.SightHD monitor brings you video in detail. Videos are streamed in high-definition 720p, making them sharp and true-to-life. The "720" refers to the number of horizontal lines of resolution on the screen. The "p" stands for "progressive scan", and is the sequential appearance of the lines in each frame.

Powered by iVideon



In.SightHD works with iVideon to provide secure and reliable video streaming as well as video cloud storage. In.SightHD can be used with a subscription to automatically record events when noise or motion is detected. Events are securely stored in the iVideon cloud and can be viewed from your phone.

Silver and Gold Subscriptions

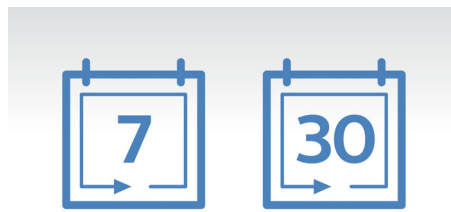

Events can be recorded and stored in the cloud for later viewing via a monthly or annual subscription. There are two plans available; the Silver plan records and stores all videos for the

previous 7 days and the Gold Plan records and stores all videos for the previous 30 days.

Unlimited live viewing via app



The advanced technology used in In.SightHD allows non-stop streaming of live video, giving you uninterrupted viewing 24 hours a day. So, day or night, you can see live video for as long as you want. No interruptions.

Video protected by SSL



Security is of paramount importance and all video on the cloud, whether streaming or stored, is protected by an SSL (Secure Sockets Layer) with 256-bit AES encryption. All videos are fully encrypted before transmission and can only be decrypted by your smartphone.

Watch via Wi-Fi/3G/4G LTE



Once In.SightHD is set up, you can watch live video from the app anywhere using Wi-Fi, 3G or 4G LTE connection. As long as you are connected, there's no limit to where you can watch from.



Specifications

Lens and Sensor

- Sensor: HD 720p
- Focus mode: Fixed
- View angle: 102 degrees
- Focus range: 0.8 M to infinity

Video Quality

- HD/VGA/QVGA streaming
- Formats: H.264 video compression
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

Features

- Wi-Fi: 802.11 b/ g/ n (2.4 GHz)
- Motion detection
- Noise detection
- LED indicator
- Base: Direction adjustable

Software

- Installation: via App for Android and Apple, InSightHD
- Automatic App update: Yes, for Android and Apple
- System supported: Android 4.1 or above, iOS7 or above

- iPad compatibility: iPad 2, iPad 3, iPad with Retina display, iPad mini, iPad 4, iPad Air, iPad Air 2, New iPad
- iPhone compatibility: iPhone 5, iPhone 4S, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus
- iPod compatibility: iPod Touch 4th generation and up, iPod Touch 5th generation
- Android phone compatibility: Philips recommends Samsung Galaxy S3 performance phones or better

Accessories included

- USB power adapter: 2
- USB cable: 2, 3m each
- Quick Start Guide

Input and Output

- Microphone: Highly sensitive, Mono
- USB: Mini-USB port

Dimensions

- Packaging dimensions (W x H x D): 158 x 160 x 115 mm
- Product dimensions (W x H x D): 65 x 114 x 65 mm



Issue date 2015-08-04

Version: 1.0.3

12 NC: 8670 001 23818
EAN: 04 89518 56076 41

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com