

Philips
5.1 Home theater

3D Angled Speakers
HDMI 1080p

HTS5550



Obsessed with sound

True cinematic experience with sound evenly spread

Maximize your home cinema sound experience with dynamic 3D Directional Angled Speakers! Play your favorite entertainment content on the innovative Philips 5000 series home theater system

Great listening experience

- 3D Angled Speakers disperse sound evenly around the room
- 1200W RMS power delivers great sound for movies and music
- DTS, Dolby Digital and Pro Logic II surround sound
- DoubleBASS technology for fuller and deeper bass

Designed to enhance your living space

- Sleek high gloss finishing with unique touch controls


Connect and enjoy all your entertainment

- Plays DVD, VCD, CD and USB devices
- Wireless rear audio ready for fewer wires across your room

PHILIPS

Highlights

3D Angled speakers

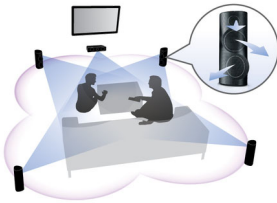

3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.

1200W RMS power




1200W RMS power delivers great sound for movies and music

DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you a full, uncompromised listening experience.

DTS, DolbyDigital, ProLogic II

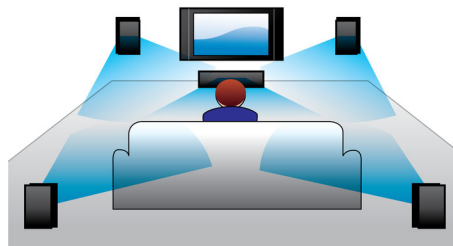

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and

dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

Sleek high gloss finishing



Sleek high gloss finishing with unique touch controls

Specifications

Accessories

- Compatible accessories: RWSS5510 Wireless Rear Audio, STS1300 Floor stand
- Included accessories: Batteries for remote control, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Stand Screw x 4, User Manual, World Wide Warranty leaflet

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Picture Enhancement: Rotate, Slideshow with music playback, Zoom
- Compression format: JPEG, JPEG HD

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4, XviD, WMV SD
- Video disc playback system: NTSC, PAL

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: mp3, wma
- Picture: JPEG, JPG
- Video: asf, avi, divx, mpeg, mpg, wmv

Connectivity

- Front / Side connections: MP3 Link, USB
- Rear Connections: AUX IN 1, Composite video (CVBS) output, Digital coaxial in, Easy-Fit Speaker Connectors, FM Antenna Socket, Wireless Rear Audio, Scart, HDMI 1.3 output

Convenience

- EasyLink (HDMI-CEC): One touch play, One touch standby, Remote Control-Passthrough

Dimensions

- Main Unit (W x H x D): 435 x 58 x 358 mm
- Main Unit Weight: 3.56 kg
- Center Speaker (W x H x D): 280 x 95 x 92 mm
- Center Speaker Weight: 1.40 kg
- Centre Speaker cable length: 2 m
- Front Tallboy Speaker (WxHxD): 260 x 1101 x 260 mm
- Front Speaker Weight: 3.77 kg

- Front Speaker cable length: 4 m
- Rear Tallboy Speaker (WxHxD): 260 x 1101 x 260 mm
- Rear Speaker Weight: 3.77 kg
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Subwoofer Weight: 5.25 kg
- Subwoofer cable length: 4 m
- Packaging (W x H x D): 400 x 697 x 1200 mm
- Weight incl. Packaging: 32.97 kg

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Tallboy speakers
- Center speaker drivers: 2 x 3" full range woofers
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 3 ohm
- Drivers per Tallboy speaker: 2 x 3" Full range woofers
- Tallboy speaker freq range: 150 - 20k Hz
- Tallboy speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 3 ohm

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Power

- Power consumption: 150 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.9 W

Sound

- Equalizer settings: Action, Classic, Concert, Drama, Jazz, Rock, Sports
- Sound Enhancement: Dialog Enhancement, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode
- Sound System: Dolby Digital 5.1, DTS 96/24, DTS Digital Surround, Stereo
- Frequency response: 20-20k Hz
- Signal to noise ratio: > 65 dB
- Total Power RMS @ 30% THD: 1200 W

Tuner/Reception/Transmission

- RDS: Station Name
- Tuner Bands: FM
- Number of Preset Channels: 40



Issue date 2019-02-12

Version: 13.4.10

12 NC: 8670 000 60047
EAN: 87 12581 52609 2

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com