




Philips  
In.Sight wireless HD baby  
monitor

Watch from anywhere

Hear & speak  
Night vision  
For smartphone, tablet

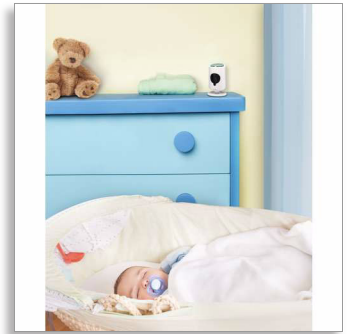

B120E

## Always close to your baby

Watch from anywhere on your smartphone/tablet

The Philips In.Sight wireless HD baby monitor lets you watch and listen to your baby from your smartphone/tablet. Watch in crystal clear HD quality and with night vision you can watch your baby even in the dark.

### Stay close to your baby wherever you are

- Wi-Fi baby monitor for placement anywhere in your home
- Watch your baby on your smartphones via Wi-Fi/3G/4G LTE
- HD video quality for crystal clear viewing
- Night vision mode to see baby clear in the dark

### Stay reassured with alerts and notifications

- Hear your baby continuously even when phone is locked
- Phone alerts when monitor detects noise/motion
- Instant talk to your baby via smartphones
- Real time monitoring with temperature & humidity sensor
- Share monitors with other smartphone users

### Easy, safe and secure

- Easy set-up of Wi-Fi baby monitor via QR code
- Video encrypted for secure connection
- PVC-BFR free power cables and monitor

**PHILIPS**

In.Sight wireless HD baby monitor  
Watch from anywhere Hear & speak, Night vision, For smartphone, tablet

B120E/37

# Highlights

## Wi-Fi enabled baby monitor

Have ultimate peace of mind with In.Sight wireless baby monitor. It connects to Wi-Fi 802.11 bgn networks. Place the monitor right in your baby room, you can watch and hear your baby right from your smartphones wherever you are.

## Watch your baby via WiFi/3G/4G

In.Sight wireless HD baby monitor allow you to watch your baby on your smartphones wherever you are. Once you have set up your In.Sight wireless baby monitor, you can access the video stream from your smartphones anywhere via Wi-Fi, 3G or 4G LTE networks. There's no limit to where and how you view your loved ones.

## Continuous audio streaming

In.Sight wireless HD baby monitor streams audio continuously even when your smartphones is locked or when you are docking or charging your smartphones.

## Easy set-up via QR code

Set-up is simple with the app. The app will generate a QR code for your home Wi-Fi settings. With the QR code, the monitor will automatically pair with your Wi-Fi network, easily and instantly.

## Encrypted direct networking



In.Sight wireless monitor uses highly secure encryption to provide you with privacy at all


times. In.Sight wireless monitor uses a unique encryption key each time it makes a connection, providing you a highly secure connection each time you look at your loved ones.

## HD video quality



In.Sight wireless HD baby monitor allow you to watch your baby in vivid detail. View videos in high definition 720p quality. The "720" refers to the number of horizontal lines of resolution on the screen. The "p" stands for progressive scan or the sequential appearance of the lines in each frame. With 720p resolution, videos are sharper and more true-to-life.

## Night vision mode

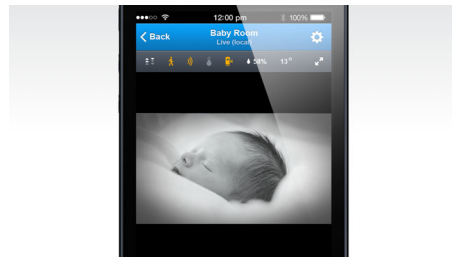

Night vision mode allows you to see your baby's lovely face in the dark. Infrared light goes on for the monitor to capture clear black and white video when it is dark. Night vision mode switches on and off automatically, or you can adjust it manually.

## PVC and BFR-free

In.Sight wireless HD baby monitor is free from brominated flame retardant (BFR) and polyvinyl chloride (PVC). It adheres to the stringent safety standards for infant utensils and is absolutely baby-proof, safe and eco-friendly.

## Instant talk via smartphones

With In.Sight wireless HD baby monitor, you can talk to your baby anytime you want. Simply press "talk" on your smartphones and sing her a nursery rhyme. Watch as she falls asleep in your soothing voice.

## Multi-user mode

Share monitors with your spouse, family, friends and even your baby sitters. The app lets you share each monitor with two other users so that they have access to live videos and sound via their smartphones as well. You can even upgrade the app to share the monitor with up to 16 users.

## Noise and motion alerts

It's impossible to predict when something might happen to your baby. In.Sight wireless HD baby monitor keeps watching with adjustable noise and motion detection. You will be alerted anytime noise or motion is detected. Automatically receive push notifications on your smartphones when the monitor detects motion or noise.

## Temperature & humidity sensor

Temperature and humidity sensors on In.Sight wireless HD baby monitor show temperature and humidity level on your smartphones. The humidity sensor measures humidity level, for instance, detecting dry air that may irritate baby's throat. The app will even alert you when the temperature is too high/low.



# Specifications

## Lens & Sensor

- Sensor: 720p HD video image sensor
- Aperture: F2.8
- Digital zoom: 2x digital
- Focus mode: Fixed
- Ambient light sensor: Yes, day/night mode
- Night mode: Infra-Red
- IR control: via App
- IR range: 4 meters

## Video Quality

- HD/VGA/QVGA streaming
- Resolution: HD (1280 x 720p) at 30 fps
- Formats: H.264 video compression
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

## Features

- Wi-Fi: 802.11 a/ b/ n
- Motion detection
- Noise detection
- Direction adjustable base
- LED indicator
- Reset button
- Screw holes: Yes, 1
- Temperature measurement: -10 – 50 °C
- Humidity measurement: 20 – 90%

## Software

- Installation: via App
- Automatic App update
- Web browser support
- System supported: iOS4.3 or above, Android 2.3

- or above
- iPad compatibility: iPad 2, iPad mini, iPad (3rd generation)
- iPhone compatibility: iPhone 4S, iPhone 5, iPhone 3GS
- iPod compatibility: iPod Touch 4th generation & up
- Android phone compatibility: Philips recommends Samsung Galaxy 3 performance phones or better

## Accessories included

- Extra wall mount
- USB power adapter
- USB cable: Yes, 2.5 m
- Screws / wall anchors: 1
- Quick Start Guide

## Input and Output

- Audio: 2-way, parent talk back
- Microphone: High-sensitive, Mono
- Built-in speaker
- USB: Mini-USB port

## Minimum Requirements

- Windows: Windows 7, Internet Explorer 9.0, Chrome 20.0, Firefox
- MAC: MACINTOSH 10.6, Safari 5.1.7, Chrome 21.0, Firefox

## Dimensions

- Packaging dimensions (W x H x D): 158 x 160 x 70 mm
- Product dimensions (W x H x D): 66.2 x 104 x 66.2 mm



Issue date 2015-04-13

Version: 2.0.4

12 NC: 8670 001 05559  
UPC: 6 09585 23534 2

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Viewing live video over your home Wi-Fi network using the In.Sight wireless home monitor is free and unrestricted. Viewing live video remotely (either over an external Wi-Fi network or 3G network) is also free for unlimited sessions, but subject to a limit of 5 minutes per session.

\* Longer remote viewing session times and other premium features are available for purchase from the App. These conditions are subject to change.