



Philips Heritage Audio
DVD component Hi-Fi
system

Hi-Fi tube

Silk dome tweeter
150 W



MCD909



Obsessed with sound

Enjoy warm Hi-Fi sound

Experience high-fidelity sound with the Philips DVD component Hi-Fi system with premium materials. Vacuum valve preamplifiers offer crystal-clear sound. Full High-Definition Multimedia Interface (HDMI) produces sharper images.

Enrich your movie experience

- Play DVD, DivX[®], (S)VCD, MP3-CD, WMA-CD, CD(RW) and Picture CD
- Dolby Digital for ultimate movie experience
- USB Direct for music and photo playback
- HDMI 1080p upscales to high definition for sharper pictures

Audiophile-quality sound experience

- Premium Hi-Fi tubes for perfectly pure and natural sound
- Neodymium Ribbon Tweeter for impressive audio fidelity
- Gold-plated speaker connector for finest signal transmission
- 150 W RMS total output power
- Treble and Bass Control for easy high and low tone settings

Premium finishing with noble materials

- Quality aluminium cabinet and real wood speakers
- Leatherback and metal front remote control with flat keys

PHILIPS


Highlights

Premium Hi-Fi tubes



With built-in Hi-Fi Tubes, you can now experience sound of the highest quality that's usually only associated with premium audiophile systems. The analogue nature of the tubes provides a more pleasing sound to our non-linear hearing system. Sound from a tube has low distortion and is always preferred for its clean and detailed, warm and life-like audio quality.

Neodymium Ribbon Tweeter

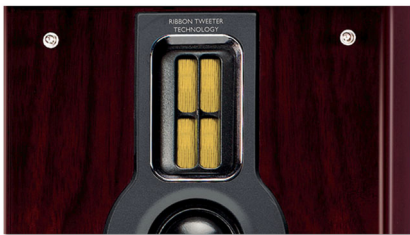

The Neodymium Ribbon Tweeter is a monopole tweeter that produces dynamic and crisp sound from the front. It is a feature commonly used in high-end audio systems to reproduce sound with excellent fidelity. Conventional cones and dome tweeters are based on a directional moving coil principle, whereas the monopole Neodymium Ribbon Tweeter radiates high frequencies in a full 180-degree radiation pattern. This dramatically increases the width of the sound spectrum in the higher tones and expands the sweet spot zone to deliver wide, crystal-clear and natural sound, even from compact audio systems.

Gold-plated speaker connector



The gold-plated speaker connector ensures better audio signal transmission compared to traditional click-fit connections. It also minimises the electrical signal loss from the amplifier to the speaker box, resulting in sound reproduction that's as close to reality as possible.

150 W RMS

This system has a 150 W RMS total output power. RMS refers to Root Mean Square, which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.


Play DVD, DivX and MP3/WMA-CD



The Philips player is compatible with most DVD and CD discs available in the market. DVD, DivX[®], (S)VCD, MP3/WMA-CD, CD(RW) and Picture CD - all of them can play on the player. SVCD stands for "Super VideoCD". The quality of a SVCD is much better than a VCD, with a much sharper picture, because of the higher resolution. With DivX[®] support, you are able to enjoy DivX[®] encoded videos. The DivX media format is an

MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs.

Dolby Digital

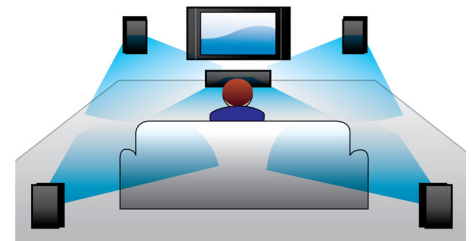

Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Quality cabinet and speaker



Quality aluminium cabinet and real wood speakers

Leatherback remote control



With a perfect balance of sleek dimensions and a comfortably light weight, this ergonomically designed remote control is a joy to use. Its slick metallic-finished flat key front is attractively contrasted with a genuine leather back cover. In addition, the stylish, precision-cut keypad ensures a qualitative navigation experience. Feel the splendour of pure design and control.

Specifications

Picture/Display

- Picture Enhancement: video upsampling, video upscaling, high def (720p, 1080i, 1080p)

Sound

- Output power: 2 x 75 W RMS/2 x 150 W music power
- Sound enhancement: vacuum tube pre-amplifier, class "D" digital amplifier, loudness, treble and bass control, Dolby Digital

Loudspeakers

- Speaker drivers: 3-way, 5" woofer, dome mid range, ribbon tweeter
- Loudspeaker enhancement: Gold-plate speaker connectors, speaker grilles detachable

Video Playback

- DVD region code: 2
- Playback media: DivX, DVD-Video, picture CD, video CD/SVCD, DVD+R/+RW, DVD-R/-RW
- Disc playback modes: A-B Repeat, angle, PBC, slow motion, Zoom, parental control, disc menu, fast reverse, fast forward, OSD, resume playback from stop

Audio playback

- Playback media: WMA-CD, MP3-CD, CD, CD-R, CD-RW, USB flash drive
- Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme
- USB Direct playback modes: fast reverse/fast forward, play/pause, previous/next, programme play, repeat, shuffle, stop

Tuner/Reception/Transmission

- Tuner bands: FM stereo
- Station presets: 20
- Antenna: FM antenna
- RDS: radio text, RDS clock set, station name, programme type
- Tuner enhancement: auto digital tuning, auto scan

Connectivity

- Audio/Video output: 2 x RCA (Audio), component video out, composite video (CVBS) out, digital

- audio coaxial out, digital optical out, HDMI out, Headphone (6.3 mm), SCART out, S-Video out
- Aux in: 2 x RCA (Audio)
- USB: USB host

Convenience

- Alarms: CD alarm, radio alarm, USB alarm
- Clock: on main display, sleep timer
- Loader type: motorised, tray
- Display enhancements: DIM mode
- On-Screen display languages: Dutch, English, French, German, Italian, Portuguese, Spanish, Swedish, Turkish
- Display type: VFD display

Accessories

- Cables/Connection: composite video cable (Y), control cable, power cord
- Remote control: 49-key with 2 x AAA batteries
- Others: FM antenna, Quick start guide
- User Manual: multi-lingual
- Warranty: Worldwide Guarantee booklet

Dimensions

- Gross weight: 22.5 kg
- Main speaker dimensions (W x D): 205 x 240 mm
- Main speaker height: 330 mm
- Main unit depth: 280 mm
- Packaging depth: 375 mm
- Main unit height: 180 mm
- Packaging height: 310 mm
- Main unit width: 250 mm
- Packaging width: 740 mm

Power

- Power supply: 50 Hz
- Power supply: 220 - 240 V

Green

- Eco Power standby: 1 W

Digital photo playback

- Playback media: CD-R/RW, DVD+R/+RW, picture CD
- Picture Compression Format: JPEG



Issue date 2016-12-14

Version: 2.0.9

12 NC: 8670 000 48625
EAN: 87 12581 45820 1

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com