# Always there to help you

Register your product and get support at www.philips.com/welcome

DS1155



# User manual



# **Contents**

1	Important Safety	2
2	Your Docking Speaker Introduction What's in the box Overview of the main unit	4 4 4 4
3	Get started Connect power Adjust time Turn on	5 5 5 5
4	Play Play from iPod/iPhone Charge your mobile phone Adjust volume Adjust brightness	6 6 7 7
5	Product information Specifications	8
6	Troubleshooting	9
7	Notice Disposal of your old product	10 10

# 1 Important



### Important Safety Instructions

- (1) Read these instructions.
- Keep these instructions.
- 3 Heed all warnings.
- (4) Follow all instructions.
- (5) Do not use this apparatus near water.
- (6) Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- (12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- (3) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Apparatus shall not be exposed to dripping or splashing.
- (5) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.
- (17) Where the plug of the Direct Plugin Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

## A

#### Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Make sure that you always have easy access to the power cord, plug, or adaptor to disconnect the apparatus from the power.

# 2 Your Docking Speaker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

### Introduction

With this docking speaker, you can:


- set time:
- enjoy audio from your iPod/iPhone.


### What's in the box

Check and identify the contents of your package:

- · Main unit
- 1 x AC adaptor
- Short user manual

### Overview of the main unit

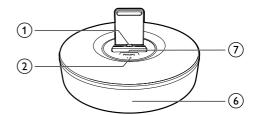

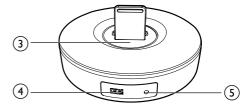

- 1) Dock for iPod/iPhone
- 2 \*\*
  - Adjust brightness of bottom light.
- (3) CLOCK
  - Adjust brightness of the display.
  - Press and hold to set the clock.
- ④ ←
  - Charge your mobile phone through a USB cable.
- (5) DC IN
  - Connect AC power.
- 6 Display
- 7) +/-
  - Adjust volume.

# 3 Get started

Always follow the instructions in this chapter in sequence.


If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

### Connect power



#### Caution

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back of the unit.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.
- Before connecting the AC adaptor, make sure that you have completed all other connections.

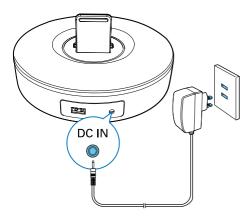

## Adjust time

- 1 In standby mode, press and hold **CLOCK** to enter the clock setting mode.
  - → [24H] or [12H] hour format is displayed.
- Press +/- to select [24H] or [12H] hour format, and then press CLOCK.
  - → The hour digits are displayed and begin to blink.
- Press +/- to set hour, and then press CLOCK.
  - → The minute digits are displayed and begin to blink.
- **4** Repeat step 3 to set minute.

### Turn on

In standby mode, the docking speaker turns on automatically when it detects an audio signal from docked iPod/iPhone

### Switch to standby mode

The unit switches to standby mode if there is no audio signal from docked iPod/iPhone over 15 minutes.

# 4 Play

## Play from iPod/iPhone

You can enjoy audio from iPod/iPhone through this docking speaker.

### Compatible iPod/iPhone

The docking speaker supports the following iPod/iPhone models.


Made for:

- iPhone 5
- iPod nano (7th generation)
- iPod touch (5th generation)

#### Load the iPod/iPhone

Insert your iPod/iPhone into the dock.

→ The docking speaker synchronizes time from the docked iPod/iPhone.

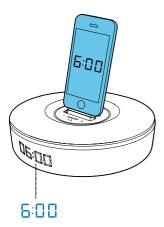

#### To remove the iPod/iPhone:

• Pull your iPod/iPhone out of the dock.

#### Listen to the iPod/iPhone



Note

Make sure that the iPod/iPhone is loaded correctly.

Start to play music from your iPod/iPhone.


→ Music streams from the docking speaker automatically.

#### Charge the iPod/iPhone

The docked iPod/iPhone begins to charge automatically after connected to power.


## Charge your mobile phone

You can charge your mobile phone through the USB socket in this device with a USB cable (not supplied)

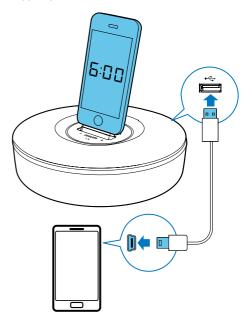

# Adjust volume

During play, press +/- repeatedly to increase or decrease the volume.

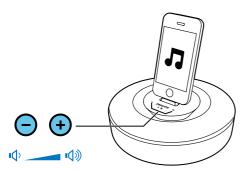

# Adjust brightness

- Press CLOCK repeatedly to select different levels of display brightness.
- Press \* \* repeatedly to select different levels of bottom light brightness.

# 5 Product information



 Product information is subject to change without prior notice.

# **Specifications**

Amplifier	
Rated Output Power	2 × 3 W RMS
Signal to Noise Ratio	77 dBA

#### General information AC power Model: S018KU0590240 adaptor (Philips) Input: 100-240 V, 50/60 Hz, 500 mA; Output: 5.9 V == 2400 mA; Operation Power 18 W Consumption Charging (USB) ≤500 mA Dimensions: Main Unit $(W \times H \times D)$ $177 \times 177 \times 100 \text{ mm}$ Weight: Main Unit 0.88 kg

# 6 Troubleshooting



#### Warning

· Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

#### No power

- Make sure that the AC power plug of the unit is connected properly.
- Make sure that there is power at the AC outlet.

#### No sound or poor sound

- Adjust the volume of your docking speaker.
- Adjust the volume of your iPod/iPhone or external audio device.

#### No response from the unit

 Disconnect and reconnect the AC power plug, and then turn on the docking speaker again.

# 7 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

#### Notice for the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

### Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

#### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of

packaging materials, exhausted batteries and old



equipment.

The making of unauthorized copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been

designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.



#### Note

 The type plate is located on the bottom of the apparatus.



Specifications are subject to change without notice © 2012 Koninklijke Philips Electronics N.V. All rights reserved.

