

Philips
docking station for iPod/
iPhone



AJ7040D

Wake up to great sound from your iPod/iPhone

with this docking station

Start each day right with your favorite music from iPod/iPhone. Built-in with Bass Reflex speakers, this sleek docking station delivers rich, deep bass and powerful sound. If you prefer, wake up to the radio or a buzzer with its dual alarm.

Enrich your sound experience

- Play and charge your iPod/iPhone simultaneously
- FM digital tuning with presets
- Bass Reflex Speaker System delivers a powerful, deeper bass
- 10W RMS total output power

Easy to use

- Dock any iPod/iPhone, even in its case
- Auto clock synchronization with iPod/iPhone when docked
- MP3 Link for portable music playback
- All-in-one remote control for your system and iPod/iPhone
- Sleep timer for easy falling asleep to your favorite music


Start the day your way

- Wake up to your iPod/ iPhone music or radio tunes
- Gentle wake for a pleasant wake up experience
- Dual alarm to wake you and your partner at different times

PHILIPS


Highlights

Dual alarm

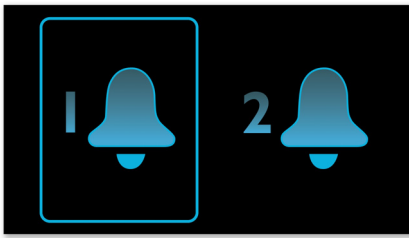

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

All-in-one remote control

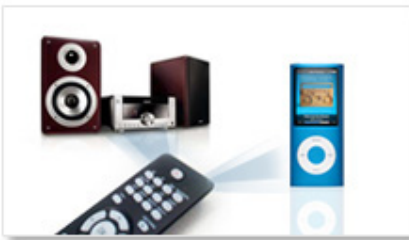

With the Philips all-in-one remote control, you can now navigate both your Philips music system and your iPod/iPhone through hundreds of songs easily with the one simple press of the remote control. Displaying information listed according to playlist, album, artist, genre or track, the navigation offers speedy yet simple through hundreds of files. It allows one handed operation and guarantees a unique user experience.

Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone,

without special adaptors. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.

Auto clock synchronization



When connect and dock, this docking system will automatically synchronize the clock with your iPod/iPhone within a few seconds. With this convenient feature, you do not need to set the time manually.

Gentle wake



Start your day right by waking up gently to a gradually escalating alarm volume. Normal alarm sounds with a preset volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to wake up to your favorite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

Wake up to iPod/iPhone/radio

Wake up to your iPod/ iPhone music or radio tunes

Specifications

iPod compatibility

- Compatible with: iPod mini, iPod with color display, iPod 5th Generation, iPod classic, iPod nano 1st Generation, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod nano 4th Generation, iPod nano 5th Generation, iPod nano 6th generation, iPod touch 2nd Generation, iPod 6th Generation

iPhone compatibility

- Compatible with: iPhone 3G, iPhone 3GS, iPhone 4

Tuner/Reception/Transmission

- Tuner Bands: FM
- Auto digital tuning
- Station presets: 20
- Antenna: FM Antenna

Audio Playback

- Cradle playback mode: Charging iPod, Charging iPhone, Play and Pause, Next and Previous track, Fast forward and backward, Repeat, Shuffle play

Convenience

- Clock/Version: Digital
- Alarms: 24 hour alarm reset, Buzzer Alarm, Radio Alarm, Repeat alarm (snooze), Sleep timer, dual alarm

Sound

- Sound System: Stereo
- Output power (RMS): 2 x 5W
- Volume Control: Volume Control up/down

Loudspeakers

- Built-in speakers: 2

Connectivity

- MP3-Link: 3.5mm stereo input

Dimensions

- Product dimensions (W x H x D): 290 x 160 x 113 mm

Accessories

- Included accessories: AC-DC Adapter, User Manual, World Wide Warranty leaflet



Issue date 2014-08-18

Version: 1.0.4

12 NC: 8670 000 76892
EAN: 87 12581 60480 6

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com