

Philips  
DVD player

USB 2.0

TAEP200



## Enjoy it all — from DVD and USB

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player TAEP200 delivers your movies and music entertainment experience.

### **Play all your movies and music**

- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW

### **Bring audio and video to life**

- 12-bit/108 MHz video processing for sharp and natural images
- Screen Fit for optimal viewing every time
- Smart Picture provides personalised image settings

### **Connect and enjoy multiple sources**

- USB Media Link for media playback from USB flash drives

# PHILIPS

DVD player  
USB 2.0

TAEP200/10


# Highlights

## 12-bit/108 MHz video processing



12-bit Video DAC is a superior Digital-to-Analogue Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colours, resulting in a more vibrant and natural picture. The limitations of the standard 10-bit DAC become particularly apparent when it is used with large screens and projectors.

## Plays it all

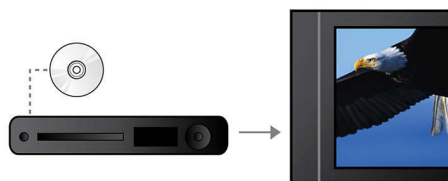

Play virtually any disc you want - whether it be a CD, (S)VCD, DVD, DVD+R, DVD-R,


DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.

## Screen Fit




Whatever you're watching, on whatever TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full screen

## USB Media Link

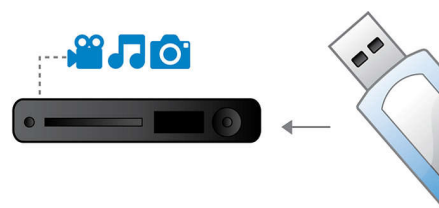

The Universal Serial Bus, or USB, is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## Smart Picture

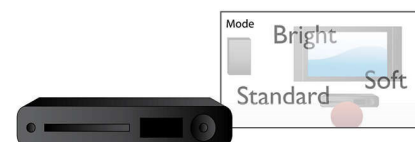

Smart Picture provides the optimum picture settings for colour, brightness, saturation, contrast, sharpness and so on, to enhance your overall viewing experience at all times.

12-bit  
Video DAC

CERTIFIED  
USB

SMART PICTURE

HDMI™  
HIGH-DEFINITION MULTIMEDIA INTERFACE

# Specifications

## Sound

- Crosstalk (1 kHz): > 100 dB
- D/A converter: 24-bit, 192 kHz
- Frequency response: 30–20000 Hz
- Sound System: Dolby Digital
- Distortion and Noise (1 kHz): <= -65 dB
- Dynamic Range (1 kHz): > 90 dB
- Signal to noise ratio: >= 90 dB

## Connectivity

- Front Connections: USB 2.0
- Rear Connections: Analogue audio Left/Right out, Composite video (CVBS) output, HDMI output

## Outer Carton

- Length: 41.5 cm
- Number of consumer packages: 5
- Width: 26 cm
- Gross weight: 6.8 kg
- Height: 28.6 cm
- GTIN: 1 48 95229 11116 2
- Net weight: 5.25 kg
- Tare weight: 1.55 kg

## Convenience

- Child Protection: Child Lock, Parental Control

## Power

- Power consumption: 15 W
- Power supply: 100-240 V, 50/60 Hz
- Standby power consumption: < 0.5 W

## Packaging dimensions

- Height: 27 cm
- Packaging type: Carton
- Type of shelf placement: Standing
- Width: 24.8 cm
- Depth: 8 cm
- Number of products included: 1
- EAN: 48 95229 11116 5
- Gross weight: 1.25 kg
- Net weight: 1.05 kg
- Tare weight: 0.2 kg

## Product dimensions

- Height: 4.3 cm
- Width: 22.5 cm
- Depth: 19.6 cm
- Weight: 0.92 kg

## Accessories

- Included accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, Quick start guide, World Wide Warranty leaflet, Safety warranty sheet

## Design

- Colour: Black

## Audio Playback

- Audio supported formats: MP3, WMA
- MP3 bit rates: 16 kbps - 320 kbps
- WMA bit rates: 16 kbps - 320 kbps

## File Format

- Audio: mp3, wma
- Video: avi, mpg
- Picture: JPG, JPEG

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Video upsampling

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Slideshow with MP3 playback, Zoom

## Video Playback

- Audio format: Dolby Digital, WMA, MP3
- Video disc playback system: NTSC, PAL, AUTO
- Video supported formats: MPEG1, MPEG2



Issue date 2024-05-29

Version: 5.5.1

EAN: 48 95229 11116 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.