

Philips
Classic micro sound
system



MC155

Obsessed with sound

Relax to great music

Experience truly rich sound from this amazingly compact Philips Micro system. Its classic design enhances any space and fills it with room-filling sound, thanks to 15W RMS total power and Dynamic Bass Boost.

Enjoy your music from multiple sources

- Play CD, CD-R and CD-RW
- MP3 Link for portable music playback
- Digital tuning with preset stations for extra convenience

Enrich your sound experience

- Dynamic Bass Boost for deep and dramatic sound
- Digital Sound Control for optimized music style settings

PHILIPS


Highlights

Dynamic Bass Boost




Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Digital Sound Control

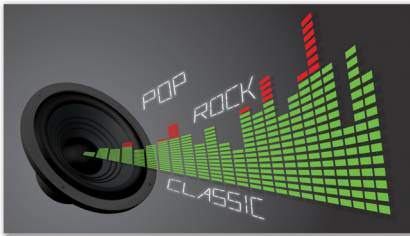

Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Digital tuning with presets

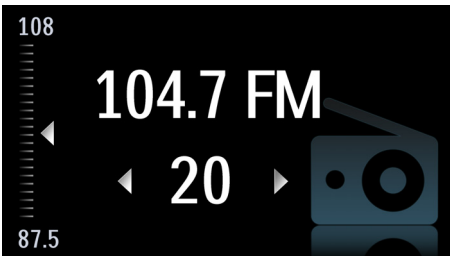

Simply tune into the station that you want to preset, press and hold the preset button to memorize the

frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

Play CD, CD-R and CD-RW



Philips is known for making products which are compatible with many discs available in the market. This audio system lets you enjoy music from CD, CD-R and CD-RW. CD-RW (CD-Rewritable Compatible) means that your audio system can play both CD-Recordable (CD-R) and CD-Rewritable (CD-RW) discs. CD-R discs are recordable once and can be played on any audio CD player while CD-RW discs can be recorded and rewritten multiple times and can only be played back on compatible audio CD players.

Specifications

Sound

- Output Power: Total 15W RMS
- Volume Control: Volume Control up/down
- Sound Enhancement: Dynamic Bass Boost

Loudspeakers

- Main Speaker: 3" woofer

Audio Playback

- Playback Media: CD, CD-R, CD-RW
- Disc Playback Modes: 20-Track Programmable, Repeat/one/all/program
- Loader Type: Top

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Station presets: 20

Connectivity

- Other connections: FM fixed pigtail antenna
- Audio Connections: 3.5mm Line in

Convenience

- Alarms: Sleep timer, CD Alarm, Radio Alarm
- Clock: On main display
- Display Type: LCD
- Backlight color: Blue

Accessories

- Included accessories: World Wide Warranty leaflet, IFU / User Manual, FM antenna
- Remote control: 24 key remote control

Dimensions

- Set dimensions (W x H x D): 148 x 233 x 216 mm
- Main speaker dimensions (W x H x D): 134 x 230 x 152 mm
- Packaging dimensions (W x H x D): 370 x 270 x 326 mm
- Weight incl. Packaging: 4.8 kg

Power

- Power supply: 220-240V, 50/60 Hz



Issue date 2014-02-13

Version: 2.0.4

12 NC: 8670 000 71868
EAN: 87 12581 58195 4

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com