



Philips Prestigo
Universal remote control

8 in 1

PRESTIGO



SRU6008

Total control simplified

Full functionality with only the keys you need

It's time to put away all those remotes controls! The Prestigo SRU6008 controls up to 8 devices in one and presents the keys you need, easily accessible via the LCD screen. Setup your Prestigo via computer and enjoy your home entertainment.

Intuitive navigation

- Easy access to specific functions via the 1.5" LCD screen
- Backlit buttons to control your devices in the dark

Fast, easy access to your entertainment

- Activities to control multiple devices

Simple and easy setup

- Control any device of almost any brand
- Software updates via internet
- Easy computer setup in a few simple steps, on Windows or Mac



PHILIPS

sense and simplicity



asimpleswitch.com



asimpleswitch.com

Highlights

Control virtually any device



The Prestigo infrared code database with over 300.000 devices allows you to control virtually every device on the market today, regardless of model or brand. Via the computer setup, the correct infrared code will be selected for your devices in the database.

3.8 cm (1.5") LCD screen



The remote features a 3.8 cm (1.5") (96 x 64 pixels) LCD display. Less frequently used buttons are available via the display, so you can add your own buttons or remove the ones you don't need.

Activity based control

Start your home entertainment activities with one touch of a button instead of controlling each individual device in separate steps. Simply press the activity button like 'Watch a movie' and the Prestigo will automatically switch on the different devices, such as the TV, DVD player and Home theater system, to watch a movie.

Future Proof




The Philips Configo software automatically informs you about online updates for your Prestigo. The Configo software will download the updates and take care of the installation.

Easy computer setup



Connect your Prestigo remote to your PC or Mac via USB for an easy computer setup in your language. Customize any functionality in a few simple steps.

Backlit keys

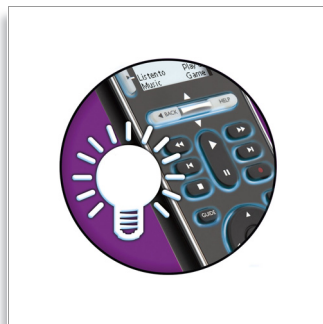

The illuminated keypad makes it easy to control all your devices, even in the dark.

Specifications

Accessories

- USB cable: 1.2 m

Convenience

- Backlight buttons
- Battery low indication
- Display Type: LCD
- Number of activities: 8
- Number of devices: 8
- On line updates: available
- On-Screen Display languages: Danish, Dutch, English, Finnish, French, German, Greek, Italian, Norwegian, Portuguese, Spanish, Swedish
- Supported devices: AMP, Audio system, Blu-ray player, CABLE, CD/MD, DVB-T/S, DVD, DVD recorder, DVD-VCR combo, DVDR-HDD combo, Digital Media Receiver, Game console, HD-DVD player, HTS, Hard Disk recorder, Home Theater, MP3 Player Dock, Minidisc, PC, Projector (IR), RECEIVER, SAT, TAPE, TV, TV-DVD combo, TV-VCR combo, TV-VCR-DVD combo, Tivo, Tuner, VCD, Laser Disk, VCR

Infrared Capabilities

- Learning IR codes
- Operating distance: 33 ft (10 m)

Power

- Batteries included

Setup

- Setup Method: PC Setup



Issue date 2013-02-22

Version: 3.1.9

12 NC: 8670 000 55803
UPC: 6 09585 17545 7

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com