

Total immersion in movies and music

Multi-channel Super Audio CD prepared

Thinking of transforming your DVD player, Recorder or even your VCR into a complete Home Entertainment System? Just match them up with this sleek and stylish digital receiver system and be fully immersed in movies and music experience in your own personal environment.

Superb audio performance

- Multi-channel Super Audio CD prepared - closest to experiencing the live performance
- 6-channel full digital Class D™ Amplifier
- Dolby Digital 5.1 and Dolby Pro Logic II
- Conical Dome Tweeters for a high frequency response

Quick, clean and easy set-up

- Color coded speaker connectors
- Digital coaxial and optical input
- 6 channel analog input

Connect and enjoy multiple sources in full surround mode

- DVD/SACD player
- TV
- Satellite tuner/set-top box
- Game console
- Built-in FM/MW tuner



PHILIPS

Technical specifications

Receiver functionality

- Rock, Digital, Jazz, Classic, Drama, Action, Concert
- Dolby Digital, Dolby Pro Logic II, DTS, MPEG multi-channel, Virtual surround

Tuner (radio)

- FM/MW digital tuning with 40 presets
- RDS - station name (/01 only)

Amplifier

- 6 x 100 watts RMS
- 600 watts Total Power

Loudspeaker boxes

- Magnetically shielded front and center
- 4 Two-way satellite speakers (L, R, SL, SR)
 - Frequency range : 150Hz - 20 kHz
 - Impedance : 3Ω
 - Drivers : 3" full-range woofer
1" conical dome tweeter
- Two-way center speakers
 - Frequency range : 150Hz - 20 kHz
 - Impedance : 3Ω
 - Drivers : 2 x 3" full-range woofer
1" conical dome tweeter
- Side firing subwoofer
 - Frequency range : 30Hz - 120Hz
 - Impedance : 3Ω
 - Drivers : 6.5" high efficiency woofer

Connections

- Audio input:
 - Analog : AUX, DVD 6 channel, TV-in (cinch)
 - Digital : 1x cinch, 1x optical
- Audio output:
 - Analog : Line-out (cinch)
 - Digital : 1x cinch
- Headphne : 3.5mm chrome plated
- Antenna : FM coaxial, MW loop
- Speakers : Color coded click-fit connectors

Audio performance

- Audio DAC : 24 bit, 192 kHz
- Signal to Noise ratio : >80 dB (A-WTD)
- Frequency response : 150Hz-20kHz

Power supply

- Power requirement : 110-127V/220-240V, 50-60Hz (/69)
220-240V, 50Hz (/01)
- Power consumption : approx. 180 W
- Standby power : <1W

General

- FTD
- 3 step Dim mode
- 45-key remote control

Product highlights

Multi-channel Super Audio CD prepared

- This new generation music format gives you:*
- Ultra high quality music reproduction
 - 5.1 multi-channel surround sound
 - Full backward and forward compatibility with CD

Class D™ Amplifier


A Class D™ Amplifier is a 'switching' amplifier that converts a low-level, analog, audio input signal into a high power, digital output for enhanced digital sound quality.

Dolby Pro Logic II

Dolby Pro Logic II provides five channels of surround processing from any stereo source.

Conical Dome Tweeter

Conical Dome Tweeter uses extremely light and stiff membrane created of LEXAN™, allowing fast vibrations, thus achieving a very high frequency response. This effect is further enhanced through the special cone shape of the membrane. All these result in stunningly clear and crisp highs, and an overall much more balanced sound perception.

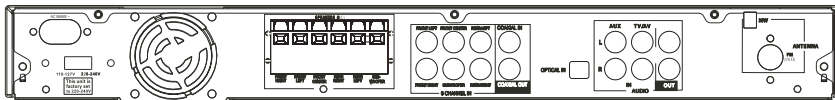

EAN 87 10895 80733 3 (/01)
EAN 87 10895 83251 9 (/69)

Dimensions (w x h x d):
435mm x 48mm x 350mm (Receiver unit)
93mm x 174mm x 65mm (Satellite speaker)
245mm x 93mm x 65mm (Center speaker)
156mm x 350mm x 350mm (Subwoofer)
572mm x 355mm x 524mm (Pack/carton)

Weight:
approx. 15.4 kg (Pack/carton)

Bundled equipment:
Receiver unit, 2x front satellite speakers, 1x center speaker, 2x surround satellite speakers, 1x subwoofer, speaker cables, audio cable (L/R), coaxial cable, AC power cable, FM/MW antenna, Remote Control, 2x AA batteries, User manual, Quick Use Guide

Date of issue 2004-2-18 **Preliminary**
Specifications are subject to change without notice
Trademarks owned by Royal Philips Electronics
2004 © Royal Philips Electronics - All rights reserved

www.philips.com

