

Philips
wireless portable speaker

Bluetooth®

Gesture control
Built-in microphone for calls
8W, rechargeable battery



SB7100



Big sound, shockingly clear

Get loud and personal with your music on the Philips Shoqbox SB7100, which is powered by twin speaker drivers and wOOx technology for big, deep, yet clear sound. Take your music everywhere with you and stream it wirelessly via Bluetooth.

Sound Performance

- Powered by 2 neodymium drivers
- Loud and clear sound
- Pair 2 shoqboxes into L-R speakers

Versatility

- Bluetooth streaming
- Swipe sensor to skip songs
- Built-in mic for speakerphone
- Voice prompt for feedback

Portability

- Play anytime, anywhere
- Built-in lithium battery

PHILIPS

Wireless portable speaker
Bluetooth® Gesture control, Built-in microphone for calls, 8W, rechargeable battery

SB7100/05

Highlights

Powered by 2 neodymium drivers



It is built with 2 neodymium speaker drivers and wOOx system; simply the great sound you could ever expect from a speaker that small. Big sound, shocking clarity and deep bass to allow you to enjoy the best sound performance anywhere.

Bluetooth portable speakers

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to other Bluetooth devices, so you can play your favourite music from any smartphones, tablets or even laptops including iPod or iPhone on Bluetooth-enabled speaker easily.

Motion sensor



SHOQBOX is equipped with a motion sensor. Simply swipe over the sensor from left to right or right to left, to skip to the next or last track. Put your hand over the sensor for a second to pause the music. Do it again to put it back on. Easy gesture control allows you to control your music the simplest way.

Built-in mic




With its built-in microphone, it also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or call your friend from a party. Either way, it works great.

Voice prompt



The voice prompt is available in different languages. It gives instant feedback on battery level or alert whether the speaker is connected properly to your device.

Pairing 2 shoqboxes

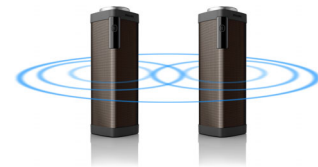

You can pair 2 SHOQBOX speakers with the smart sensor for a stereo system of Left and Right channels. Simply place the two speakers side by side and swipe your hands over both sensors from outside simultaneously. Perfect for a party or gathering. Enjoy big stereo sound from music, movies and games.

Specifications

Compatibility

- works with: most Bluetooth smartphones, tablets, music devices
- iPad: iPad 1, iPad 2, new iPad
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S
- iPod touch: 3rd generation or later
- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other music devices: with Bluetooth 2.1 or above

Convenience

- Smart sensor: for skipping songs and pairing 2 Shogboxes into L-R speaker
- Voice feedback: on battery level

Connectivity

- Audio Connections: 3.5 mm Line in
- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 10 m or 30 ft

Sound

- Output power (RMS): 2 x 4 W

- Sound System: Stereo
- Speakers: 2 x 1"

Loudspeakers

- Loudspeaker enhancement: wOOx Bass Radiator
- Speaker drivers: Neodymium magnet system

Power

- Power supply: 100-240 VAC, 50/60 Hz
- Battery type: lithium (built-in)
- Operating time on battery: 8 hr

Accessories

- Included accessories: AC Power Cord, USB cable for PC charging, Warranty certificate, World Wide Warranty leaflet, Quick install guide

Dimensions

- Product dimensions (WxDxH): 62 x 62 x 180 mm
- Packaging dimensions (WxDxH): 133 x 100 x 200 mm
- Product weight: 0.413 kg
- Weight incl. Packaging: 0.882 kg



Issue date 2014-07-18

Version: 7.0.9

12 NC: 8670 000 90762
EAN: 87 12581 64679 0

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Battery life varies by use and settings.