



Philips  
wireless portable speaker

### Bluetooth

Rechargeable battery  
2 W



BT2000A

## Stretch the speaker in sound and size

Bring music to your adventures with a compact, rugged and easily carried speaker that can be strapped to any bag. Anti-clip technology gives better sound for its size. When you want more, just pull it open. Music lasts for half a day.

#### Impressive sound

- Advanced audio performance with a slim design
- Pull out the speaker for better-quality sound
- Anti-clipping function for loud, distortion-free music

#### Simplicity in use

- Wireless music streaming via Bluetooth
- Audio-in for easy connection to almost any electronic device

#### Designed for grab and go

- Built-in rechargeable battery for music playback anywhere
- Up to 12 hours music playtime
- Carry it anywhere with the included finely knitted strip

#### Go green with me

- Certified Green Product: Strong commitment to sustainability




# PHILIPS

wireless portable speaker  
Bluetooth Rechargeable battery, 2 W


# Highlights

## Wireless music streaming

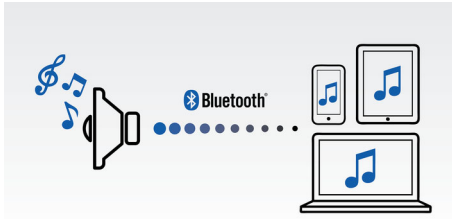


Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

## Pull out the speaker

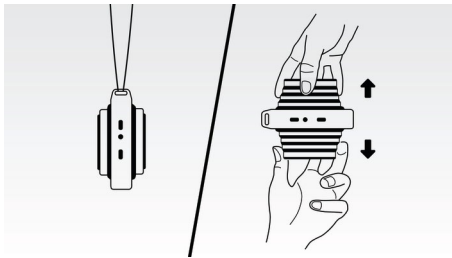


This expandable speaker can be shrunk down for music on the go or opened up for better quality sound, simply grab it at the top and bottom and pull.

## Anti-clipping function

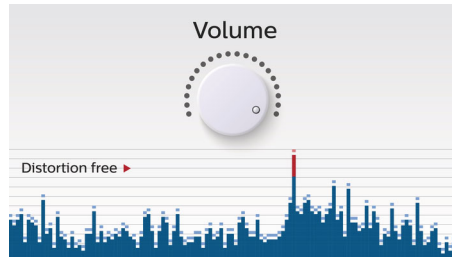

Anti-Clipping lets you play music louder and keeps the quality high, even when the battery is low. It accepts a range of input signals from 300 mV to 1000 mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, but anti-clipping reduces peaks caused by low battery, keeping music distortion-free.

## Up to 12 hours music playtime

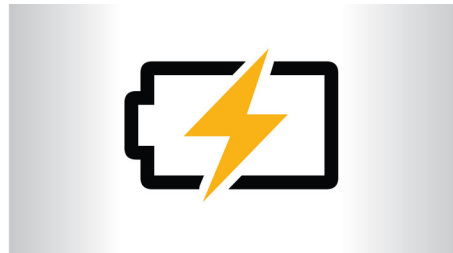

Play your music loud any time, anywhere with a built-in rechargeable battery that lasts for up to 12 hours. Listen to all your music without the fuss of tangled power cords and the

BT2000A/00

inconvenience of looking for electrical outlets, giving you total freedom of movement and a half-day of musical entertainment.

## including finely knitted strip

In line with the Philips CitiScape Strada's headband series, which was inspired by fashionable sneakers and their vividly coloured shoe laces, our by-packed strip is made of a vibrant and finely knitted fabric sleeve making it stylish enough to be a fashion accessory.

## Audio-in



Audio-in for easy connection to almost any electronic device

## Certified Green Product

Philips awards its 'Green' logo only to its most environmentally friendly products, so you can be rest assured that you are making the right environmental choice. Certification as a Green product means the product is highly energy efficient, uses sustainable packaging (>80% recycled cardboard content, FSC®-certified printed matter and PVC-free packaging), reduces the use of hazardous materials (PVC/BFR free plastic housing) and is easier to recycle.



# Specifications

## Compatibility

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S
- iPod touch: 3rd generation or later
- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- work with: Bluetooth 4.0 or below
- other Bluetooth-enabled device

## Connectivity

- Bluetooth profiles: A2DP, AVRCP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)

## Sound

- Output power (RMS): 2 W
- Sound System: Mono

## Loudspeakers

- Speaker driver: 1 x 1.75"

## Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: 12 hr

## Accessories

- Included accessories: carrying strap, USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

## Dimensions

- Product dimensions (WxDxH): 99 x 93 x 77 mm
- Packaging dimensions (WxDxH): 113 x 60 x 135 mm
- Product weight: 0.157 kg
- Weight incl. Packaging: 0.245 kg



Issue date 2020-07-09

Version: 3.0.4

12 NC: 8670 001 17921  
EAN: 04 89518 56023 01

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)