




Philips  
Portable DVD Player

17.8 cm (7") LCD

PET742

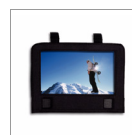

## Longer movies enjoyment on the go

Enjoy your movies anytime, anyplace! The PET742 portable DVD player features 7" TFT LCD swivel screen for your great viewing experience. You can indulge in up to 5 hours of DVD/DivX®/MPEG movies, MP3-CD/CD music and JPEG photos on the go.

### Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard playback of DivX videos
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

### Enrich your AV entertainment experience

- 7" swivel color LCD panel for improved viewing flexibility
- Enjoy movies in 16:9 widescreen format
- Built-in stereo speakers

### Extra touches for your convenience

- Up to 5-hour playback with a built-in battery\*
- AC adaptor, car adaptor and AV cable included
- Car mount pouch included for easy in-car use



asimpleswitch.com

**PHILIPS**  
sense and simplicity

# Highlights

## 5-hour built-in battery\*

This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 5 hours of continuous movie, photo and music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

## MP3-CD, CD and CD-RW playback

MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

## Car mount pouch

Mount your portable DVD player easily to your car headrest. You can enjoy DVD movies on the road.

## 18cm/7" swivel color LCD panel

7" swivel color LCD panel for improved viewing flexibility

## DivX Certified

With DivX® support, you are able to enjoy DivX® encoded videos. The DivX media format is an MPEG4-based video compression technology that enables you to save large files

like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs.

## Enjoy 16:9 widescreen movies

Display and share your movies and digital photos with your friends and family. The 16:9 widescreen aspect ratio is standard for universal to high-definition digital television. A native 16:9 aspect ratio means video display without bars at top and bottom of the picture and without the quality loss than comes from scaling, altering an image to fit on a different screen size.



# Specifications

## Picture/Display

- Diagonal screen size (inch): 7 inch
- Resolution: 480(w)x234(H)x3(RGB)
- Display screen type: LCD TFT
- Brightness: 120 cd/m<sup>2</sup>
- Contrast ratio (typical): 200:1
- LCD panel type: Anti-glare polarizer
- Effective viewing area: 154.1x86.6mm
- Response time (typical): 30 ms

## Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(line out), >76dB(earphone), >62dB(built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Zoom
- Video disc playback system: PAL, NTSC
- Compression formats: Divx, MPEG4

## Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9V, 1A
- Headphone jack: 3.5mm Stereo Headphone x 1
- AV output: Composite (CVBS) x1

## Convenience

- Battery charging indication
- Shock proof

## Accessories

- AC/DC Adaptor: DC 9V, 1A, 110-240v, 50/60Hz
- Cables: 1 x AV Cables
- Remote control: AY5521 slim remote
- User Manual: English
- Car kit: cigarette outlet adaptor, 12vDC
- Pouch

## Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 5 hrs\*

## Dimensions

- Master carton dimensions: 225 x 270 x 245 mm
- Master carton quantity: 3
- Master carton weight: 3.9 kg
- Packaging dimensions (W x H x D): 233 x 251 x 70 mm
- Product dimensions (W x H x D): 195 x 39 x 153 mm
- Packaging type: D-box
- Product weight: 0.77 kg



Issue date 2013-01-31

Version: 4.1.3

12 NC: 8670 000 50499  
EAN: 87 12581 46955 9

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

\* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

\* Battery life varies by use and settings.

\* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.