




Philips
Mini Hi-Fi System

• 550 W

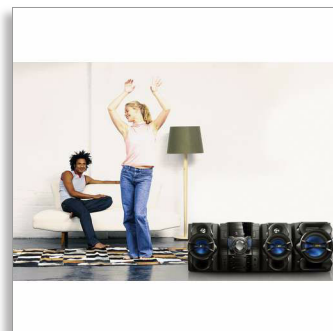

FWM6000

Powerful, clear and magnificent sound

with this sound system

The FWM6000/10 Hi-Fi system pumps up the power in music with 550 W RMS and 7500 W PMPO power output. A subwoofer delivers rich bass notes, while UniSound offers clear and natural sound. Enjoy music from USB devices and portable music players.

Powerful sound you can hear and feel

- Subwoofer for powerful bass
- MAX Sound for instant power boost
- Dual amplifier for better sound performance
- UniSound for natural and crystal-clear sound
- 500 W RMS power delivers great sound for movies and music

Multiple source MP3 music

- Enjoy MP3 music directly from your portable USB devices
- MP3 Link for portable music playback
- Compatible with MP3-CD
- Rip music from CDs, radio and karaoke onto USB device

Convenient and easy to use

- 3-disc changer for convenient multi-disc playback
- Digital tuning with preset stations for extra convenience
- Connection for TV or DVD player

PHILIPS

Highlights

MAX Sound



MAX Sound technology produces an instant boost in the bass, maximising volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting the bass and volume to maximum levels, without distortion. The end result is a noticeable amplification of both sound spectrum and volume and a powerful audio boost that will add mileage to any music.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your


favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

3-disc changer



With a three-disc changer for music playback, you can choose between three different CDs inside the device at any one time. This convenient feature allows you to savour a variety of music while saving you precious time spent changing CDs frequently.


UniSound

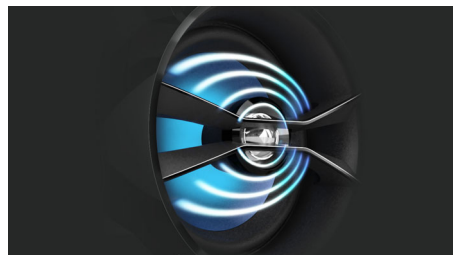

Get ready for music that is undeniably clearer and more natural. The UniSound technology

harnesses acoustic design and engineering expertise to deliver sound the way it was meant to be heard. In conventional speakers, the tweeter and woofer deliver sound from different locations. This creates strong interferences that distort sound, resulting in unnatural, flat and stifled audio. UniSound frees music by placing the tweeter and woofer in unique positions and incorporating rigorous crossover engineering, vastly reducing interference and delivering natural sound that is true to the original.

Rip music onto USB device

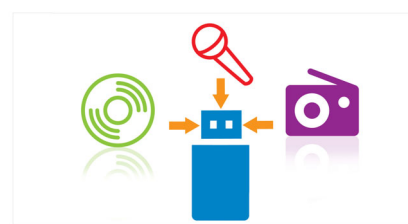

Rip music from CDs, radio and karaoke onto USB device

Specifications

Sound

- Total Sound Power (RMS): 500 W
- Sound enhancement: MAX sound, Dynamic Bass Boost 3 steps, incredible surround, digital sound control 4 modes, virtual ambience control, UniSound

Loudspeakers

- Number of speaker boxes: 3
- Speaker drivers: 2 x 6.5" woofer, 2" tweeter, 3-way
- Subwoofer types: 8" woofer, passive
- Speaker types: bass reflex speaker system

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: repeat/one/all/programme, repeat/shuffle/programme
- USB Direct playback modes: fast reverse/fast forward, play/pause, previous/next, repeat, shuffle, stop

Tuner/Reception/Transmission

- Station presets: 40
- Tuner bands: MW, FM
- Antenna: FM antenna, MW antenna
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug and play)

Connectivity

- USB: USB host
- MP3 Link: 3.5 mm stereo line in
- Microphone: Microphone socket
- PC in (Aux in): 2 x RCA (Audio)

Convenience

- Alarms: CD alarm, USB alarm, radio alarm
- Number of discs: 3

- Loader type: 3 CD carousel
- Clock: on main display, sleep timer
- Display type: LCD display
- Karaoke: MIC volume, echo control

Accessories

- Remote control: 28-key with 2 x AAA batteries
- Cables/Connection: MP3 Link cable
- Others: batteries for remote control, FM/MW antenna, Quick start guide
- User Manual: B-Portuguese, Spanish
- Warranty: Worldwide Guarantee booklet

Dimensions

- Gross weight: 25 kg
- Main speaker dimensions (W x D): 200 x 314 mm
- Main speaker height: 320 mm
- Subwoofer width: 250 mm
- Subwoofer depth: 465 mm
- Subwoofer height: 330 mm
- Main unit width: 265 mm
- Main unit depth: 380 mm
- Main unit height: 322 mm
- Packaging width: 1030 mm
- Packaging depth: 553 mm
- Packaging height: 413 mm

Power

- Power supply: 100 - 240 V AC, 50/60 Hz

Audio recording

- USB recording modes: instant record, programmed tracks, schedule radio programme, single disc, single track
- USB recording sources: AUX, CD, microphone in, tuner, USB



Issue date 2013-05-31

Version: 1.0.5

12 NC: 8670 000 91389
EAN: 87 12581 64908 1

© 2013 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Avoid extensive use of the set at a volume higher than 85 decibels
because this may damage your hearing.